

# HONDA

## OWNER'S MANUAL

READ THIS MANUAL CAREFULLY.  
IT CONTAINS IMPORTANT SAFETY INFORMATION.

# 01


**TRX350TE  
FOURTRAX  
350 ES**

MINIMUM RECOMMENDED OPERATOR AGE: 16



**2001  
TRX 350TE**

**HONDA FOURTRAX 350 ES  
OWNER'S MANUAL**

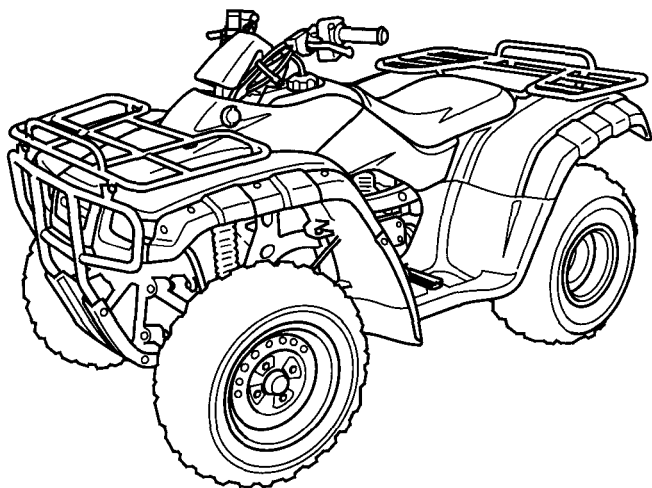

**FOR OFF-ROAD USE ONLY**

This vehicle is designed and manufactured for off-road use only.

USA only:

It conforms to US EPA Noise Emission regulations, but does not conform to Federal Motor Vehicle Safety Standards or US EPA Exhaust Emission regulations, and operation on public streets, roads, or highways is illegal. The vehicle is equipped with a USDA qualified spark arrester. Obey local laws and regulations.

It conforms to California exhaust emission regulations for ATVs.

## PREFACE

Thank you for buying a Honda FOURTRAX. Honda takes pride in a worldwide reputation for quality—in research, design, production and service. Quality is the hallmark of all Honda products and one reason why Honda is the leading manufacturer of ATVs.

Help assure your FOURTRAX's future reliability and performance by paying extra attention to how you ride during the first operating day or 15 miles (25 km). During this period, avoid full-throttle starts and rapid acceleration.

For replacement parts and accessories, we recommend genuine Honda products. They've been specially designed for your vehicle and manufactured to meet Honda's demanding standards.

This manual contains a Maintenance Schedule and information on basic maintenance procedures. If you have the required skills and tools, your Honda dealer can supply you with an Official Honda Service Manual to help you perform more advanced maintenance and repairs. When you need service, remember that your Honda dealer knows your vehicle best and is interested in your complete satisfaction.

We wish you many years of safe and enjoyable riding.

While reading this manual, remember:

### **▲WARNING**

**Indicates a strong possibility that serious injury or death may result if instructions are not followed.**

All information in this publication is based on the latest product information available at the time of approval for printing. Honda Motor Co., Ltd. reserves the right to make changes at any time without notice and without incurring any obligation.

© Honda Motor Co., Ltd. 2000. No part of this publication may be reproduced without written permission from Honda Motor Co., Ltd.

# CONTENTS

	Page
FOURTRAX SAFETY .....	1
Special Safety Messages .....	1
Warning Information.....	6
PARTS LOCATION AND OPERATION .....	10
Parts Location .....	10
Parts Operation.....	14
Power Controls .....	14
Lights.....	21
Gearshift Controls.....	31
Brake Controls.....	33
Fuel Tank Controls .....	34
Engine Oil .....	37
Additional Features .....	38
RIDING YOUR FOURTRAX .....	44
Before Riding .....	44
Rider Preparation.....	44
Vehicle Preparation .....	46
Safe Riding Rules.....	54
Riding .....	66
Starting the Engine .....	67
Shifting Gears .....	71
Riding in Reverse .....	76
Making Turns .....	78
Riding Up Hills .....	81
Riding Down Hills .....	88
Crossing Slopes.....	90
Making Turns on Slopes.....	91
Riding Over Obstacles .....	92
Riding Through Water .....	93
Parking.....	94

(cont'd)

# CONTENTS

	Page
MAINTENANCE AND REPAIRS .....	95
Emission Requirements .....	95
Maintenance Schedule .....	96
Maintenance Precautions .....	98
Tool Kit .....	99
Fuel System .....	100
Lubrication .....	112
Engine .....	118
Clutch .....	120
Electrical System .....	122
Brakes .....	129
Wheels and Tires .....	139
Seat Removal .....	144
Engine Guard and Skid Plates .....	145
Spark Arrester .....	146
TRANSPORTING YOUR FOURTRAX .....	148
CLEANING YOUR FOURTRAX .....	151
STORING YOUR FOURTRAX .....	153
SPECIFICATIONS .....	156
WIRING DIAGRAM .....	158
CONSUMER INFORMATION .....	159
WARRANTY SERVICE .....	161
SERIAL NUMBERS AND COLOR LABEL .....	162
INDEX .....	163
AUTHORIZED MANUALS .....	169

## FOURTRAX SAFETY

### SPECIAL SAFETY MESSAGES

#### AN ATV IS NOT A TOY AND CAN BE HAZARDOUS TO OPERATE.

An ATV handles differently from other vehicles including motorcycles and cars. A collision or rollover can occur quickly, even during routine maneuvers such as turning and driving on hills or over obstacles, if you fail to take proper precautions.

SEVERE INJURY OR DEATH can result if you do not follow these instructions:

- \* Read this manual and all labels carefully and follow the operating procedures described.
- \* Never operate an ATV without proper instruction.  
Take a training course. Beginners should receive training from a certified instructor. Contact an authorized ATV dealer or call 1-800-887-2887 (USA only) to find out about the training courses nearest you.
- \* Always follow this age recommendation: A child under 16 years old should never operate an ATV with engine size greater than 90 cc.
- \* Never allow a child under age 16 to operate an ATV without adult supervision, and never allow continued use of an ATV by a child if he or she does not have the abilities to operate it safely.

- \* Never carry a passenger on an ATV.
- \* Never operate an ATV on any paved surfaces, including sidewalks, driveways, parking lots and streets.
- \* Never operate an ATV on any public street, road or highway, even a dirt or gravel one.
- \* Never operate an ATV without wearing an approved motorcycle helmet that fits properly. You should also wear eye protection (goggles or face shield), gloves, boots, long-sleeved shirt or jacket, and long pants.
- \* Never consume alcohol or drugs before or while operating this ATV.
- \* Never operate at excessive speeds. Always go at a speed that is proper for the terrain, visibility, operating conditions, and your experience.
- \* *Never attempt wheelies, jumps, or other stunts.*
- \* Always inspect your ATV each time you use it to make sure it is in safe operating condition. Always follow the inspection and maintenance procedures and schedules described in this manual.
- \* Always keep both hands on the handlebars and both feet on the footpegs of the ATV during operation.

- \* Always go slowly and be extra careful when operating on unfamiliar terrain. Always be alert to changing terrain conditions when operating the ATV.
- \* Never operate on excessively rough, slippery or loose terrain until you have learned and practiced the skills necessary to control the ATV on such terrain. Always be especially cautious on these kinds of terrain.
- \* Always follow proper procedures for turning as described in this manual. Practice turning at low speeds before attempting to turn at faster speeds. Do not turn at excessive speed.
- \* Never operate the ATV on hills too steep for the ATV or for your abilities. Practice on smaller hills before attempting larger hills.
- \* Always follow proper procedures for climbing hills as described in this manual. Check the terrain carefully before you start up any hill. Never climb hills with excessively slippery or loose surfaces. Shift your weight forward. Never open the throttle suddenly or make sudden gear changes. Never go over the top of any hill at high speed.
- \* Always follow proper procedures for going down hills and for braking on hills as described in this manual. Check the terrain carefully before you start down any hill. Shift your weight backward. Never go down a hill at high speed. Avoid going down a hill at an angle that would cause the vehicle to lean sharply to one side. Go straight down the hill where possible.



- \* Always follow proper procedures for crossing the side of a hill as described in this manual. Avoid hills with excessively slippery or loose surfaces. Shift your weight to the uphill side of the ATV. Never attempt to turn the ATV around on any hill until you have mastered the turning technique described in this manual on level ground. Avoid crossing the side of a steep hill if possible.
- \* Always use proper procedures if you stall or roll backwards when climbing a hill. To avoid stalling, use the proper gear and maintain a steady speed when climbing a hill. If you stall or roll backwards, follow the special procedure for braking described in this manual. Dismount and follow the procedures provided in this manual.
- \* Always check for obstacles before operating in a new area. Never attempt to operate over large obstacles, such as large rocks or fallen trees. Always follow proper procedures when operating over obstacles as described in this manual.
- \* Always be careful when skidding or sliding. Learn to safely control skidding or sliding by practicing at low speeds and on level, smooth terrain. On extremely slippery surfaces, such as ice, go slowly and be very cautious in order to reduce the chance of skidding out of control.

- \* Never operate an ATV in fast flowing water or in water deeper than that specified in this manual. Remember that wet brakes may have reduced stopping ability. Test your brakes after leaving water. If necessary, apply them several times to let friction dry out the linings.
- \* Always be sure there are no obstacles or people behind you when you operate in reverse. When it is safe to proceed in reverse, go slowly.
- \* Always use the size and type tires specified in this manual. Always maintain proper tire pressure as described in this manual.
- \* Never modify an ATV through improper installation or use of accessories.
- \* Never exceed the stated load limits for an ATV. Cargo should be properly distributed and securely attached. Reduce speed and follow instructions in this manual for carrying cargo or pulling a trailer. Allow greater distance for braking.

**FOR MORE INFORMATION ABOUT ATV SAFETY**, call the Consumer Product Safety Commission at 1-800-638-2772, or the ATV Distributors' Safety Hotline at 1-800-852-5344 (USA only).

California Proposition 65 Warning




**WARNING:** This product contains or emits chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

## **WARNING INFORMATION**

Your FOURTRAX comes with a hang tag (USA only) and several labels containing important safety information. Anyone who rides the vehicle should read and understand this information before riding.

The labels should be considered as permanent parts of the vehicle. If a label comes off or becomes hard to read, contact your Honda dealer for replacements.

USA only

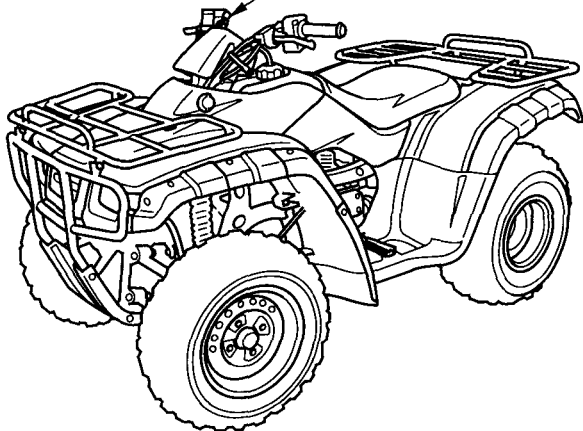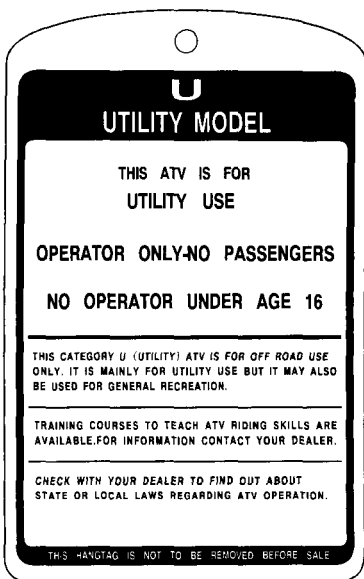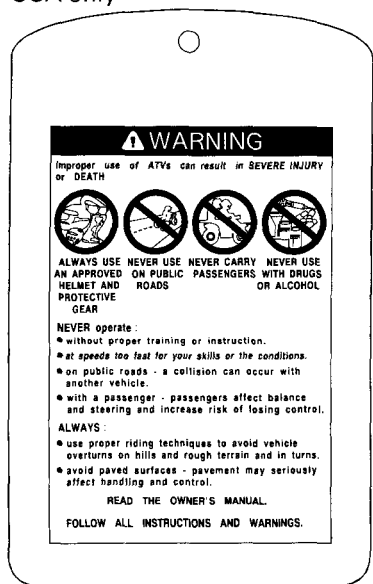


## WARNING



**NEVER** ride as a passenger.

Passengers can cause a loss of control, resulting in **SEVERE INJURY** or **DEATH**.

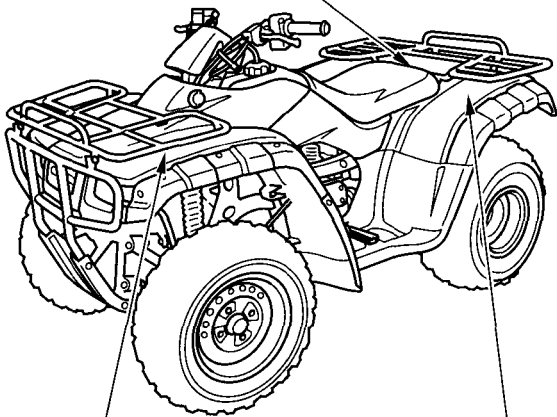

## WARNING

Overloading this ATV or carrying cargo improperly can change handling, stability and braking performance and can lead to an accident.

Never exceed the maximum front cargo limit of: **66lbs (30kg)**.

Refer to instructions in the Owner's Manual.

## WARNING

Improper tire pressure or overloading can cause loss of control. Loss of control can result in severe injury or death.

- Cold tire pressure ;  
Front :  $20 \pm 3 \text{ kpa}$   $0.20 \pm 0.03 \text{ kgf/cm}^2$   $2.8 \pm 0.4 \text{ psi}$   
Rear :  $20 \pm 3 \text{ kpa}$   $0.20 \pm 0.03 \text{ kgf/cm}^2$   $2.8 \pm 0.4 \text{ psi}$
- Maximum weight capacity ; 210kg 463lbs.

## ⚠ WARNING



Operating this ATV if you are under the age of 16 increases your chance of severe injury or death.


**NEVER** operate this ATV if you are under age 16.

## ⚠ WARNING

Overloading this ATV or carrying cargo improperly can change handling, stability and braking performance and can lead to an accident.

Never exceed the maximum rear cargo limit (combined weight on the rear rack and in the storage area) of: **133lbs (60kg)**.

Refer to instructions in the Owner's Manual.

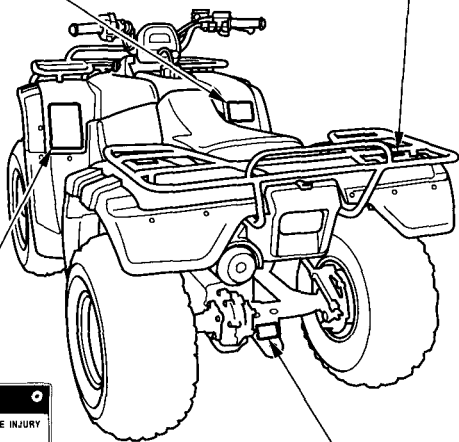

## ⚠ WARNING

Improper use of ATVs can result in SEVERE INJURY or DEATH



**ALWAYS USE** AN APPROVED HELMET AND PROTECTIVE GEAR  
**NEVER USE** ON PUBLIC ROADS  
**NEVER CARRY** PASSENGERS WITH DRUGS OR ALCOHOL  
**NEVER USE** WITH DRUGS OR ALCOHOL

**NEVER operate:**

- without proper training or instruction.
- at speeds too fast for your skills or the conditions.
- on public roads - a collision can occur with another vehicle.
- with a passenger - passengers affect balance and steering and increase risk of losing control.

**ALWAYS:**

- use proper riding techniques to avoid vehicle overturns on hills and rough terrain and in turns
- avoid paved surfaces - pavement may seriously affect handling and control.

**READ THE OWNER'S MANUAL.**

**FOLLOW ALL INSTRUCTIONS AND WARNINGS.**

## ⚠ WARNING

*Towing an improperly loaded trailer can cause loss of control.*

- Read owner's manual.
- Tow weight limit : **3776N (385kgf) 850lbs**
- Tongue weight : **137N (14kgf) 30lbs**

## PARTS LOCATION AND OPERATION

### PARTS LOCATION

- (1) Rear brake lever  
Parking brake
- (2) Headlight switch  
Engine stop switch  
Headlight dimmer switch  
Starter button  
Upshift switch  
Downshift switch
- (3) Reverse selector knob
- (4) Choke knob
- (5) Fuel gauge
- (6) Ignition switch
- (7) Throttle lever
- (8) Front brake lever

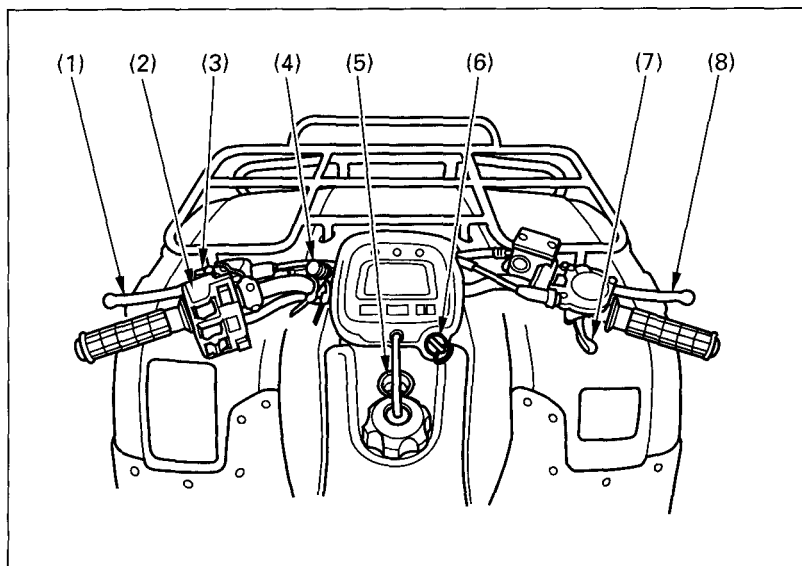


Fig. 2-1

Handlebars, from rider's point of view

- (9) Reverse indicator
- (10) Neutral indicator
- (11) Oil high temperature indicator
- (12) Multi-function display
  - Speedometer
  - Gear position indicator
  - Odometer/Tripmeter
  - Digital clock/Hourmeter
- (13) Minute select button
- (14) Hour select button
- (15) Hourmeter/Digital clock select button
- (16) Odometer/Tripmeter select button

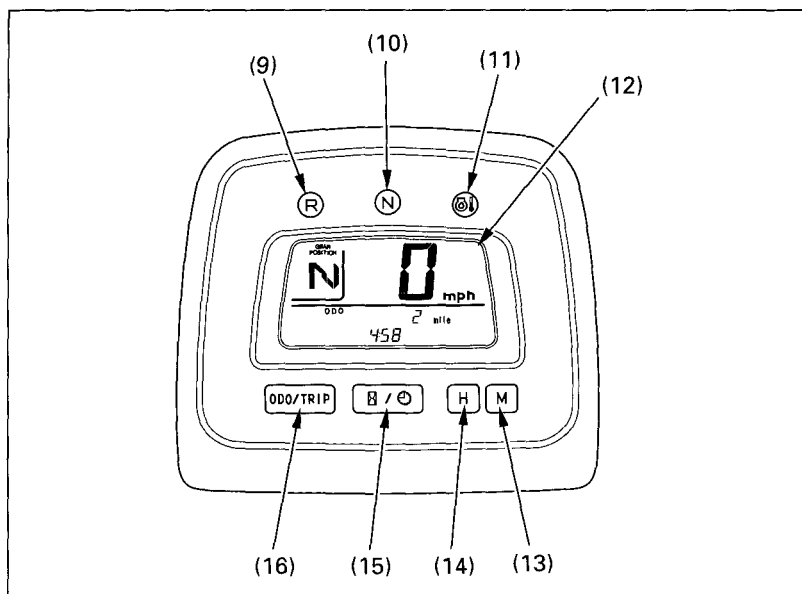


Fig. 2-2 Indicators and multi-function display, from rider's point of view



- (17) Flag pole bracket
- (18) Rear cargo rack
- (19) Seat lock lever
- (20) Fuel fill cap
- (21) Front brake fluid reservoir
- (22) Helmet holder
- (23) Front cargo rack
- (24) Recoil starter (behind the recoil starter cover)
- (25) Right footpeg
- (26) Rear brake pedal
- (27) Dipstick
- (28) Headlights

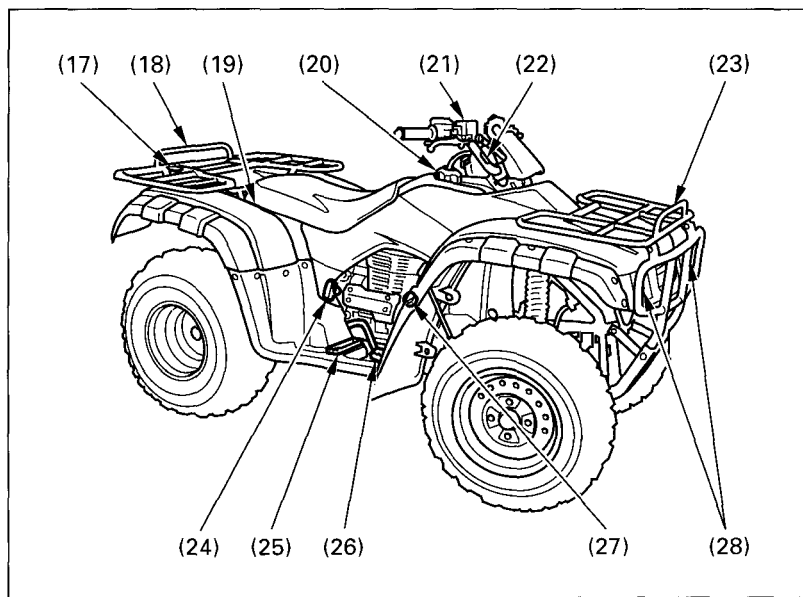


Fig. 2-3

Right side of FOURTRAX

- (29) Accessory socket
- (30) Fuel valve
- (31) Starting primer knob
- (32) Storage compartment, containing:
  - Tool kit
  - Air pressure gauge
  - Owner's Manual
  - Gear change tool
- (33) Oil filler cap
- (34) Left footpeg
- (35) Trailer hitch

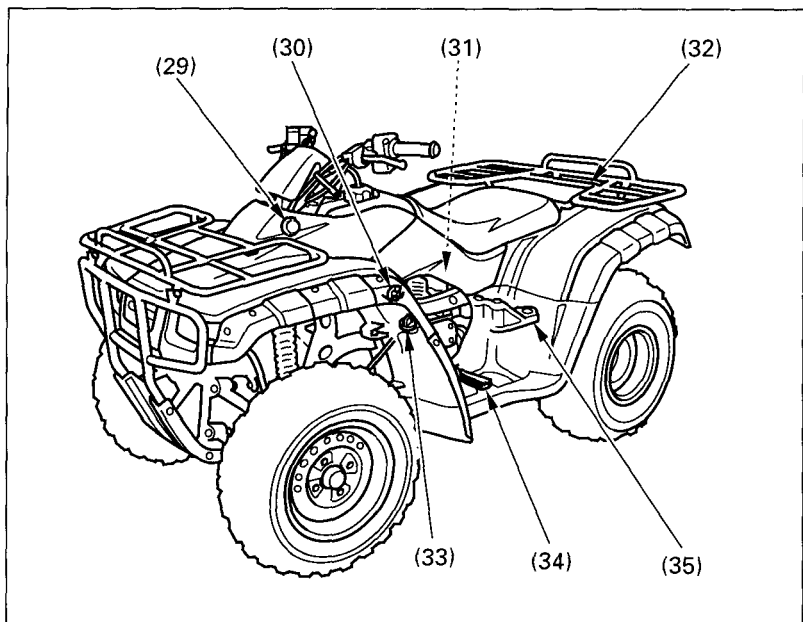


Fig. 2-4

Left side of FOURTRAX

## PARTS OPERATION

### POWER CONTROLS

#### Ignition Switch

The ignition switch (Fig. 2-5) is in the center of the handlebars directly in front of the seat.

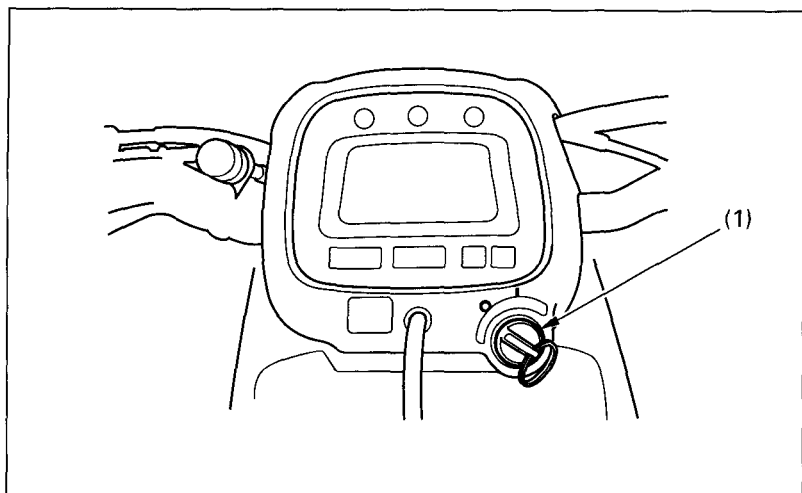





Fig. 2-5

(1) Ignition switch



Key Position	Function	Key Removal
OFF ( ○ )	The engine and headlight cannot be operated.	The key can be removed.
ON (   )	The headlights can be turned on.  With the engine stop switch at RUN ( ○ ) and the transmission in neutral, the engine can be started.	The key cannot be removed.

## Engine Stop Switch

The engine stop switch (Fig. 2-6 ) is next to the left handgrip, and it has three positions. When the switch is in the RUN (  ) position, the engine will operate. When the switch is in either OFF (  ) position, the engine will not operate.

This switch is intended primarily as a safety or emergency control, and it should normally remain in the RUN (  ) position.

### NOTE:

If you stop your FOURTRAX by turning the engine stop switch OFF (  ), be sure to turn the ignition switch OFF (  ) to prevent battery discharge.

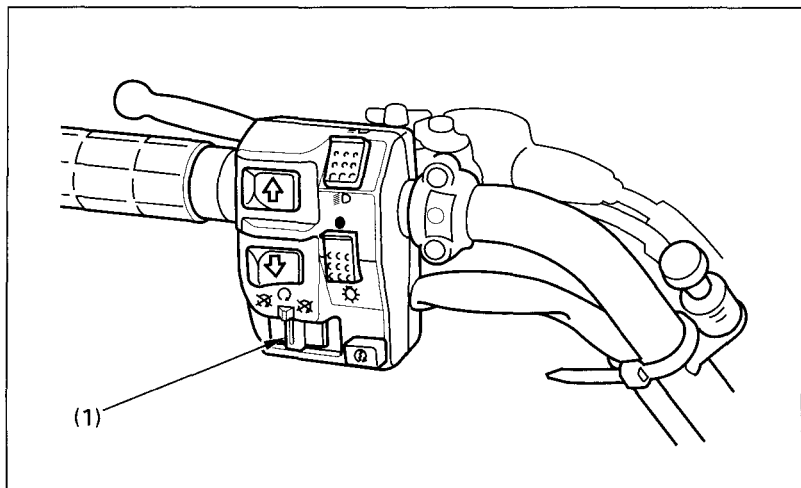


Fig. 2-6

(1) Engine stop switch

## Choke Knob

The choke knob (Fig. 2-7 ) is located on the left side of the handlebar. The choke has two positions: fully ON (A), and fully OFF (B).

To start a cold engine when air temperature is  $-15-35^{\circ}\text{C}$  ( $5-95^{\circ}\text{F}$ ), pull the choke knob up to the Fully ON position before pressing the starter button. After the engine is warm, push the choke knob to the fully OFF position.

### CAUTION:

- \* **Extended use of the choke may impair piston and cylinder wall lubrication and shorten the life of the engine.**
- \* **Pushing the choke knob too hard to the OFF position may dislodge the choke cable boot. If this happens, water and dirt may enter the choke cable and cause corrosion. If the choke is hard to actuate, or feels like it is sticking, check the cable boot.**

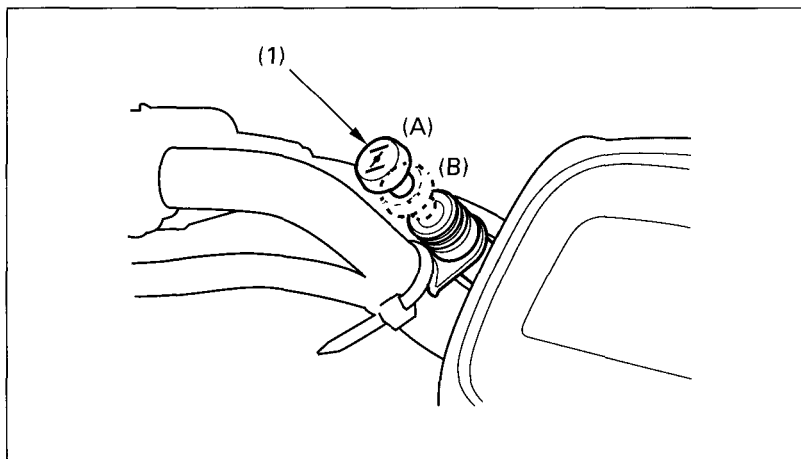


Fig. 2-7

(1) Choke knob

(A) Fully ON

(B) Fully OFF

## Starter Button

The starter button (Fig. 2-8 ) is below the headlight switch (2). To start the engine, press the starter button (1), with the transmission in neutral, the ignition switch ON ( I ) and the engine stop switch (3) at RUN ( O ).

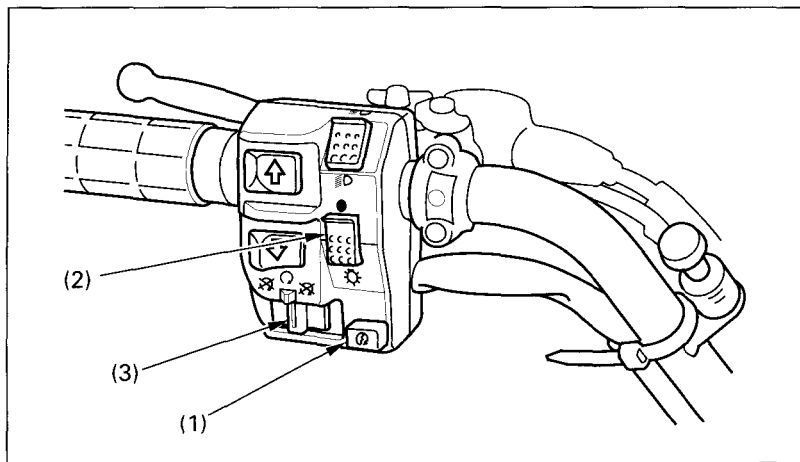


Fig. 2-8

(1) Starter button  
(2) Headlight switch

(3) Engine stop switch

### Starting Primer Knob

The starting primer knob (Fig. 2-9 ) is on the carburetor float bowl on the left side of the FOURTRAX. To start the engine when air temperature is below  $-15^{\circ}\text{C}$  ( $5^{\circ}\text{F}$ ), push the knob in two or three times before pressing the starter button.

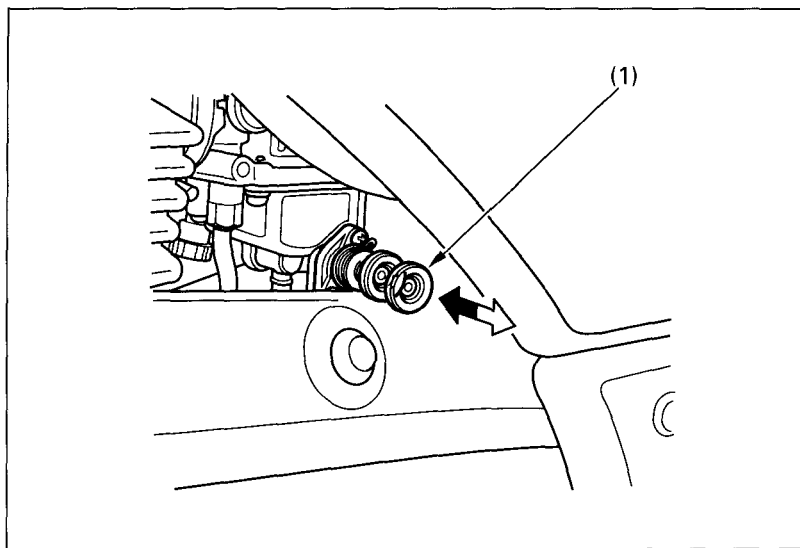


Fig. 2-9

(1) Starting primer knob

## Recoil Starter

The recoil starter (Fig. 2-10) is on the right side of the FOURTRAX. It is used to start the engine when the battery is low.

To operate the recoil starter:

1. Unsnap and remove the recoil starter cover (2).
2. Grasp the starter grip (1) firmly, then pull it out slowly approximately 4 in (100 mm).
3. Pull the grip up briskly and fully.
4. After the engine starts, allow the starter grip to return slowly.

If the starter grip does not return smoothly (because of dirt in the assembly), see your Honda dealer.

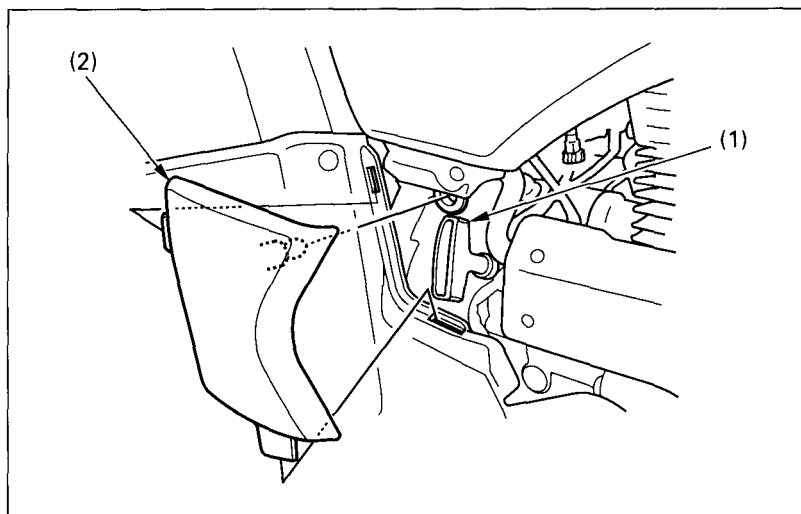


Fig. 2-10 (1) Recoil starter grip

(2) Recoil starter cover



### Throttle Lever

The throttle lever (Fig. 2-11) is next to the right handgrip, and it is operated by the thumb. Pressing the lever opens the throttle. When pressure is released, spring tension automatically closes the throttle.

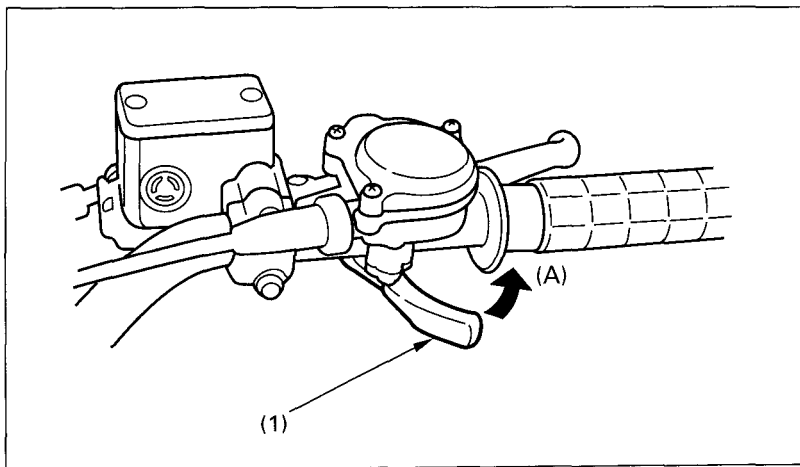


Fig. 2-11 (1) Throttle lever

(A) To open the throttle

## LIGHTS

### Headlight and Dimmer Switches

The headlight and dimmer switches (Fig. 2-12) are above the starter button, next to the gearshift switches.

Turning the headlight switch (1) ON ( ☼ ) turns the headlight on. Use the dimmer switch (2) to select either high beam HI ( ≡ D ) or low beam LO ( ≡ D ) for the headlights.

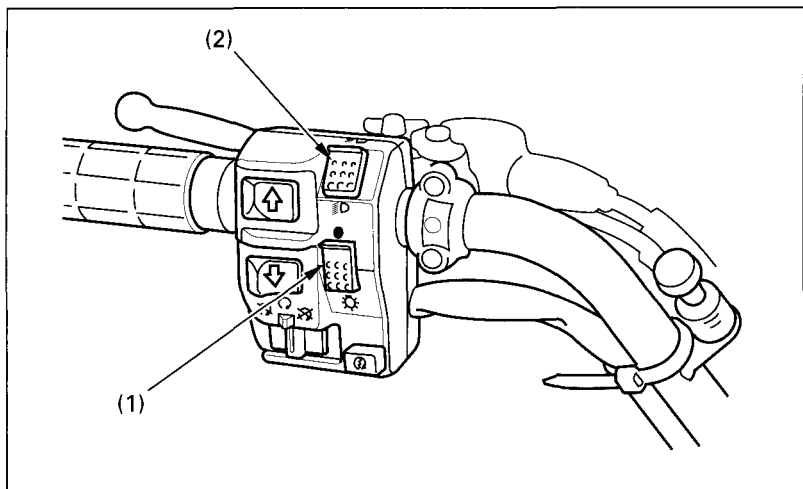


Fig. 2-12 (1) Headlight switch

(2) Dimmer switch

### **Reverse and Neutral Indicators**

The reverse indicator (1) and the neutral indicator (2) (Fig. 2-13) are located above the multi-function display.

The reverse indicator will light when the transmission is in reverse and the ignition switch is ON ( I ). The neutral indicator will light when the transmission is in neutral and the ignition switch is ON ( I ).

### **Oil High Temperature Indicator**

If the engine oil gets too hot, the oil high temperature indicator (3) (Fig. 2-13) will light.

#### **NOTE:**

The oil high temperature indicator should come on when the ignition switch is turned ON ( I ). This is not a problem. The light should go off a few seconds after the engine is started.

#### **CAUTION:**

**If the light does not come on with ignition switch ON ( I ), contact your authorized Honda dealer for assistance if you cannot correct the problem.**

If the oil high temperature indicator comes on while you are riding, immediately bring the vehicle to a stop, turn the engine off and let it cool.

An electric fan is used to automatically provide sufficient air flow through the oil cooler/before the engine oil temperature becomes too high.

#### **CAUTION:**

- \* Failure to stop the engine immediately after the oil high temperature indicator comes on will adversely affect the service life of the engine.**
- \* Do not carry or store articles on the front bumper. This may restrict air flow through the engine oil cooler, causing it to overheat.**

If the oil high temperature indicator comes on often, have your FOURTRAX inspected by your Honda dealer.

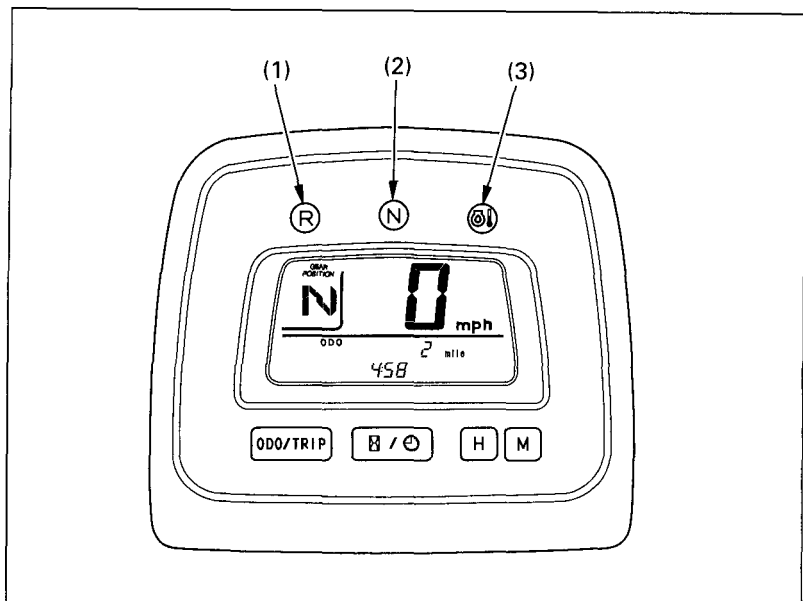


Fig. 2-13

(1) Reverse indicator  
(2) Neutral indicator

(3) Oil high temperature  
indicator

## Multi-function Display

(Ref. No.) Description		Function
(1) Multi-function display		The display includes the following functions.
(A)	Gear position indicator	Shows the gear position. (page 27 )
(B)	Speedometer	Shows riding speed.
(C)	Odometer	Shows accumulated mileage. (page 28 )
	Tripmeter	Shows mileage per trip. (page 28 )
(D)	Digital clock	Shows the time (hours and minutes). (page 30 )
	Hourmeter	Shows hours and tenths of hours of engine operation. (page 29 )
(2) Odometer/tripmeter select button		Selects display of the odometer or tripmeter. Resets the tripmeter to zero (0). (page 28 )
(3) Digital clock/hourmeter select button		Selects display of the hourmeter or digital clock. (page 29 , 30 )
(4) Hour select button		Advances the hour displayed by the digital clock. (page 30 )
(5) Minute select button		Advances the minute displayed by the digital clock. (page 30 )

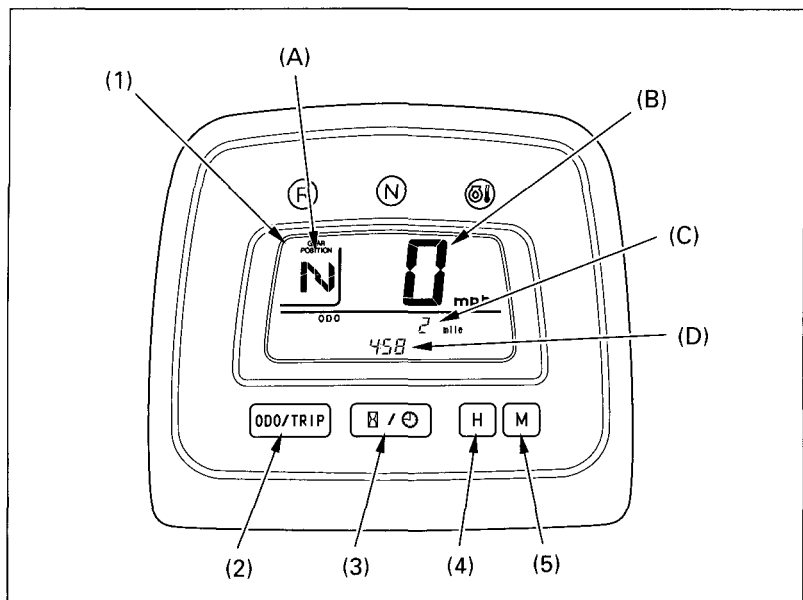


Fig. 2-14

### Initial Display

When the ignition switch is turned ON ( I ), the display (1) (Fig. 2-15) will temporarily show all the modes and digital segments so you can make sure the liquid crystal display is functioning properly.

The digital clock will reset if the battery is disconnected.

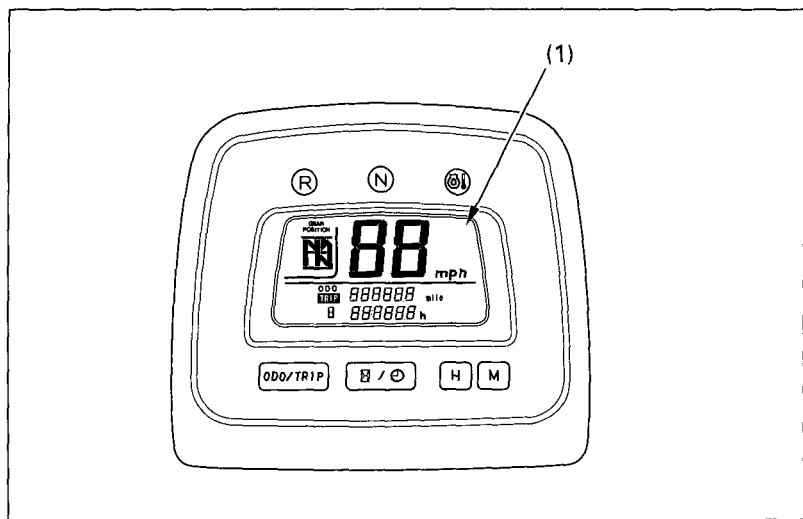


Fig. 2-15 (1) Multi-function display

### Gear Position Indicator

The gear position indicator (1) (Fig. 2-16) shows the gear position when the ignition switch is in the ON ( I ) position and the engine is running.

The indicator displays: N for neutral, R for reverse, and 1–5 for the five forward speed gears.

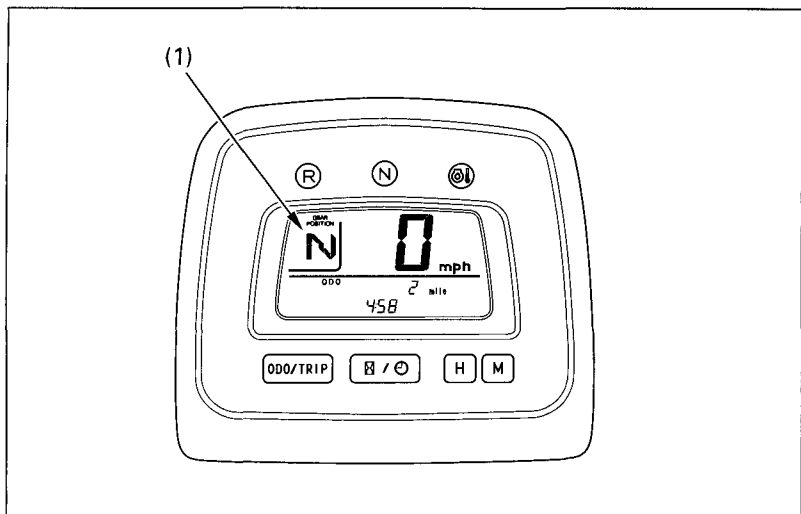


Fig. 2-16 (1) Gear position indicator



## Odometer/Tripmeter

### Odometer

When selected, the odometer (1) (Fig. 2-17) registers total distance traveled in miles while the ignition is ON ( I ). To change the display (2) from tripmeter to odometer, press and release the Odometer/Tripmeter select button (3).

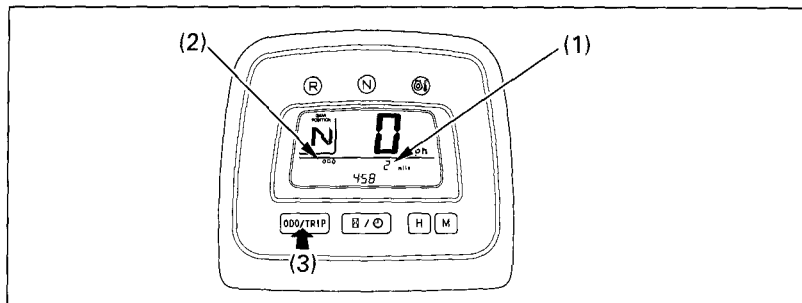


Fig. 2-17 (1) Odometer (3) Odometer/Tripmeter select button  
(2) "ODO" display

### Tripmeter

When selected, the tripmeter (1) (Fig. 2-18) shows mileage per trip while the ignition is ON ( I ). To change the display (2) from odometer to tripmeter, press and release the Odometer/Tripmeter select button (3). To reset the tripmeter to zero, press the Odometer/Tripmeter select button and hold it in for at least two seconds.

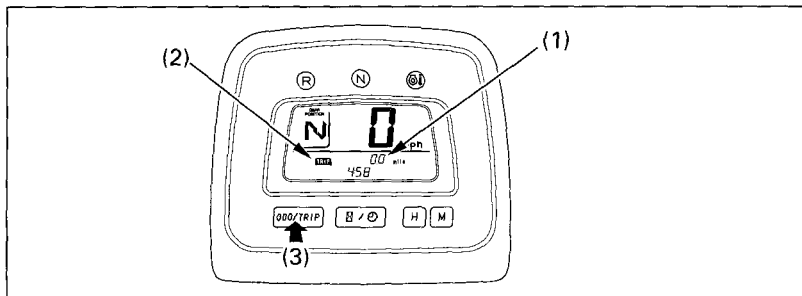


Fig. 2-18 (1) Tripmeter (3) Odometer/Tripmeter select button  
(2) "TRIP" display

## Hourmeter

When selected, the hourmeter (1) (Fig. 2-19) shows accumulated hours while the ignition is ON ( I ). The hourmeter provides accurate service period information for initial and regular maintenance. To change the display from the digital clock to the hourmeter mark (2), press and release the hourmeter/digital clock select button (3).

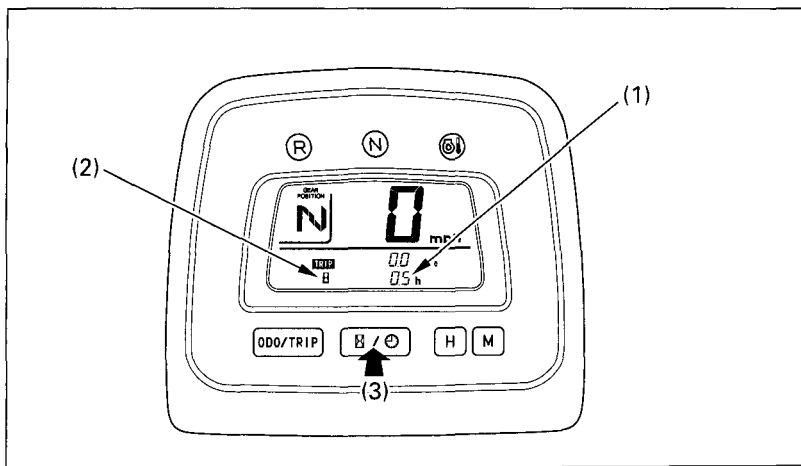


Fig. 2-19 (1) Hourmeter  
(2) Hourmeter mark

(3) Hourmeter/digital clock  
select button

## Digital Clock

When selected, the digital clock (1) (Fig. 2-20) shows the time while the ignition is ON ( I ). To change the display from hourmeter to digital clock, press and release the hourmeter/digital clock select button (2).

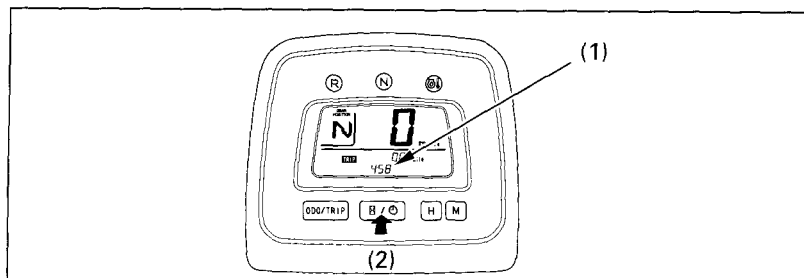


Fig. 2-20 (1) Digital clock (2) Hourmeter/digital clock select button

## Digital Clock Adjustment:

Turn the ignition switch ON ( I ).

To advance the hour display one unit at a time, press and release the hour select button (1).

To advance the hour display automatically, press and hold the hour select button. After two seconds, the hour display will begin advancing. Release the button when the display reaches the desired hour (2).

To advance the minute display one unit at a time, press and release the minute select button (3).

To advance the minute display automatically, press and hold the minute select button. After two seconds, the minute display will begin advancing. Release the button when the display reaches the desired minute (4).

To zero the minute display, press and hold both the hour and minute buttons simultaneously for two seconds.

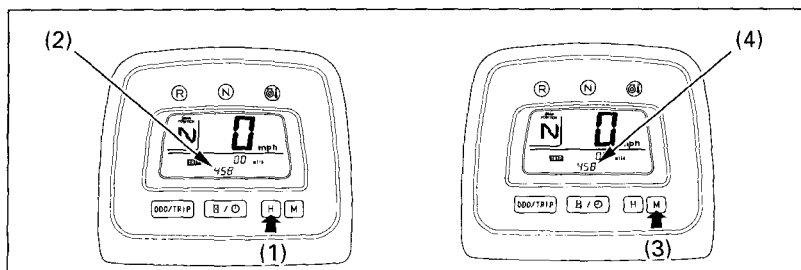




Fig. 2-21 (1) Hour select button (2) Hour (3) Minute select button (4) Minute

## GEARSHIFT CONTROLS

### Gearshift Switches

Two gearshift switches (Fig. 2-22) are located next to the left handlebar grip: upshift (  ) and downshift (  ).

Your FOURTRAX has five forward gears: 1, 2, 3, 4, and 5.

To upshift the transmission, press the upshift switch (1) once.

To downshift the transmission, press the downshift switch (2) once.

(For complete operational instructions, see page 71 ).

#### NOTE:

- \* The transmission cannot be upshifted from neutral to first gear or neutral to reverse when the engine speed is above 3,000 rpm or the ground speed is above 2 mph (3 km/h).
- \* The transmission cannot be downshifted from 1st gear to neutral when the ground speed is above 2 mph (3 km/h).

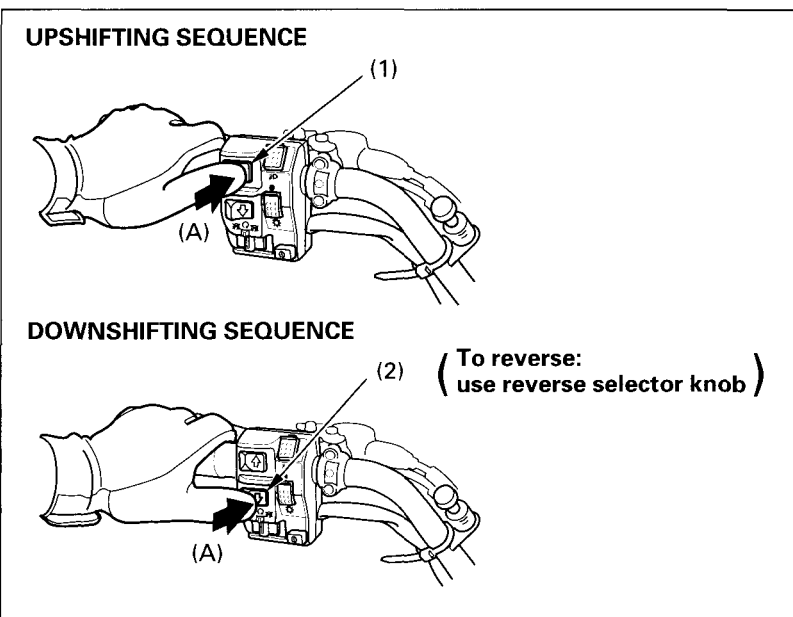


Fig. 2-22

(1) Upshift switch  
(2) Downshift switch

(A) Push

## Reverse Selector Knob

The reverse selector knob (Fig. 2-23) (1) is on the rear brake lever.

To shift into reverse, first bring the FOURTRAX to a complete stop and make sure the transmission is in neutral. While pushing the reverse selector knob (1) in, squeeze the rear brake lever (2), then press the downshift switch (3). To shift from reverse back to neutral, press the upshift switch (4) once.

### NOTE:

The transmission cannot be shifted from neutral back into reverse when the engine speed is above 3,000 rpm or the ground speed is above 2 mph (3 km/h).

### CAUTION:

**Bring the FOURTRAX to a complete stop before shifting the transmission into reverse. If the transmission is shifted into reverse while the vehicle is moving, the transmission will be damaged.**

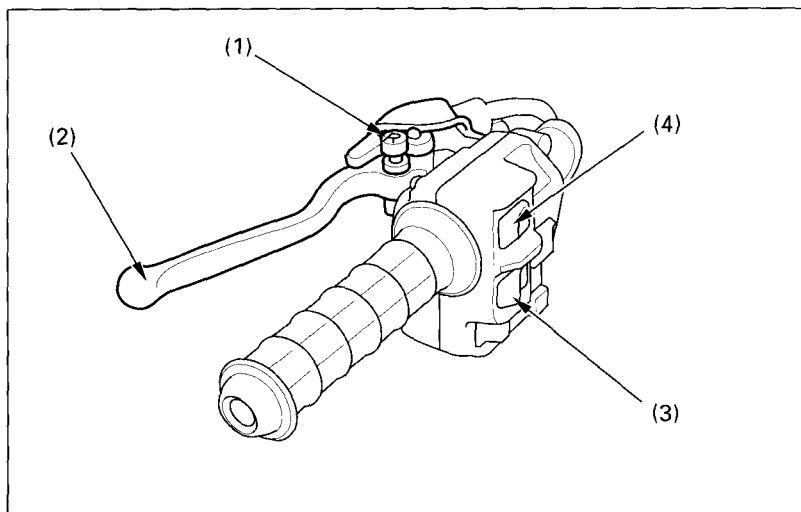


Fig. 2-23

(1) Reverse selector knob  
(2) Rear brake lever

(3) Downshift switch  
(4) Upshift switch

## BRAKE CONTROLS

### Front Brakes

The front brakes are operated by squeezing the front brake lever, near the right handgrip.

### Rear Brake

The rear brake is operated either by depressing the brake pedal or by squeezing the rear brake lever (Fig. 2-24).

#### NOTE:

Although the front and rear brakes have separate controls, your FOURTRAX's four-wheel drive interconnects all four wheels. So operating any brake control will cause braking at both the front and rear wheels. For information on how to apply the brakes in various riding situations, see pages 76—93.

### Parking Brake

The rear brake lever has a lock which allows it to be used as a parking brake.

To set the parking brake, squeeze the rear brake lever ( 1 ) and lock it with the lock lever ( 2 ). Always set the parking brake when parking and before starting the engine.

To unlock the parking brake, squeeze the rear brake lever until the lock lever releases.

Using the parking brake in freezing weather may cause the brakes to freeze in the locked position.

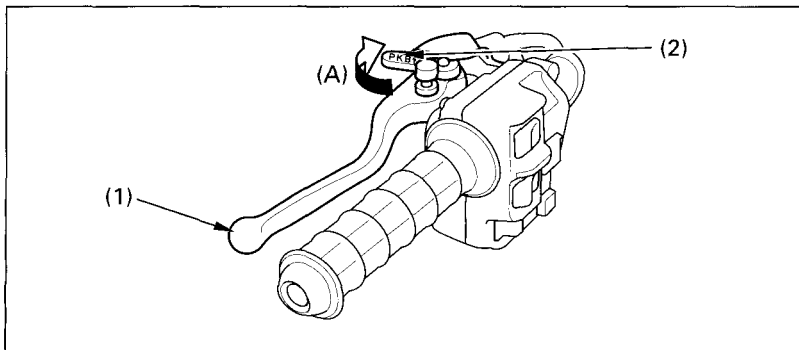


Fig. 2-24

(1) Rear brake lever/  
Parking brake lever

(2) Lock lever  
(A) To lock

## FUEL TANK CONTROLS

### Fuel Gauge

The fuel gauge (Fig. 2-25) (1) shows the approximate fuel supply available. At F (Full), the fuel tank capacity including reserve is:

3.43 US gal (13.0 ℓ , 2.86 Imp gal)

When the gauge needle (2) enters the red band (3), fuel will be low and you should refill the tank as soon as possible. The amount of fuel left in the tank when the needle enters the red band is approximately:

0.85 US gal (3.2 ℓ , 0.70 Imp gal)

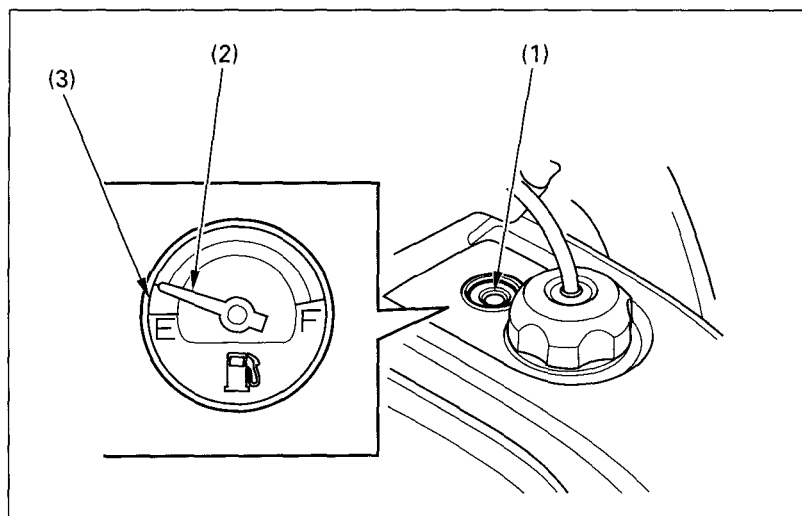


Fig. 2-25 (1) Fuel gauge

(2) Gauge needle

(3) Red band

### Fuel Fill Cap

After refueling, be sure to tighten the fuel fill cap (Fig. 2-26) until it clicks.

Insert the breather tube ( 2 ) into the handlebar cover hole ( 3 ).

To refuel refer to page 100 .

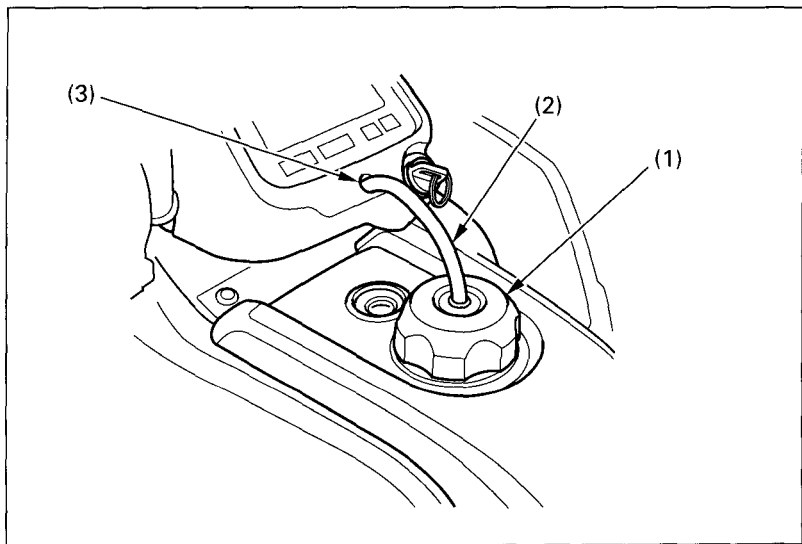


Fig. 2-26      (1) Fuel fill cap

(2) Breather tube  
(3) Handlebar cover hole



## Fuel Valve

The fuel valve (Fig. 2-27) is on the left side of the fuel tank, and it has three positions:

### OFF

When the fuel valve is in the OFF position, fuel cannot flow to the carburetor. Turn the valve OFF whenever the FOURTRAX is not in use.

### ON

When the fuel valve is in the ON position, fuel will flow from the main fuel supply to the carburetor.

### RES

When the fuel valve is in the RES position, fuel will flow from the reserve fuel supply to the carburetor. Use the reserve fuel only when the main supply is gone.

Refill the tank as soon as possible after switching to RES. The reserve fuel supply is:

0.85 US gal (3.2 l , 0.70 Imp gal)

### NOTE:

After refueling, do not operate the FOURTRAX with the fuel valve in the RES position. If you run out of fuel, there will be no reserve supply.

For gasoline recommendations and refueling instructions, see pages 100 – 103.

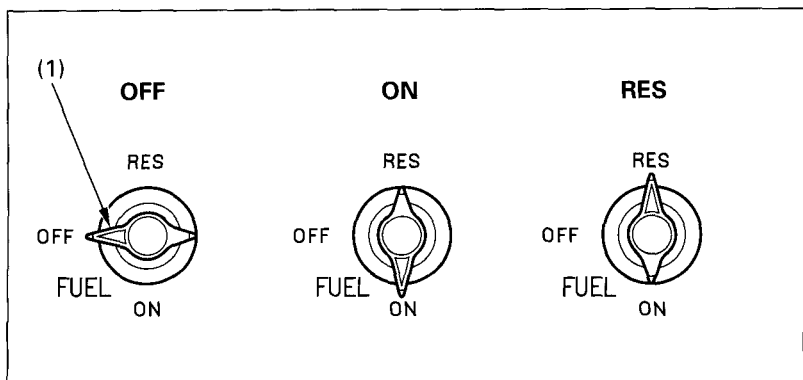


Fig. 2-27

(1) Fuel valve

## ENGINE OIL

### Dipstick

The dipstick (Fig. 2-28), on the right side of the front crankcase cover, is used to measure the oil level. The oil should be checked each day before operating the FOURTRAX and maintained between the upper level mark (2) and the lower level mark (3).

For oil recommendations and instructions on checking, adding and changing oil, see pages 112–116.

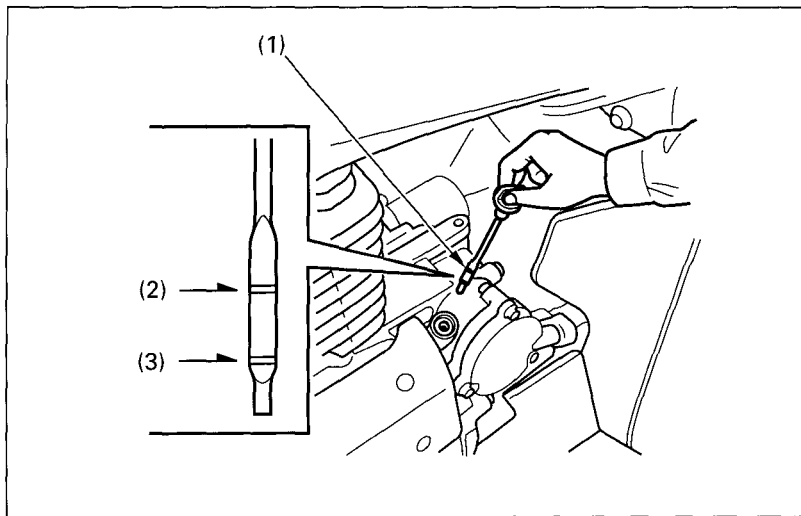


Fig. 2-28 (1) Dipstick

(2) Upper level mark  
(3) Lower level mark

While reading this manual, remember:

### **⚠ WARNING**

Indicates a strong possibility that serious injury or death may result if instructions are not followed.

## ADDITIONAL FEATURES

### Helmet Holder

The helmet holder (2) (Fig. 2-29) is located on the right side of the handlebar (1). To use the holder, hang the D-ring on your helmet strap over the bracket. Use the helmet holder only when the FOURTRAX is parked.

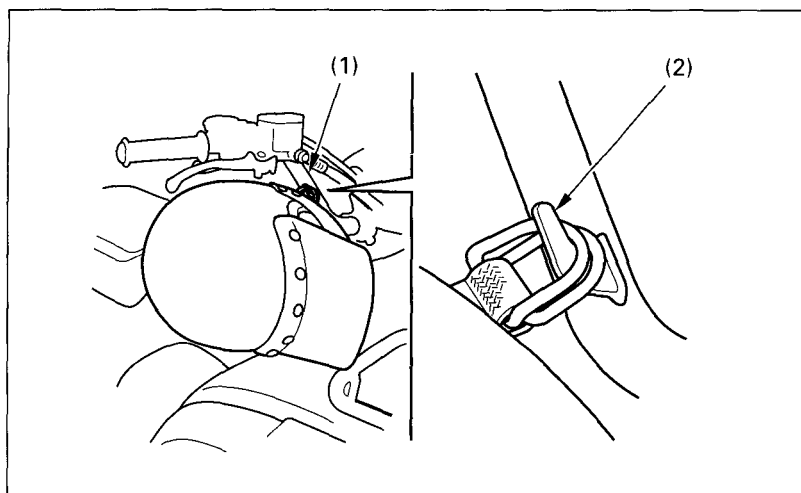


Fig. 2-29 (1) Handlebar

(2) Helmet holder

## **⚠ WARNING**

### **POTENTIAL HAZARD**

**Operating this ATV with a helmet attached to the helmet holder.**

### **WHAT CAN HAPPEN**

**Can impair your ability to steer the vehicle.**

### **HOW TO AVOID THE HAZARD**

**Never ride this ATV with a helmet attached to the helmet holder.  
Use the helmet holder only while the ATV is parked.**

### Flag Pole Bracket

The flag pole bracket (Fig. 2-30) is on the rear cargo rack. Flag poles are optional equipment available from your Honda dealer. To mount a pole in the bracket, follow the instructions that come with the flag pole kit.

#### NOTE:

Flag poles are required in some riding areas. Check local regulations before riding.

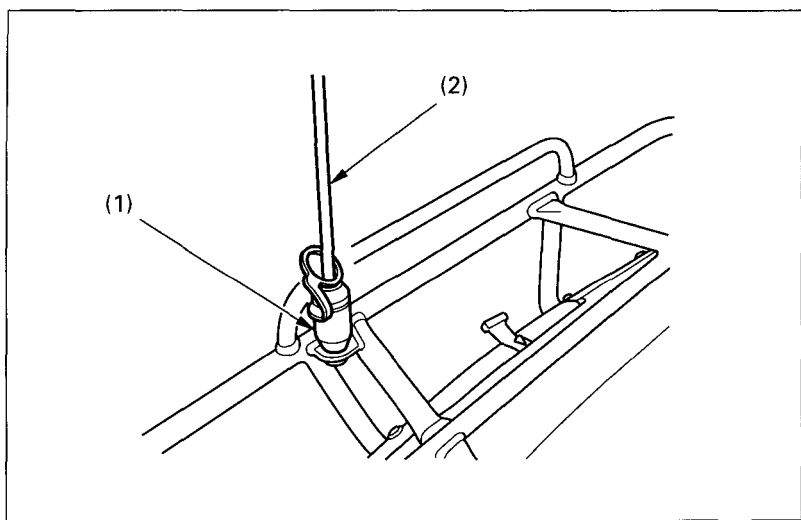


Fig. 2-30 (1) Flag pole bracket

(2) Optional flag pole

### Trailer Hitch

The trailer hitch is located on the rear axle housing. As illustrated in Fig. 2-31 , to use the hitch, you'll need a proper size ball as specified by the trailer manufacturer.

To attach the ball and properly hook up a trailer, follow the trailer manufacturer's instructions. For load limits and operational guidelines, see pages 49 – 51.

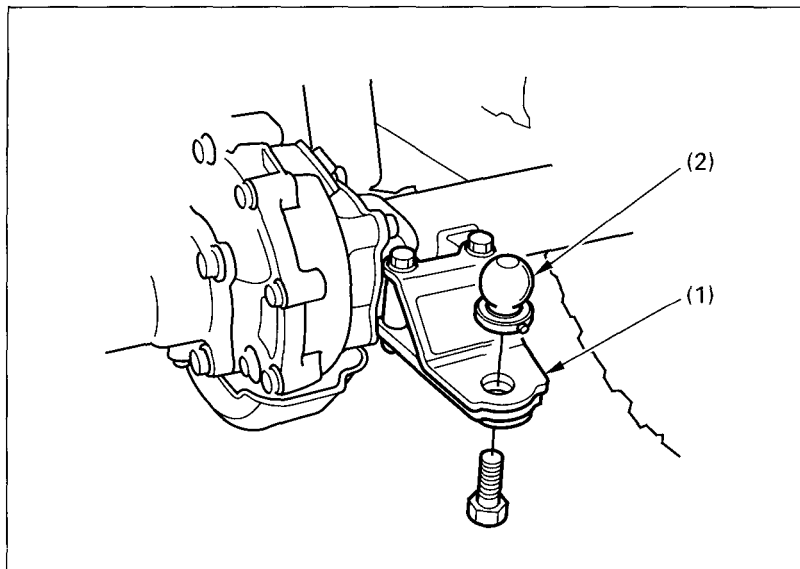


Fig. 2-31 (1) Trailer hitch

(2) Trailer hitch ball

## Storage Compartment

The storage compartment (1) (Fig. 2-32) is below the rear cargo rack (2).

The owner's manual (5) and air pressure gauge (6) are located in a plastic tray (4) attached to the upper inside of the storage compartment.

To open the compartment, unhook the rubber strap (3).

To open the plastic tray, push down the rear end of the plastic tray.

The owner's manual (5) and air pressure gauge (6) should be stored in the plastic tray (4). The tool kit (7) and gear change tool (8) should be stored in the storage compartment (1).

Be careful not to flood this area when washing your FOURTRAX or riding through water.

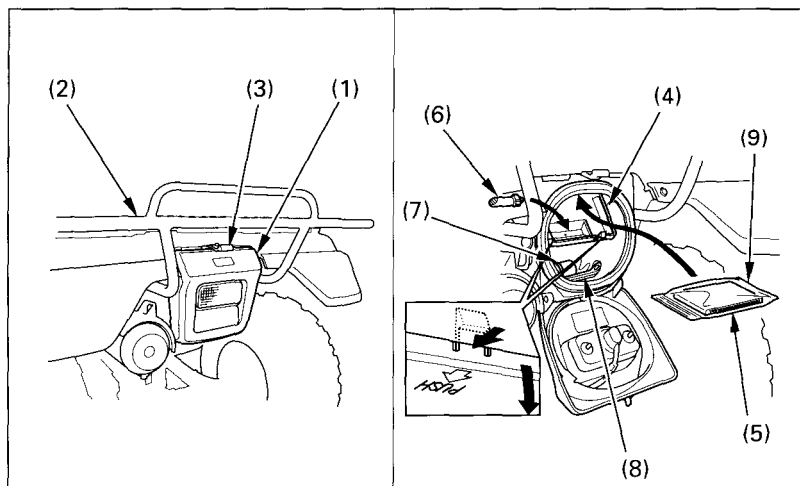


Fig. 2-32 (1) Storage compartment

(2) Rear cargo rack

(3) Rubber strap

(4) Plastic tray

(5) Owner's manual

(6) Air pressure gauge

(7) Tool kit

(8) Gear change tool

(9) Owner's manual bag

## Accessory Socket

The accessory socket (1) (Fig. 2-33) is attached to the left side of the front fender (2). You can use the accessory socket to power a trouble light, spotlight, CB radio, or cell phone, etc.

Do not plug in any heat-generating accessory such as an automobile cigarette lighter because it can damage the socket.

To use the accessory socket, turn the ignition switch ON ( I ) to start the engine. Then turn the headlights OFF, and open the accessory socket cap (3).

Be sure the engine is on and the headlights are turned off before using the accessory socket, otherwise you may drain the battery.

The accessory socket's rated capacity is DC 12V, 120 Watts (10A) or less.

If you exceed this limit, you may blow a fuse. (For information on fuses, and how to replace a fuse, see pages 125 – 128 .)

When you are done using an accessory, unplug it, and cover the socket with the cap.

Be careful not to flood this accessory socket when washing your FOURTRAX.

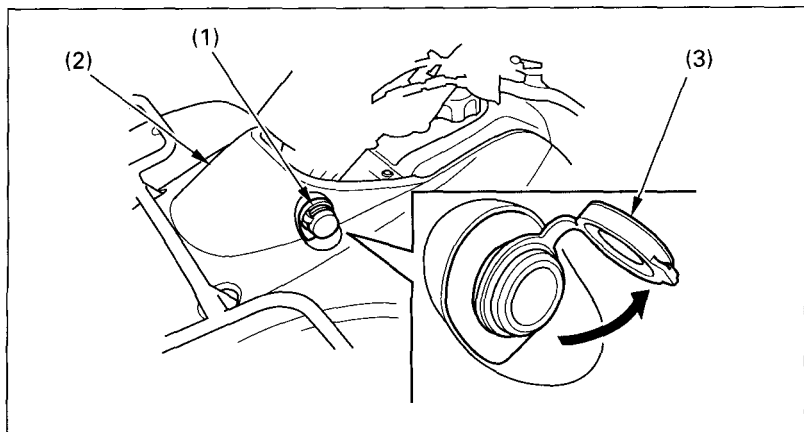


Fig. 2-33 (1) Accessory socket  
(2) Front fender

(3) Cap

While reading this manual, remember:

**⚠ WARNING**

Indicates a strong possibility that serious injury or death may result if instructions are not followed.



## RIDING YOUR FOURTRAX

This part of the Owner's Manual discusses how to ride your FOURTRAX safely. Please review the special safety messages on pages 1–5 . While reading this manual, remember:

**⚠ WARNING** Indicates a strong possibility that serious injury or death may result if instructions are not followed.

### BEFORE RIDING

*You need to be prepared before riding. This includes getting proper instruction, making sure your FOURTRAX is in good operating condition, and learning some basic safe-riding rules.*

### RIDER PREPARATION

#### **Age Recommendation**

The minimum recommended age for this FOURTRAX model is 16. For safety, never let children under 16 years old operate this vehicle.

## **⚠ WARNING**

### **POTENTIAL HAZARD**

**Failure to follow the age recommendation for this ATV.**

### **WHAT CAN HAPPEN**

**If children use ATVs that are not recommended for their age, severe injury or death can result.**

**Even though a child may be within the age group for which an ATV is recommended, he or she may not have the skills, abilities, or judgment needed to operate the ATV safely and may be involved in a serious accident.**

### **HOW TO AVOID THE HAZARD**

**A child under 16 should never operate an ATV with engine size greater than 90 cc.**

## **Rider Training**

Beginning and inexperienced riders should get proper instruction on how to operate this FOURTRAX safely. A hands-on rider training course is available in your area. For information, contact your Honda dealer.

### **⚠ WARNING**

#### **POTENTIAL HAZARD**

**Operating this ATV without proper instruction.**

#### **WHAT CAN HAPPEN**

**The risk of an accident is greatly increased if the operator does not know how to operate the ATV properly in different situations and on different types of terrain.**

#### **HOW TO AVOID THE HAZARD**

**Beginning and inexperienced operators should complete the certified training course offered by Honda. They should then regularly practice the skills learned in the course and the operating techniques described in this Owner's Manual.**

**For more information about the training course, contact an authorized Honda dealer or call 1-800-887-2887 (USA only).**

## **VEHICLE PREPARATION**

### **Pre-Ride Inspection**

Inspect your FOURTRAX every day before you ride it. Checking the items below will take only a few minutes, and in the long run, they can save time, expense, and possibly your life.

1. **Engine oil level.** Check the oil level and add oil if required (pages 112 – 116). Check for leaks.

2. **Fuel level.** Fill the fuel tank when necessary (pages 100–103). Check for leaks.
3. **Brakes.** Check operation. Make sure there is no brake fluid leakage. If necessary, adjust free play (pages 129–138).
4. **Tires.** Check condition and pressure (pages 140–142).
5. **Throttle.** Check for smooth opening and closing in all steering positions.
6. **Headlight and headlight dimmer switches.** Check for proper function (page 21).
7. **Engine stop switch.** Check for proper function (page 15).
8. **Nuts, bolts, fasteners.** Check the wheels to see that the axle nuts are tightened. Check the security of all other nuts, bolts and fasteners.
9. **Steering.** Check that the wheels turn properly as you steer the handlebars.
10. **Cargo.** Check that all cargo is properly secured.
11. **Underbody and exhaust system.** Check for, and remove, any dirt, vegetation or other debris that could be a fire hazard or interfere with the proper operation of the vehicle.
12. **Air cleaner housing drain tube.** Check for deposits in the drain tube. If necessary, clean the tube (page 108) and check the air cleaner case.

## **⚠ WARNING**

### **POTENTIAL HAZARD**

**Failure to inspect the ATV before operating.  
Failure to properly maintain the ATV.**

### **WHAT CAN HAPPEN**

**Increases the possibility of an accident.**

### **HOW TO AVOID THE HAZARD**

**Always inspect your ATV each time you use it to make sure the ATV is in safe operating condition.**

**Always follow the inspection and maintenance procedures and schedules described in this Owner's Manual.**

Correct any problem before you ride. If you can't correct a problem, contact your Honda dealer for assistance.

If your FOURTRAX has overturned or been involved in a collision, do not ride the vehicle until it has been inspected by an authorized Honda dealer. There may be damage or other problems you cannot see.

### **Tires**

Before riding, make sure your FOURTRAX has the proper tires and that they are in good condition. Also be sure the tires are inflated to the proper tire pressure (see page 140).

## **⚠ WARNING**

### **POTENTIAL HAZARD**

**Operating this ATV with improper tires, or with improper or uneven tire pressure.**

### **WHAT CAN HAPPEN**

**Use of improper tires on this ATV, or operation of this ATV with improper or uneven tire pressure, may cause loss of control, increasing your risk of an accident.**

### **HOW TO AVOID THE HAZARD**

**Always use the size and type tires specified in the Owner's Manual for this vehicle.**

**Always maintain proper tire pressure as described in this Owner's Manual.**

## Load Limits

**NOTE:**

The following weight limits apply to standard equipment only. Modifying your FOURTRAX, using non-standard equipment or riding on terrain that is not flat and smooth could further reduce these limits.

(Combined weight of the rider, all accessories and all cargo)

**Rear cargo rack weight limit = 133 lbs (60 kg) maximum**

(Combined weight of the trailer and all cargo in the trailer)

(Weight on the trailer tongue)

**Tongue and rear cargo weight = 133 lbs (60 kg) maximum**  
(Combined weight on the trailer tongue and on the rear cargo rack)

## **Loading and Operational Guidelines**

Carrying cargo or pulling a trailer will affect how your FOURTRAX handles and greatly reduce its ability in accelerating, braking and making turns and other maneuvers.

Be sure to observe the weight limits and follow these guidelines:

1. Do not place cargo anywhere on the FOURTRAX other than on the front and rear racks. Otherwise, operating stability may be adversely affected.
2. Never ride with a passenger on the front or rear cargo racks. The FOURTRAX is not designed to carry a passenger.
3. Do not tow another vehicle or a trailer with a rope or cable attached to the rear rack. Use the trailer hitch.
4. Load cargo on the rear rack as far forward as possible. Make sure cargo on the front rack does not interfere with handlebar movement.
5. Do not allow cargo to extend beyond the edges of either the front or rear racks.
6. Make sure all cargo is secured before riding.
7. When towing a trailer, take care to maintain balance and stability. Distribute cargo between the front and rear of the trailer to obtain the recommended tongue weight.

### **NOTE:**

Tongue weight can be measured with an ordinary bathroom scale. Place the scale under the tongue, using either a tongue jack or other support to keep the trailer level.

8. Allow extra room for starting, stopping and turning whenever you carry cargo or pull a trailer.
9. Avoid riding on steep slopes when carrying cargo or pulling a trailer.
10. Never cross a slope when towing a trailer.

## **⚠ WARNING**

### **POTENTIAL HAZARD**

**Overloading this ATV or carrying or towing cargo improperly.**

### **WHAT CAN HAPPEN**

**Could cause changes in vehicle handling, stability and braking which could lead to an accident.**

### **HOW TO AVOID THE HAZARD**

**Never exceed the stated load limits for this ATV.**

**Cargo should be properly distributed and securely attached.**

**Reduce speed when carrying cargo or pulling a trailer. Allow greater distance for braking.**

**Use extra care when operating on hills and riding over obstacles. Never cross a slope when pulling a trailer.**

**Always follow the instructions in this Owner's Manual for carrying cargo or pulling a trailer.**



## Accessories

Genuine Honda accessories have been specifically designed for and tested on this vehicle. Because Honda cannot test all other accessories, you are personally responsible for properly selecting, installing, and using non-Honda accessories. Always follow the loading instructions above, plus the following:

1. Carefully inspect the accessory to make sure it does not block any lights, reduce ground clearance, or limit suspension travel, steering travel, or other controls.
2. Make sure the accessory does not interfere with your ability to shift body position on the seat or operate hand and foot controls.
3. Do not add electrical equipment that will exceed the vehicle's electrical system capacity. A blown fuse could cause a loss of lights or engine power.

## **⚠ WARNING**

### **POTENTIAL HAZARD**

**Operating this ATV with improper modifications.**

### **WHAT CAN HAPPEN**

**Improper installation of accessories or modification of this vehicle may cause changes in handling which could lead to an accident.**

### **HOW TO AVOID THE HAZARD**

**Never modify this ATV through improper installation or use of accessories. All parts and accessories added to this vehicle should be genuine Honda or equivalent components designed for use on this ATV and should be installed and used according to instructions. If you have questions, consult an authorized Honda dealer.**

While reading this manual, remember:

### **⚠ WARNING**

**Indicates a strong possibility that serious injury or death may result if instructions are not followed.**

### **No Modifications**

Modifying this FOURTRAX or removing original equipment may render the vehicle unsafe or illegal. Spark arresters and mufflers are required in most areas. Don't modify your exhaust system or emission control system components. Remember, excessive noise bothers everyone and creates a bad image for off-road vehicles.

## **SAFE RIDING RULES**

### **Protective Apparel**

Always wear an approved motorcycle helmet when riding your FOURTRAX. You should also always wear goggles or a face shield, gloves, boots, a long-sleeved shirt or jacket, and long pants.

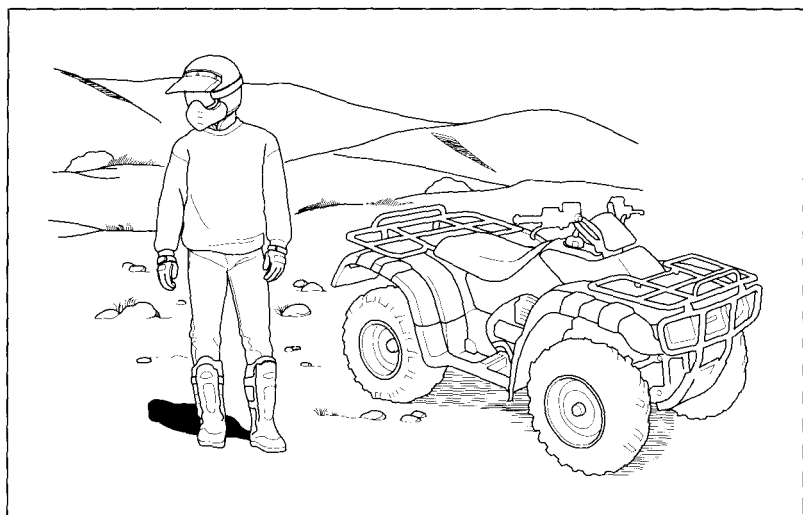


Fig. 3-1

An example of a properly dressed rider.

## **⚠ WARNING**

### **POTENTIAL HAZARD**

**Operating this ATV without wearing an approved motorcycle helmet, eye protection and protective clothing.**

### **WHAT CAN HAPPEN**

**Operating without an approved motorcycle helmet increases your chances of a severe head injury or death in the event of an accident.**

**Operating without eye protection can result in an accident and increases your chances of a severe injury in the event of an accident.**

**Operating without protective clothing increases your chances of severe injury in the event of an accident.**

### **HOW TO AVOID THE HAZARD**

**Always wear an approved motorcycle helmet that fits properly.**

**You should also wear: eye protection (goggles or face shield), gloves, boots, long-sleeved shirt or jacket and long pants.**

### **No Passengers**

This FOURTRAX is designed as an operator-only vehicle. The long seat is designed to allow the rider to change body position, not for carrying a passenger. Never let a passenger ride on the seat or on the front or rear cargo racks.

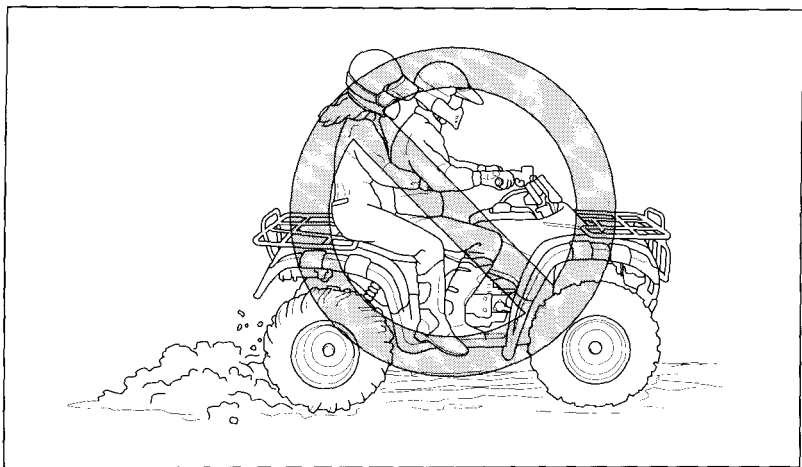


Fig. 3-2

Never carry a passenger on your FOURTRAX.

## **⚠ WARNING**

### **POTENTIAL HAZARD**

**Carrying a passenger on this ATV.**

### **WHAT CAN HAPPEN**

**Greatly reduces your ability to balance and control this ATV.**

**Could cause an accident, resulting in harm to you and/or your passenger.**

### **HOW TO AVOID THE HAZARD**

**Never carry a passenger. The long seat is to allow the operator to shift position as needed during operation. It is not for carrying passengers.**

## **No Alcohol or Drugs**

Alcohol, drugs and FOURTRAX's don't mix. Even a small amount of alcohol can impair your ability to operate a FOURTRAX safely. Likewise, drugs—even if prescribed by a physician—can be dangerous while operating a FOURTRAX. Consult your doctor to be sure it is safe to operate a vehicle after taking medication.

## **⚠ WARNING**

### **POTENTIAL HAZARD**

**Operating this ATV after consuming alcohol or drugs.**

### **WHAT CAN HAPPEN**

**Could seriously affect your judgment.**

**Could cause you to react more slowly.**

**Could affect your balance and perception.**

**Could result in an accident.**

### **HOW TO AVOID THE HAZARD**

**Never consume alcohol or drugs before or while driving this ATV.**

### **Off-Road Only**

Your FOURTRAX is designed and manufactured for off-road use only, not for pavement. Riding on pavement can affect handling and control. You should not ride your FOURTRAX on pavement.

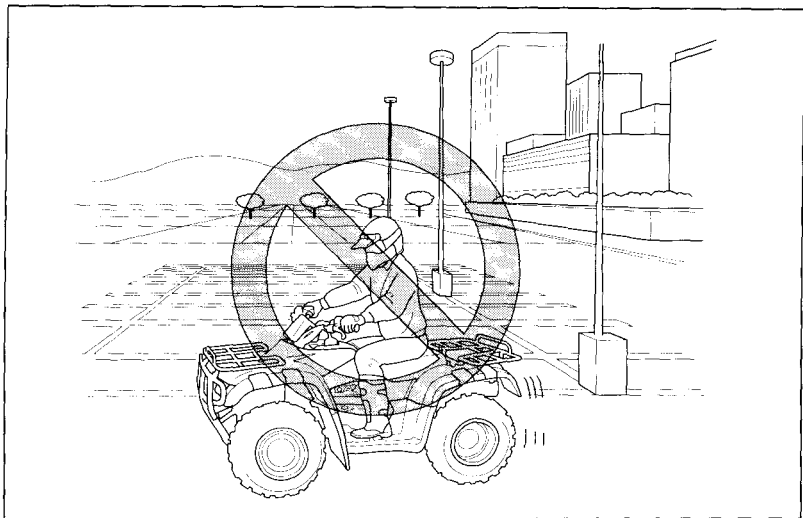


Fig. 3-3

Never ride on paved surfaces.

## **⚠ WARNING**

### **POTENTIAL HAZARD**

**Operating this ATV on paved surfaces.**

### **WHAT CAN HAPPEN**

**The ATV and its tires are designed for off-road use only, not for use on pavement. Paved surfaces may seriously affect handling and control of the ATV, and may cause the vehicle to go out of control.**

### **HOW TO AVOID THE HAZARD**

**Never operate the ATV on any paved surfaces, including sidewalks, driveways, parking lots and streets.**

You should never ride your FOURTRAX on public streets, roads or highways, even if they are not paved. Drivers of street vehicles may have difficulty seeing and avoiding you, which could lead to a collision.

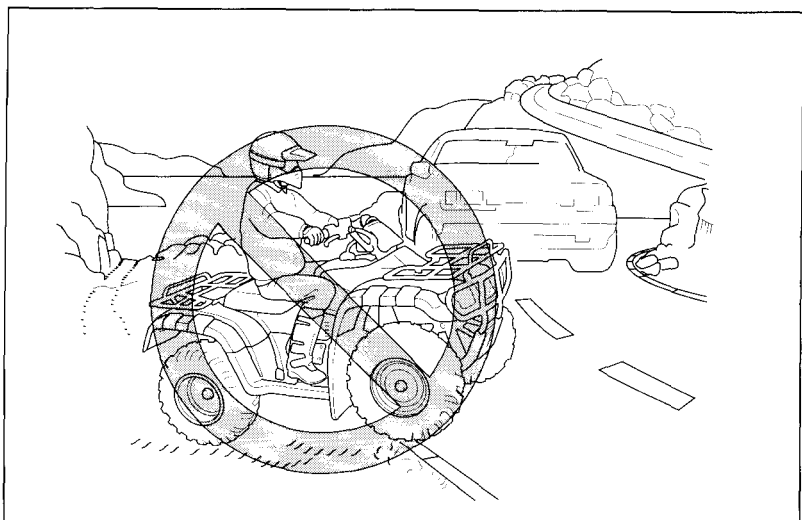


Fig. 3-4

Never ride on public roads or highways.

## **⚠ WARNING**

### **POTENTIAL HAZARD**

Operating this ATV on public streets, roads or highways.

### **WHAT CAN HAPPEN**

You can collide with another vehicle.

### **HOW TO AVOID THE HAZARD**

Never operate this ATV on any public street, road or highway, even a dirt or gravel one.

In many states it is illegal to operate ATVs on public streets, roads and highways.



## **FOR OFF-ROAD USE ONLY**

This vehicle is designed and manufactured for off-road use only.  
USA only:

It conforms to US EPA Noise Emission regulations, but does not conform to Federal Motor Vehicle Safety Standards or US EPA Exhaust Emission regulations, and operation on public streets, roads, or highways is illegal. The vehicle is equipped with a USDA qualified spark arrester. Obey local laws and regulations.

It conforms to California exhaust emission regulations for ATVs.

When riding off-road, also remember to always obey local off-road riding laws and regulations. Obtain permission to ride on private property. Avoid posted areas and obey "no trespassing" signs.

### **Keep Hands and Feet on Controls**

Always keep both hands on the handlebars and both feet on the footpegs when riding your FOURTRAX. This is important to maintain your balance and to control the vehicle. If you put your feet on the ground while the FOURTRAX is moving, they could come in contact with the rear wheels, causing injury.

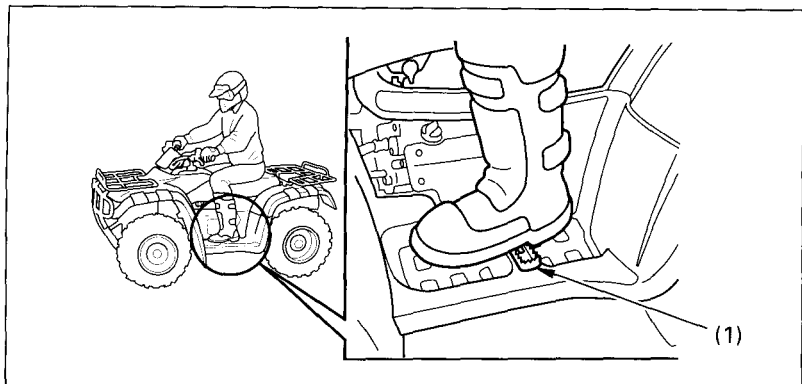


Fig. 3-5

(1) Footpeg

## **⚠ WARNING**

### **POTENTIAL HAZARD**

Removing hands from handlebars or feet from footpegs during operation.

### **WHAT CAN HAPPEN**

Removing even one hand or foot can reduce your ability to control the ATV or could cause you to lose your balance and fall off of the ATV. If you remove a foot from the footpeg, your foot or leg may come into contact with the rear wheels, which could injure you or cause an accident.

### **HOW TO AVOID THE HAZARD**

Always keep both hands on the handlebars and both feet on the footpegs of your ATV during operation.

## **Control Speed**

Riding at excessive speed increases the chance of an accident. In choosing a proper speed, you need to consider the capability of your vehicle, the terrain, visibility and other operating conditions, plus your own skills and experience.

### **⚠ WARNING**

#### **POTENTIAL HAZARD**

**Operating this ATV at excessive speeds.**

#### **WHAT CAN HAPPEN**

**Increases your chances of losing control of the ATV, which can result in an accident.**

#### **HOW TO AVOID THE HAZARD**

**Always go at a speed that is proper for your vehicle, the terrain, visibility and other operating conditions, and your experience.**

## **No Stunts**

When riding, you should keep all four wheels of your FOURTRAX on the ground. Avoid "wheelies," jumps and other stunts, as they could cause loss of control.

### **⚠ WARNING**

#### **POTENTIAL HAZARD**

**Attempting wheelies, jumps, and other stunts.**

#### **WHAT CAN HAPPEN**

**Increases the chance of an accident, including an overturn.**

#### **HOW TO AVOID THE HAZARD**

**Never attempt stunts, such as wheelies or jumps.  
Don't try to show off.**

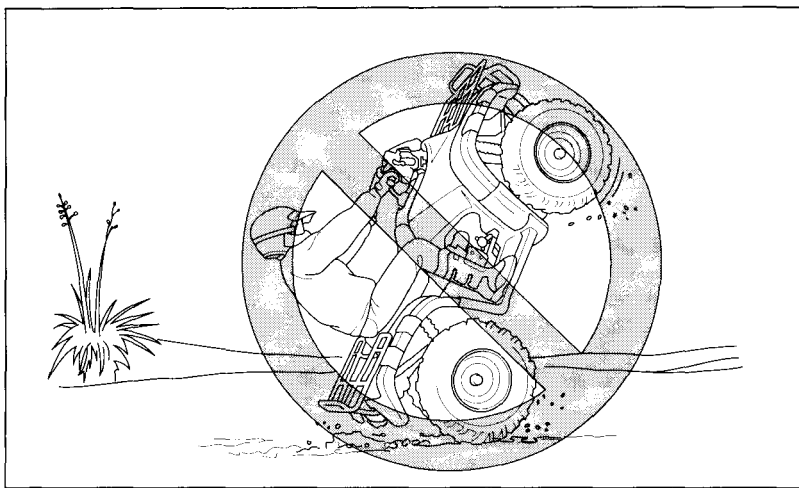


Fig. 3-6

**Never attempt wheelies or other stunts.**

### **Use Care on Unfamiliar Terrain**

Before riding in a new area, always check the terrain thoroughly. Don't ride fast on unfamiliar terrain or when visibility is limited. (It's sometimes difficult to see obstructions.)

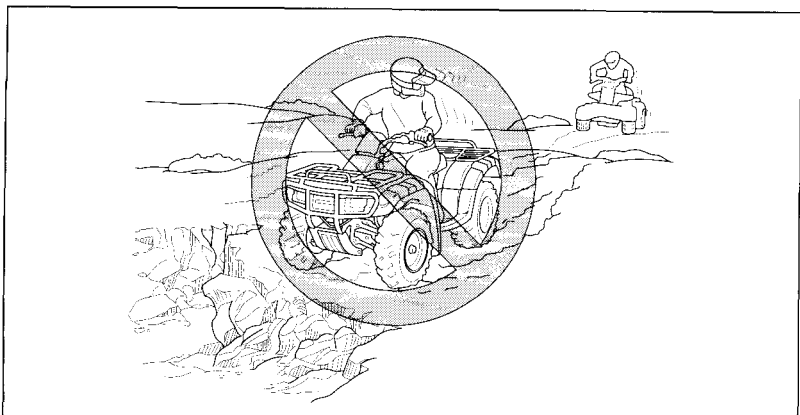


Fig. 3-7

Be alert for changes in the terrain.

## **⚠ WARNING**

### **POTENTIAL HAZARD**

**Failure to use extra care when operating this ATV on unfamiliar terrain.**

### **WHAT CAN HAPPEN**

**You can come upon hidden rocks, bumps, or holes without enough time to react.**

**Could result in the ATV overturning or going out of control.**

### **HOW TO AVOID THE HAZARD**

**Go slowly and be extra careful when operating on unfamiliar terrain.**

**Always be alert to changing terrain conditions when operating the ATV.**

Never ride past your limit of visibility. Maintain a safe distance between your FOURTRAX and other off-road vehicles.

Always exercise caution, and use extra care on rough, slippery and loose terrain.

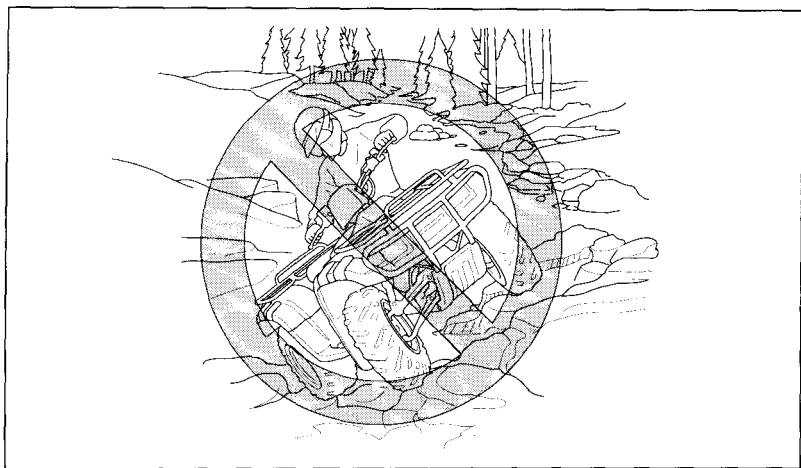


Fig. 3-8

Use extra care on rough terrain.

## **⚠ WARNING**

### **POTENTIAL HAZARD**

Failure to use extra care when operating on excessively rough, slippery or loose terrain.

### **WHAT CAN HAPPEN**

Could cause loss of traction or vehicle control, which could result in an accident, including an overturn.

### **HOW TO AVOID THE HAZARD**

Do not operate on excessively rough, slippery or loose terrain until you have learned and practiced the skills necessary to control the ATV on such terrain.

Always be especially cautious on these kinds of terrain.

## **RIDING**

For your initial riding practice, select a safe area free of obstacles with a level surface of dirt or sand. Practice at low speed until you are confident in shifting gears, braking, and making turns.

### **⚠ WARNING**

#### **POTENTIAL HAZARD**

**Running the engine in an enclosed area.**

#### **WHAT CAN HAPPEN**


**Engine exhaust contains carbon monoxide gas that can cause loss of consciousness and may lead to death.**

#### **HOW TO AVOID THE HAZARD**

**Never operate the ATV engine in an enclosed area, such as a garage.**

## STARTING THE ENGINE

### Preparation

1. Select a level surface and lock the parking brake (page 33 ) before starting the engine.
2. Turn the fuel valve ( 1 ) and ignition switch ( 2 ) to ON.
3. Make sure the engine stop switch ( 3 ) is at RUN (  ).
4. Make sure that the transmission is in neutral by checking that the neutral indicator ( 4 ) lights.

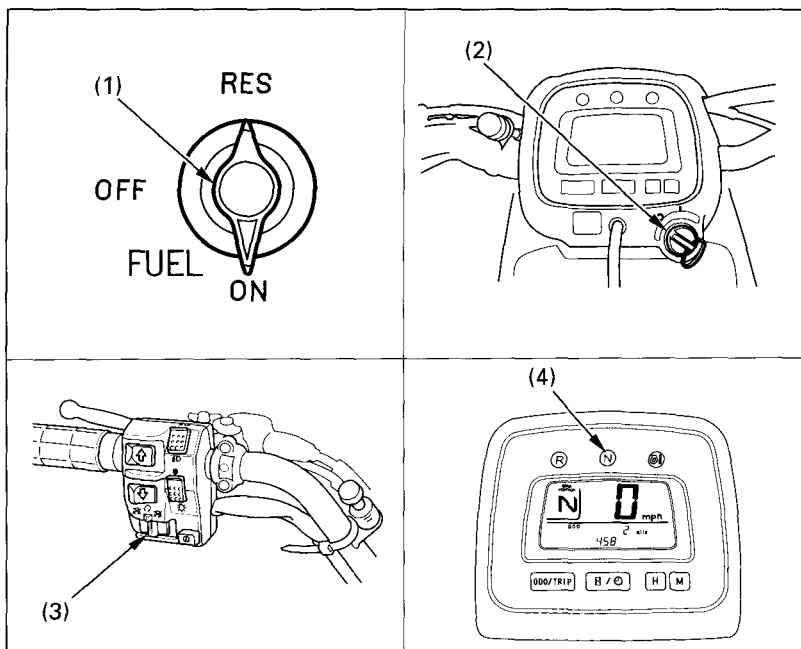


Fig. 3-9

(1) Fuel valve  
(2) Ignition switch

(3) Engine stop switch  
(4) Neutral indicator



### Starting Procedure (After Preparation)

To restart a warm engine, follow the procedure for High Air Temperature.

The starter motor will operate only when the transmission is in neutral.

#### Normal Air Temperature

10°–35 °C (50°–95 °F)

1. Pull the choke knob (1) up all the way to fully ON (A) position, if the engine is cold.
2. With the throttle closed, press the starter button.

#### CAUTION:

**\* Pressing the electric starter button for more than 5 seconds at a time may cause the starter to overheat and damage the starter. Release the starter button for approximately 10 seconds before pressing it again.**

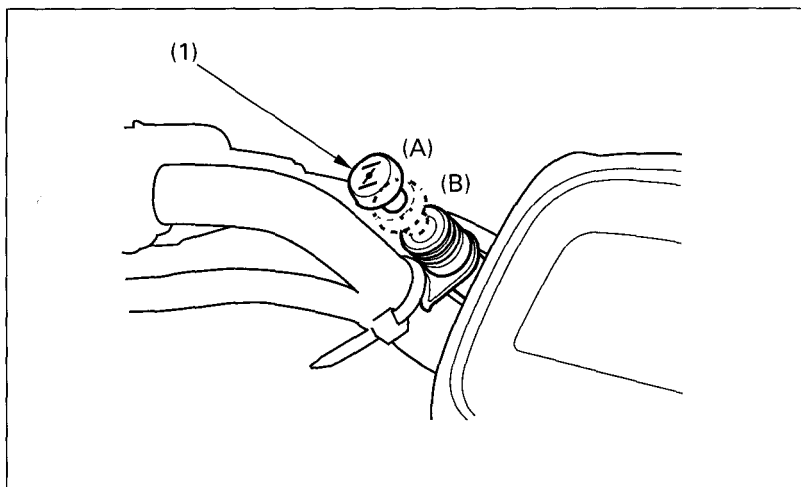


Fig. 3-10 (1) Choke knob

(A) Fully ON  
(B) Fully OFF

3. Immediately after the engine starts, operate the choke knob to keep fast idle.
4. Continue warming up the engine until it runs smoothly and responds to the throttle with the choke knob in the fully OFF (B) position.
5. If idling is unstable, open the throttle slightly.

### High Air Temperature

35 °C (95 °F) or above

1. Do not use the choke.
2. With the throttle slightly open, press the starter button (1).

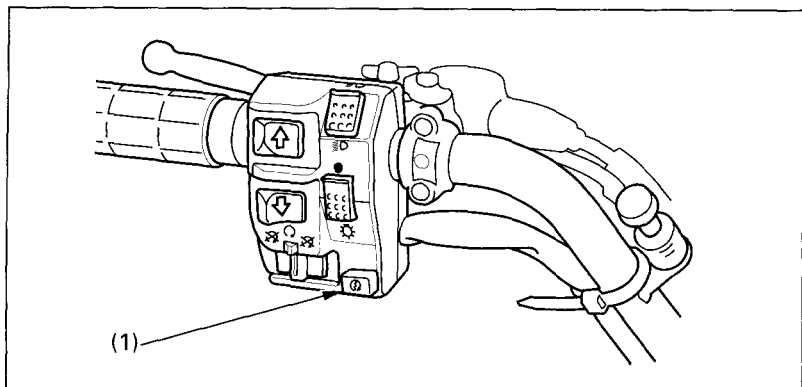


Fig. 3-11

(1) Starter button

### Low Air Temperature

10 °C (50 °F) or below

Follow the procedure for "Normal Air Temperature".

#### **NOTE:**


 
When air temperature is below  $-15\text{ }^{\circ}\text{C}$  ( $5\text{ }^{\circ}\text{F}$ ), push the starting primer knob two or three times (page 18).

#### **CAUTION:**

- \* **Extended use of the choke may impair piston and cylinder wall lubrication and shorten the life of the engine.**
- \* **Do not race the engine during the warm-up period.**  
Racing a cold engine wastes fuel and increases engine wear.

### **Flooded Engine**

If the engine does not start after several attempts, it may have become flooded with excess fuel. To clear the engine:

1. Turn the engine stop switch OFF (  ).
2. Push the choke knob to the OFF position.
3. Hold the throttle fully open and briefly press the starter button or operate the recoil starter several times.
4. When the engine is cleared, wait 10 seconds. Then turn the engine stop switch to RUN (  ) and repeat the normal starting procedure, but don't use the choke.

### **Low Battery**

If the battery is low or dead, use the recoil starter (page 19) to start the engine.

### **High Altitude Adjustment**

For operation above 3,000 feet (1,000 m), it may be necessary to switch to high altitude carburetor jetting (see page 111).

## SHIFTING GEARS

After starting the engine and letting it warm up, follow these procedures:

1. With the transmission in neutral, release the parking brake, but continue squeezing the rear brake lever.
2. With the throttle closed, press the upshift switch once to shift into 1st gear.
3. Release the rear brake lever and increase engine speed by gradually opening the throttle.
4. When speed increases, release the throttle and shift to 2nd gear by pressing the upshift switch once.
5. Repeat this sequence to progressively upshift to 3rd, 4th and 5th (top) gear.
6. To downshift, press the downshift switch once. Remember to close the throttle each time you shift to the next lower gear.

### NOTE:

- \* The transmission cannot be upshifted from neutral to first gear when the engine speed is above 3,000 rpm or the ground speed is above 2 mph (3 km/h).
- \* The transmission cannot be downshifted from 1st gear to neutral when the ground speed is above 2 mph (3 km/h).
- \* If the electric shift system malfunctions, the transmission cannot be shifted by pressing the gearshift switches. See your Honda dealer. (In an emergency, a gear may be selected manually so you may move the vehicle. See Emergency Gear Selection & Operation, page 73 ).

## **⚠ WARNING**

### **POTENTIAL HAZARD**

**Shifting gears without releasing the throttle.**

### **WHAT CAN HAPPEN**

**Could cause loss of control or cause the ATV to overturn.**

### **HOW TO AVOID THE HAZARD**

**Always release the throttle when shifting gears.**

## **If the Shift Switches Do Not Function**

If one or both shift switches do not function, see the following instructions. If proper function cannot be restored, see your Honda dealer.

### ● When the engine is running:

1. Stop the FOURTRAX.
2. Turn the ignition switch to the "OFF" ( O ) position.
3. After the engine stops, turn the ignition switch to the "ON" ( I ) position.
4. Press both shift switches and check that they are functioning.
5. If both switches are functioning, shift into neutral and restart the engine.

If one or both switches are not functioning, see "Emergency Gear Selection & Operation" on page 73 .

### ● When the engine is stopped (ignition switch at "ON" ( I ) ):

1. Turn the ignition switch to the "OFF" ( O ) position.
2. Turn the ignition switch to the "ON" ( I ) position.
3. Press both shift switches and check that they are functioning.
4. If both switches are functioning, shift into neutral and restart the engine.

If one or both switches are not functioning, see "Emergency Gear Selection & Operation" on page 73 .

### ● When the battery is dead:

See "If the Battery is Dead" on page 75 .

## Emergency Gear Selection & Operation

If the shift switches do not operate, use the following procedure to manually select a gear so you may drive the vehicle to a location where it can be loaded and transported to a Honda dealer.

1. Turn the ignition switch to the "ON" ( I ) position.
2. Remove the gear change tool from the storage compartment (page 99 ).
3. Check the neutral indicator.  
If the transmission is in neutral, go to step 4.  
If the transmission is not in neutral, use the gear change tool to shift to neutral so you will be able to start the engine, Refer to "How to Shift Gears Manually" (page 74 ).
4. Apply the parking brake.
5. Press the starter button to start the engine.
6. Select the gear you want. For running on level ground: use 3rd or 4th gear. For mountainous roads: use 2nd or 3rd gear. Refer to "How to Shift Gears Manually."
7. Return the gear change tool to the storage compartment.
8. Get on the FOURTRAX. Drive it at a safe speed to a place where it can be repaired or serviced.

## How to Shift Gears Manually:

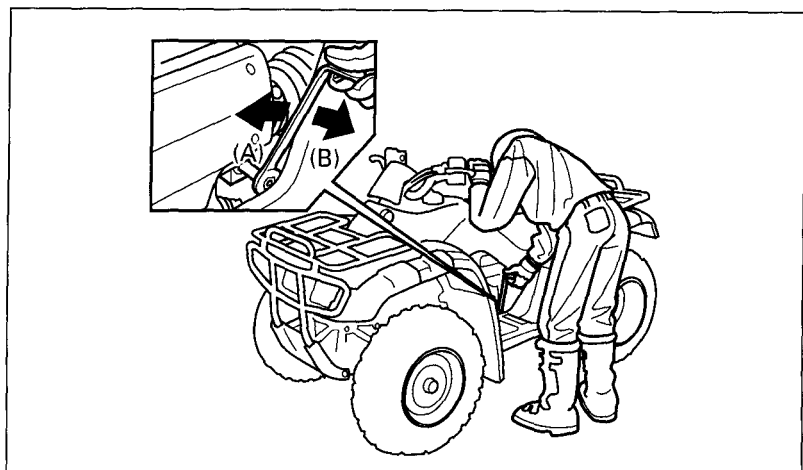


Fig. 3-12      How to shift gears manually  
(A) Downshift (Counterclockwise)  
(B) Upshift (Clockwise)

- \* With the FOURTRAX unoccupied, align the hexagonal hole of the gear change tool with the hexagonal end of the secondary spindle which is located near the left footpeg.
- \* To downshift, turn the gear change tool counterclockwise (A ).  
To upshift, turn the tool clockwise (B ).
- \* If the transmission does not shift, rock the vehicle back and forth and try again.
- \* Return the gear change tool to the storage compartment.

Do not attempt to shift gears manually using the gear change tool while driving.

### NOTE:

If the transmission is shifted manually when the electric shift system is functioning, the system will shutdown automatically and the shift switches will not operate. To reactivate the system, turn the ignition switch to the "OFF" ( O ) position, then turn it back to the "ON" ( I ) position.

### **If the Battery is Dead:**

The electric shift system will operate even if the battery is dead, as long as the engine is running. If the engine is not running, it may be started using the recoil starter. See your Honda dealer to have the battery recharged or replaced.

1. Turn the ignition switch to the "ON" ( I ) position.
2. Remove the gear change tool from the storage compartment (page 99 ).
3. Check if the transmission is in neutral by moving the vehicle back and forth.  
If the transmission is in neutral, the vehicle will move easily. Go to step 4.  
If the transmission is not in neutral, the vehicle will not move. Use the gear change tool to shift to neutral so you will be able to start the engine. Refer to "How to Shift Gears Manually" (page 74 ).
4. Apply the parking brake.
5. Turn the ignition switch to the "OFF" ( O ) position, then turn it back to the "ON" ( I ) position.
6. Use the recoil starter (page 19 ) to start the engine.



## RIDING IN REVERSE

To shift into reverse, first bring the vehicle to a complete stop and make sure the transmission is in neutral. Then follow these procedures:

1. Be sure there are no obstacles or people in the way.
2. While pushing the reverse selector knob in, squeeze the rear brake lever, then press the downshift switch once to shift into "R" (Reverse) gear.
3. Release the rear brake lever.
4. Open the throttle gradually and ride slowly. Do not open the throttle suddenly or make abrupt turns.
5. To stop, close the throttle and gradually apply both the front and rear brakes. Do not abruptly apply the rear brake by itself.
6. To shift out of reverse and into neutral, press the upshift switch once to shift into "N" (Neutral) gear.

### NOTE:

The transmission cannot be shifted from neutral back into reverse when the engine speed is above 3,000 rpm or speed of your FOURTRAX is above 2 mph (3 km/h).

While reading this manual, remember:

### **⚠ WARNING**

Indicates a strong possibility that serious injury or death may result if instructions are not followed.

## **⚠ WARNING**

### **POTENTIAL HAZARD**

Improperly operating in reverse.

### **WHAT CAN HAPPEN**

You could hit an obstacle or person behind you, resulting in serious injury.

### **HOW TO AVOID THE HAZARD**

When you select reverse gear, make sure there are no obstacles or people behind you. When it is safe to proceed, go slowly.

## **⚠ WARNING**

### **POTENTIAL HAZARD**

Applying only the rear brake abruptly when operating in reverse gear.

### **WHAT CAN HAPPEN**

The front wheels could lift off the ground and the ATV could overturn backwards.

### **HOW TO AVOID THE HAZARD**

Carefully apply both the front and rear brakes when stopping in reverse gear.

## **MAKING TURNS**

To make a turn on level ground, steer the handlebars and lean your body toward the inside of the turn. (Fig 3-13) Leaning helps balance the vehicle, and it feels more comfortable. Leaning into a turn is an important technique to master in riding a FOURTRAX.

To make a sharp turn at low speed, it helps to shift your body slightly forward on the seat (Fig 3-13), and lean inside, as you steer the handlebars. Shifting weight forward allows the rear wheels to turn easier, and it also improves front-wheel steering. Remember to shift your body forward to make sharp low-speed turns and whenever you turn while accelerating from a full stop.

Apply the throttle slowly and gradually when you turn and start up at the same time. During other turns, use the throttle to maintain the desired speed throughout the turn. Practice these techniques on level ground until you are confident in making turns.

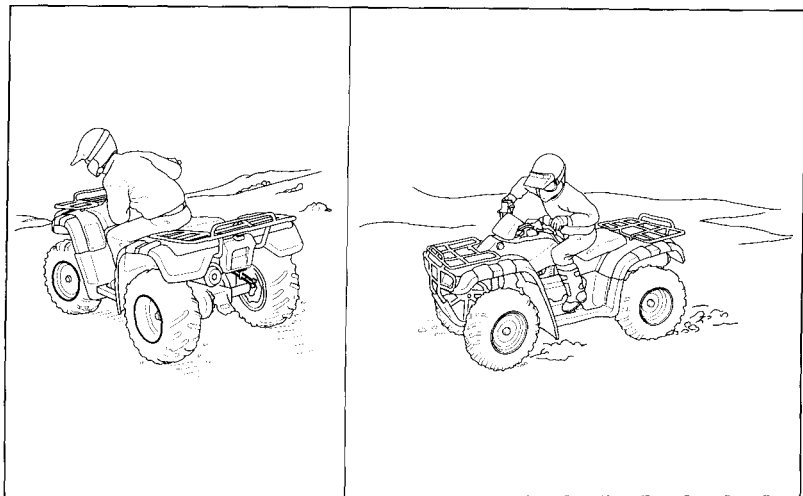


Fig. 3-13

Lean your body to the inside of a turn and forward.

## **⚠ WARNING**

### **POTENTIAL HAZARD**

Turning improperly.

### **WHAT CAN HAPPEN**

The ATV can go out of control, causing a collision or overturn.

### **HOW TO AVOID THE HAZARD**

Always follow proper procedures for turning as described in this Owner's Manual.

Practice turning at low speeds before attempting to turn at faster speeds.

Do not turn at excessive speeds.

The terrain surface can be a major factor affecting turns. Skidding during a turn is more likely to occur on slippery surfaces, such as snow, ice, mud and loose gravel. If you skid on ice, you may lose all directional control. To avoid skidding on slippery terrain, keep your speed low and ride with caution.

If your FOURTRAX skids sideways during a turn, steer in the direction of the skid. Avoid hard braking or accelerating until you have regained directional control.

## **⚠ WARNING**

### **POTENTIAL HAZARD**

**Skidding or sliding improperly.**

### **WHAT CAN HAPPEN**

**You may lose control of this ATV.**

**You may also regain traction unexpectedly, which may cause the ATV to overturn.**

### **HOW TO AVOID THE HAZARD**

**Learn to safely control skidding by practicing at low speeds and on level, smooth terrain.**

**On extremely slippery surfaces, such as ice, go slowly and be very cautious in order to reduce the chance of skidding or sliding out of control.**

## **RIDING UP HILLS**

The FOURTRAX's ability to safely climb hills largely depends on the rider's skill and judgment. Begin by practicing on smooth, gentle slopes. As you gain experience, you'll learn the hazards and your own limitations. You may then proceed to ride on more difficult terrain. However, you must be able to decide which hills or hazards might cause the FOURTRAX to overturn. Avoid excessively steep hills.

### **⚠ WARNING**

#### **POTENTIAL HAZARD**

**Operating on excessively steep hills.**

#### **WHAT CAN HAPPEN**

**The vehicle can overturn more easily on extremely steep hills than on level surfaces or small hills.**

#### **HOW TO AVOID THE HAZARD**

**Never operate the ATV on hills too steep for the ATV or for your abilities.**

**Practice on smaller hills before attempting larger hills.**

When climbing hills, you must shift weight toward the front wheels to help keep them on the ground. To do this, shift your body slightly forward on the seat and lean forward. For greater weight shift, move your body farther forward and lean forward.

To climb a hill, take a running start in an appropriate gear and speed for the conditions. Maintain a steady speed as you ascend the hill.

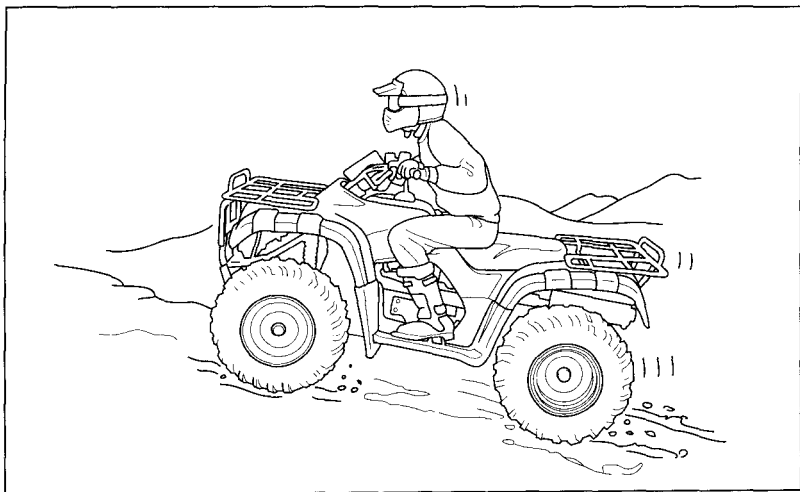


Fig. 3-14

Shift weight forward when climbing hills.

## **⚠ WARNING**

### **POTENTIAL HAZARD**

**Climbing hills improperly.**

### **WHAT CAN HAPPEN**

**Could cause loss of control or cause the ATV to overturn.**

### **HOW TO AVOID THE HAZARD**

**Always follow proper procedures for climbing hills as described in this Owner's Manual.**

**Always check the terrain carefully before you start up any hill.**

**Never climb hills with excessively slippery or loose surfaces.**

**Shift your weight forward.**

**Never open the throttle suddenly or make sudden gear changes.  
The ATV could flip over backward.**

**Never go over the top of any hill at high speed. An obstacle, a sharp drop, or another vehicle or person could be on the other side of the hill.**

If you incorrectly estimate climbing capability or terrain conditions, the FOURTRAX may not have enough power or traction to continue uphill.

If you are about to lose all forward speed:

1. Using the front and rear brakes together, bring the FOURTRAX to a stop with the vehicle pointed straight uphill.



2. Get off the FOURTRAX while you continue holding the brakes.
3. Shift into neutral, set the parking brake and turn the engine off.
4. Then assess the situation.

If the FOURTRAX starts rolling backwards before you begin braking, keep your weight uphill, apply the front brakes first, then carefully apply the rear brake as well. Do not apply the rear brake only or abruptly if you are rolling backwards, or the vehicle may overturn. If the FOURTRAX continues sliding backwards after you've applied the brakes, get off and away from the vehicle.

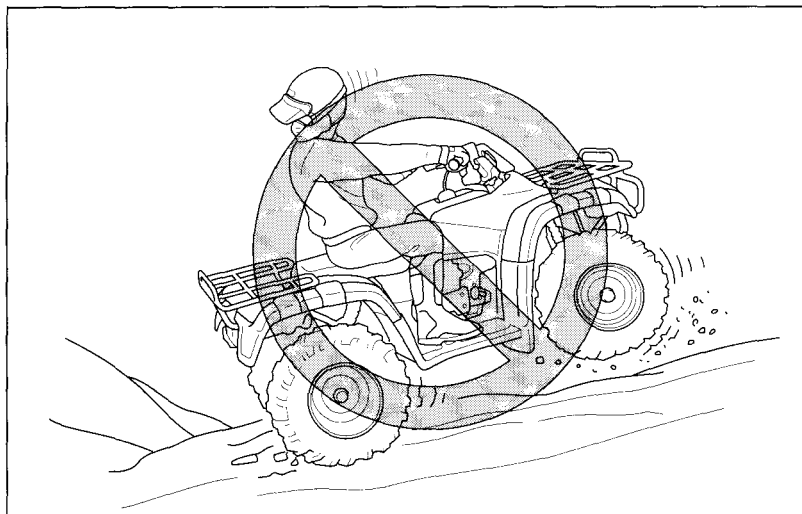


Fig. 3-15 If you roll backwards down a hill, don't apply the rear brake abruptly.

## **WARNING**

### **POTENTIAL HAZARD**

Stalling, rolling backwards or improperly dismounting while climbing a hill.

### **WHAT CAN HAPPEN**

Could result in ATV overturning.

### **HOW TO AVOID THE HAZARD**

Use proper gear and maintain steady speed when climbing a hill.

#### **If you lose all forward speed:**

Keep weight uphill.

Apply the brakes.

Lock parking brake, after you are stopped.

#### **If you begin rolling backwards:**

Keep weight uphill.

Never apply the rear brake abruptly while rolling backwards.

Apply the front brake.

When fully stopped, apply rear brake as well, and then lock parking brake.

Dismount on the uphill side if the vehicle is not pointed straight uphill.

Back the vehicle down the hill, following the instructions in this Owner's Manual.

If the hill is not too steep and you have good footing, you may be able to walk the FOURTRAX back down the hill. Make sure your intended path is clear in case you lose control of the FOURTRAX.

If you decide you can walk the FOURTRAX safely:

1. Stand with your body facing downhill, beside the vehicle so you can reach the rear brake lever with your right hand (see Figure 3-16).
2. Be sure your legs are clear of the wheels.
3. Check your footing.
4. Then slowly and carefully back the FOURTRAX down the hill using the rear brake lever to control speed.
5. If you lose control of the FOURTRAX, for your safety, get away from the vehicle.

If the hill is too steep or too slippery, or if you have any doubt whether you can safely walk the FOURTRAX back down the hill, leave the vehicle where it is and get help. If possible, block the wheels so the vehicle won't roll backwards.

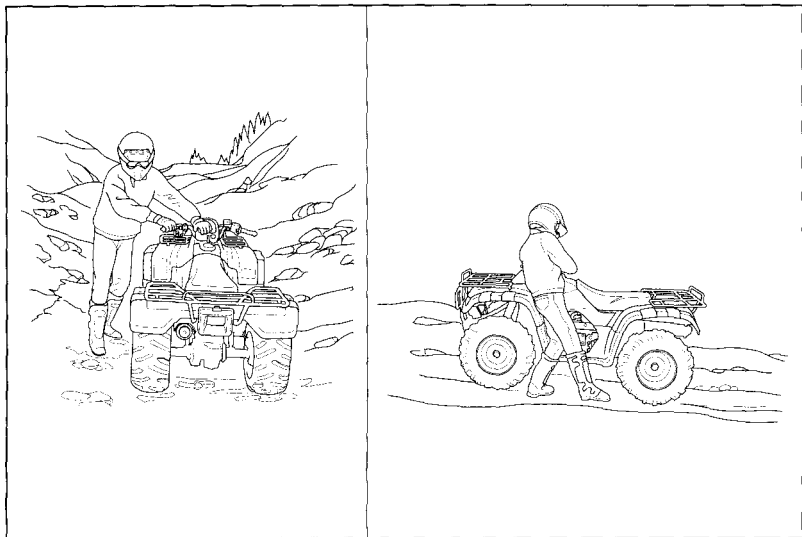


Fig. 3-16 Be sure your legs are clear of the wheels.

Body position for backing down a hill.

While reading this manual, remember:

**⚠ WARNING** Indicates a strong possibility that serious injury or death may result if instructions are not followed.

## RIDING DOWN HILLS

It's usually advisable to descend hills with the FOURTRAX pointed straight downhill. Avoid angles that would cause the vehicle to lean sharply to one side.

As you approach a downhill, stop and survey the terrain below. Never ride past the limit of your visibility.

When you've selected a safe downhill path, shift into a lower gear, shift your weight back with your arms extended and braced against the handlebars, then go down slowly with the throttle closed.

Use mainly the rear brake to control speed. Avoid using the front brake hard or abruptly when riding down hills.

Remember, braking effectiveness is reduced on any hill with a loose surface.

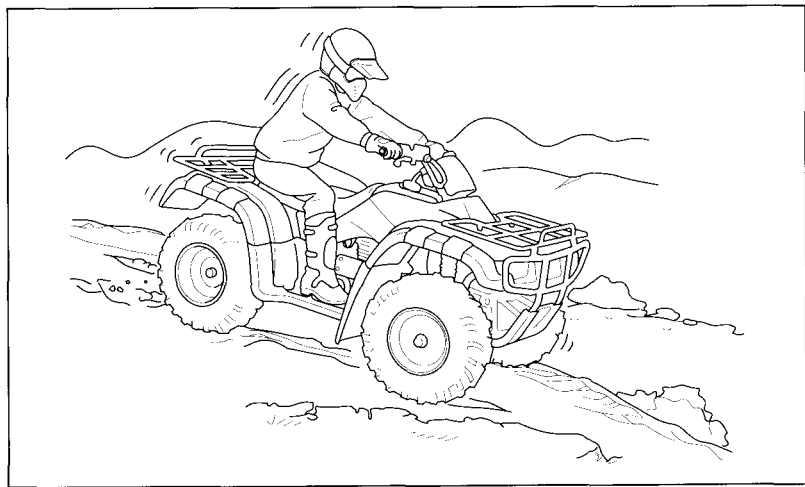


Fig. 3-17

On downhills, shift your weight back.

## **⚠ WARNING**

### **POTENTIAL HAZARD**

Going down a hill improperly.

### **WHAT CAN HAPPEN**

Could cause loss of control or cause ATV to overturn.

### **HOW TO AVOID THE HAZARD**

Always follow proper procedures for going down hills as described in this Owner's Manual.

Note: a special technique is required when braking as you go down a hill.

Always check the terrain carefully before you start down any hill.

Shift your weight backward.

Never go down a hill at high speed.

Avoid going down a hill at an angle that would cause the vehicle to lean sharply to one side. Go straight down the hill where possible.

## CROSSING SLOPES

To maintain balance and stability when riding across a slope, you need to shift weight toward the uphill side of the vehicle. To do this, move your body off the center of the seat and lean toward the uphill side. On a slippery or loose surface, you may also need to steer slightly uphill to maintain a straight course across the slope. Avoid crossing hills that are excessively steep, slippery or rough.

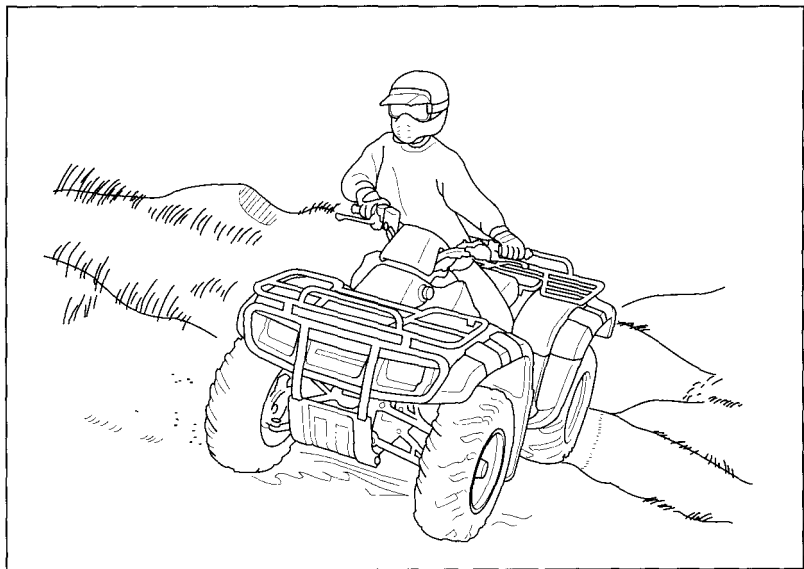


Fig. 3-18

Shift weight uphill when crossing slopes.

## **MAKING TURNS ON SLOPES**

Compared to riding on level ground, you may need to shift more weight and lean more when making turns on slopes. Do not make turns on any slopes until you have first mastered the techniques for making turns on level terrain.

Begin by practicing turning on gentle, smooth slopes before attempting turns on steeper or more difficult terrain. Avoid making turns on very steep, rough or slippery hills.

### **⚠ WARNING**

#### **POTENTIAL HAZARD**

**Improperly crossing hills or turning on hills.**

#### **WHAT CAN HAPPEN**

**Could cause loss of control or cause ATV to overturn.**

#### **HOW TO AVOID THE HAZARD**

**Never attempt to turn the ATV around on any hill until you have mastered the turning technique as described in this Owner's Manual on level ground.**

**Be very careful when turning on any hill.**

**Avoid crossing the side of a steep hill if possible.**

#### **When crossing the side of a hill:**

**Always follow proper procedures as described in this Owner's Manual.**

**Avoid hills with excessively slippery or loose surfaces.**

**Shift your weight to the uphill side of the ATV.**



## RIDING OVER OBSTACLES

Watch out for bumps, rain ruts, potholes and other obstacles in the terrain. When you approach any obstacle, reduce your speed and be prepared to stop.

Never try to ride over large obstacles, such as large rocks or fallen logs.

### **WARNING**

#### **POTENTIAL HAZARD**

**Improperly operating over obstacles.**

#### **WHAT CAN HAPPEN**

**Could cause loss of control or a collision. Could cause the ATV to overturn.**

#### **HOW TO AVOID THE HAZARD**

**Before operating in a new area, check for obstacles.**

**Never attempt to ride over large obstacles, such as large rocks or fallen trees.**

**When you go over obstacles, always follow proper procedures as described in this Owner's Manual.**

## RIDING THROUGH WATER

Your FOURTRAX is designed to travel through water up to approximately 10 inches deep. Before crossing a stream, make sure the water is not too deep or flowing too fast.

Choose a path where both banks have gradual slopes, then proceed through the water at a slow, steady speed. Watch out for submerged obstacles and slippery rocks. Avoid getting the spark plug or air cleaner wet, as this would cause the engine to stop.

Riding through water can make the brakes less effective than normal. After leaving water, always test both the front and rear brakes. If necessary, apply the brakes repeatedly until they dry out and operate normally. If the brakes don't regain effectiveness, stop your FOURTRAX and follow the procedures on page 138.

### **WARNING**

#### **POTENTIAL HAZARD**

**Operating this ATV through deep or fast flowing water.**

#### **WHAT CAN HAPPEN**


**Tires may float, causing loss of traction and loss of control, which could lead to an accident.**

#### **HOW TO AVOID THE HAZARD**

**Never operate this ATV in fast flowing water or in water deeper than that specified in this Owner's Manual.**

**Remember that wet brakes may have reduced stopping ability. Test your brakes after leaving water. If necessary, apply them several times to let friction dry out the linings.**

## PARKING

Always choose a level place to park. After bringing your FOURTRAX to a stop, hold the brakes while you shift into neutral. Then set the parking brake and turn the ignition switch OFF (  ). If you're through riding for the day, also turn the fuel valve OFF.

If it is necessary to start the engine when your FOURTRAX is stopped on a grade in gear, rock the vehicle back and forth to allow shifting the transmission into neutral.

While reading this manual, remember:

### **WARNING**

Indicates a strong possibility that serious injury or death may result if instructions are not followed.

## MAINTENANCE AND REPAIRS

### EMISSION REQUIREMENTS (USA only)

The California Air Resources Board (CARB) requires that your FOURTRAX comply with applicable exhaust emissions standards during its useful life, when operated and maintained according to the instructions provided.

The Vehicle Emission Control Information Label (1) is attached on the right side of the frame.

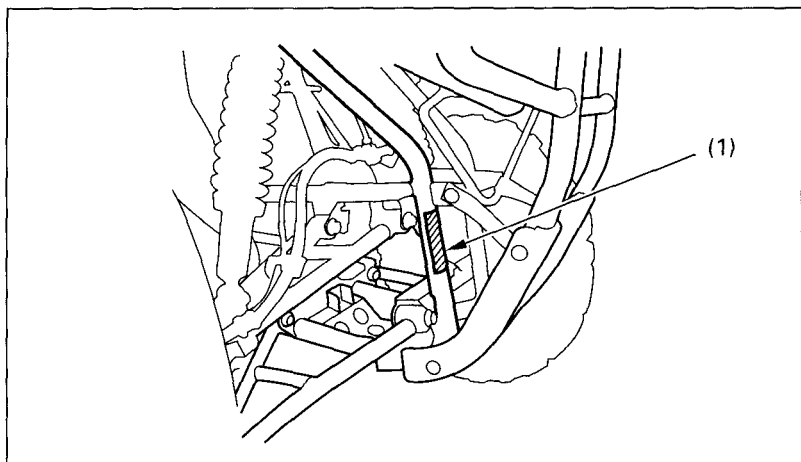


Fig. 3-19

(1) Vehicle Emission Control Information Label

## MAINTENANCE SCHEDULE

		FREQUENCY  ITEMS	Whichever comes first	INITIAL MAINTENANCE	REGULAR MAINTENANCE INTERVAL		Refer to page
			⇒	mi	600	1200	
				km	1000	2000	
			NOTE	HOURS	20	100	
EMISSION RELATED ITEMS	*	FUEL LINE				I	—
	*	THROTTLE OPERATION				I	104
	*	CARBURETOR CHOKE				I	109
		AIR CLEANER	(NOTE 1)			C	105—107
		AIR CLEANER HOUSING DRAIN TUBE	(NOTE 2)			I	108
		SPARK PLUG				I	118—119
	*	VALVE CLEARANCE			I	I	119
		ENGINE OIL			R	R	37, 112—116
		ENGINE OIL FILTER			R	R	112—116
	*	ENGINE IDLE SPEED			I	I	110

I: Inspect and Clean, Adjust,  
Lubricate or Replace if necessary.

C: Clean R: Replace

A: Adjust L: Lubricate

		FREQUENCY  ITEMS	Whichever comes first  ⇒	INITIAL		REGULAR		Refer to page
				MAINTENANCE	MAINTENANCE	INTERVAL		
				mi	100	600	1200	
				km	150	1000	2000	
		NOTE	HOURS	20	100	200		
NON EMISSION RELATED ITEMS		REAR FINAL GEAR CASE OIL			(R: EVERY 2YEARS)	I	117	
	*	BRAKE FLUID	(NOTE3)			I	I	132
	*	BRAKE SHOE WEAR	(NOTE1)				I	137
		BRAKE SYSTEM			I	I	I	129 – 138
	*	REVERSE LOCK SYSTEM			I	I	I	121
		SKID PLATES,ENGINE GUARD				I	I	145
	*	CLUTCH SYSTEM			I	I	I	120
	*	SUSPENSION				I	I	—
	*	SPARK ARRESTER				C	C	146
	*	NUTS, BOLTS, FASTENERS			I		I	—
	**	WHEELS/TIRES			I	I	I	139 -- 143
	**	STEERING SHAFT HOLDER BEARINGS					I	—
	**	STEERING SYSTEM					I	—

\* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

\*\*IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

NOTES: 1. Service more frequently when riding in dusty areas, sand or snow.  
2. Service more frequently after riding in very wet or muddy conditions.  
3. Replace every 2 years. Replacement requires mechanical skill.

## MAINTENANCE PRECAUTIONS

Before beginning any maintenance or repairs, read the appropriate instructions and warnings and make sure you have all the tools and materials you will need.

Choose a clean area that is level and has good ventilation and good light. Make sure the engine is off unless otherwise instructed. If you need to replace any parts, remember to use only new genuine Honda parts or their equivalents.

### **⚠ WARNING**

#### **POTENTIAL HAZARD**

**Failure to properly maintain the ATV.**

#### **WHAT CAN HAPPEN**

**Increases the possibility of an accident or equipment damage.**

#### **HOW TO AVOID THE HAZARD**

**Always follow the inspection and maintenance procedures and schedules described in this Owner's Manual.**

**Use only genuine Honda replacement parts or parts of equivalent quality.**

### **⚠ WARNING**

#### **POTENTIAL HAZARD**

**Performing maintenance operations with the engine running.**

#### **WHAT CAN HAPPEN**

**Increases the chances of injury from moving parts or hot surfaces.**

#### **HOW TO AVOID THE HAZARD**

**Unless otherwise stated, always turn the engine off before performing any maintenance operations.**

## TOOL KIT

A tool kit (1) (Fig. 4-1) and gear change tool (2) are provided with your FOURTRAX and stored in the storage compartment below the rear cargo rack.

The tools in the kit are sufficient to perform routine maintenance and simple repairs. Any extensive work requiring additional tools should be performed by your authorized Honda dealer.

The tool kit includes the following items:

- \* Standard/Phillips screwdriver
- \* Screwdriver handle
- \* 10 × 12 mm open end wrench
- \* 14 × 17 mm open end wrench
- \* Spark plug wrench and handlebar
- \* Pliers
- \* Tool case

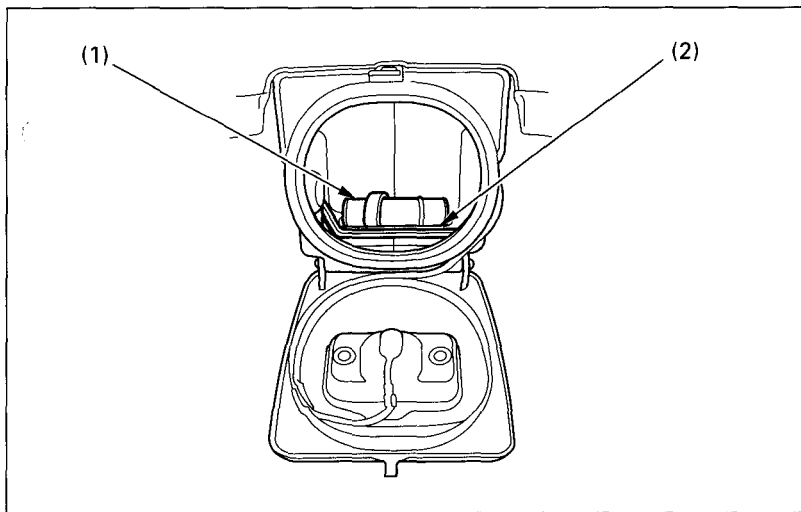


Fig. 4-1

- (1) Tool kit
- (2) Gear change tool

While reading this manual, remember:

**▲WARNING** Indicates a strong possibility that serious injury or death may result if instructions are not followed.



## FUEL SYSTEM

### FUEL

#### Refueling

The fuel tank capacity, including reserve, is:

3.43 US gal (13.0 ℓ, 2.86 Imp gal)

The reserve fuel supply is:

0.85 US gal (3.2 ℓ, 0.70 Imp gal)

To open the fuel fill cap (1), pull out the breather tube (2) from the handle cover hole (3). Then turn the fuel fill cap counterclockwise.

Do not overfill (make sure there is no fuel in the filler neck (4)).

After refueling, be sure to tighten the fuel fill cap firmly by turning it clockwise until it clicks.

Insert the breather tube into the handle cover hole.

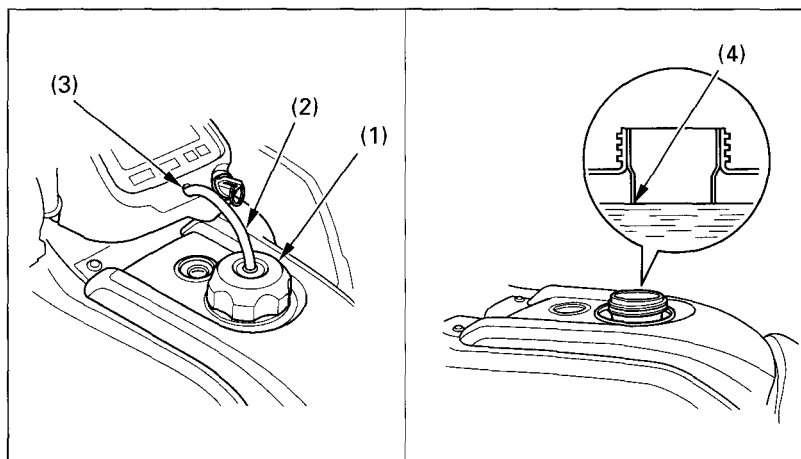


Fig. 4-2

- (1) Fuel fill cap
- (2) Breather tube
- (3) Handlebar cover hole

- (4) Filler neck

## **⚠ WARNING**

### **POTENTIAL HAZARD**

**Refueling this ATV or handling fuel improperly.**

### **WHAT CAN HAPPEN**

**The fuel could explode or ignite.**

### **HOW TO AVOID THE HAZARD**

**Always refuel this ATV and handle fuel in a well-ventilated area with the engine off. Do not smoke or allow flames or sparks in the area where fuel is handled.**

**Do not overfill the tank. Be careful not to spill fuel when refueling. After refueling, make sure the fuel fill cap is closed properly and securely.**

**If any fuel is spilled, make sure the area is dry before starting the engine.**

## **⚠ WARNING**

### **POTENTIAL HAZARD**

**Prolonged contact of fuel with the skin.  
Breathing fuel vapor.**

### **WHAT CAN HAPPEN**

**The fuel can cause skin irritation.  
Fuel vapor could cause lung damage.**

### **HOW TO AVOID THE HAZARD**

**Avoid repeated or prolonged contact of fuel with the skin or breathing of fuel vapor.**

**KEEP OUT OF REACH OF CHILDREN.**

### **Fuel Recommendations**

Your engine is designed to use any gasoline that has a pump octane number of 86 or higher. (Gasoline pumps at service stations normally display the pump octane number.)

We recommend unleaded fuel because it produces fewer engine and spark plug deposits and extends the life of the exhaust system. Never use stale or contaminated gasoline or an oil/gasoline mixture. Avoid getting dirt, dust or water in the fuel tank.

Using a lower octane than recommended can cause persistent “pinging” or heavy “spark knock” (a metallic rapping noise). If severe, these can lead to engine damage.

#### **CAUTION:**

**If “spark knock” or “pinging” occurs at a steady engine speed under normal load, change brands of gasoline. If spark knock or pinging persists, consult your authorized Honda dealer. Failure to do so is considered misuse, and damage caused by misuse is not covered by Honda’s Limited Warranty.**

## **Oxygenated Fuels**

Some conventional gasolines are being blended with alcohol or an ether compound. These gasolines are collectively referred to as oxygenated fuels. To meet clean air standards, some areas of the United States and Canada use oxygenated fuels to help reduce emissions.

If you use an oxygenated fuel, be sure it is unleaded and meets the minimum octane rating requirement.

Before using an oxygenated fuel, try to confirm the fuel's contents. Some states/provinces require this information to be posted on the pump.

The following are the EPA approved percentages of oxygenates:

### **ETHANOL (ethyl or grain alcohol) 10 % by Volume**

You may use gasoline containing up to 10 % ethanol by volume. Gasoline containing ethanol may be marketed under the name "Gasohol".

### **MTBE (Methyl Tertiary Butyl Ether) 15 % by Volume**

You may use gasoline containing up to 15 % MTBE by volume.

### **METHANOL (methyl or wood alcohol) 5 % by Volume**

You may use gasoline containing up to 5 % methanol by volume as long as it also contains cosolvents and corrosion inhibitors to protect the fuel system. Gasoline containing more than 5 % methanol by volume may cause starting and/or performance problems. It may also damage metal, rubber, and plastic parts of your fuel system.

If you notice any undesirable operating symptoms, try another service station or switch to another brand of gasoline.

Fuel system damage or performance problems resulting from the use of an oxygenated fuel containing more than the percentages of oxygenates mentioned above are not covered under warranty.

## THROTTLE

### Throttle Cable and Lever

Check the condition of the throttle cable and the operation of the throttle lever. Make sure the cable does not bind or interfere with smooth operation of the throttle in any steering position. If the cable is worn or kinked, have it replaced by your Honda dealer.

### Throttle Free Play

Throttle free play, measured at the tip of the throttle lever (Fig. 4-3), should be:

1/8–5/16 in (3–8 mm)

To adjust throttle free play:

1. Slide the rubber sleeve (1) back to expose the throttle cable adjuster (2).
2. Loosen the lock nut (3), then turn the adjuster to obtain the correct free play.
3. Tighten the lock nut and reinstall the sleeve.

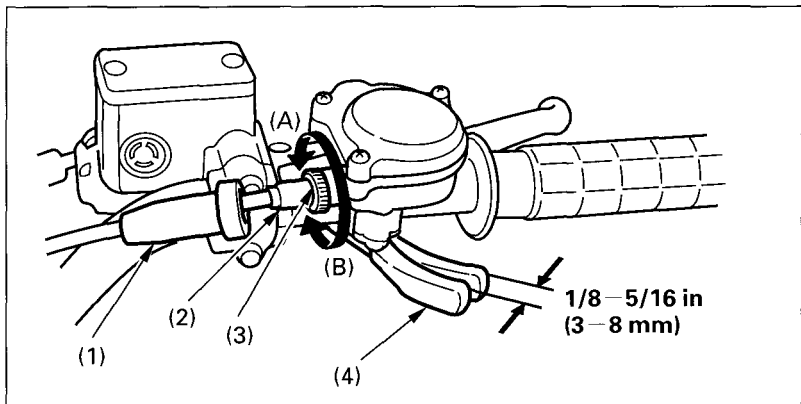


Fig. 4-3

(1) Rubber sleeve  
(2) Cable adjuster  
(3) Lock nut

(4) Throttle lever  
(A) To decrease free play  
(B) To increase free play

### Other Checks

Check the throttle cable for kinks and signs of wear that could cause stretching or failure. Lubricate the throttle cable with a commercially available lubricant to prevent premature wear and corrosion.

## AIR CLEANER

### Air Cleaner

The air cleaner accumulates dust and must be cleaned periodically. If the FOURTRAX is ridden in dusty areas, the air cleaner must be cleaned at more frequent intervals than specified in the Maintenance Schedule.

If the FOURTRAX is submerged in water, the air cleaner should be checked and water should be drained from the air cleaner housing before starting the engine.

To clean the air cleaner:

1. Remove the seat by pulling up the seat lock lever (1) (Fig. 4-4).
2. Unlatch the four retainer clips (2) and remove the air cleaner housing cover (3).

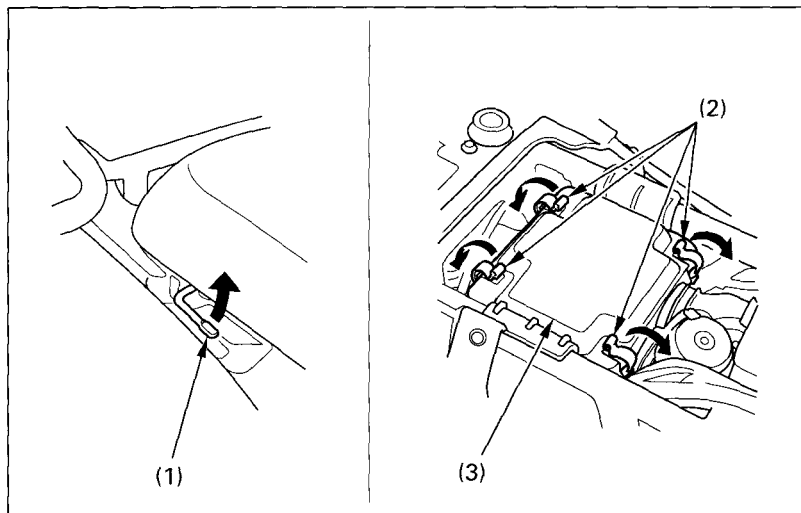


Fig. 4-4 (1) Seat lock lever

(2) Retainer clips  
(3) Air cleaner housing cover

3. Remove the screws (1) (Fig. 4-5) and remove the air cleaner assembly (2) from the air cleaner housing.
4. Unscrew the clamp (3).
5. Remove the air cleaner (4) from the air cleaner body (5).

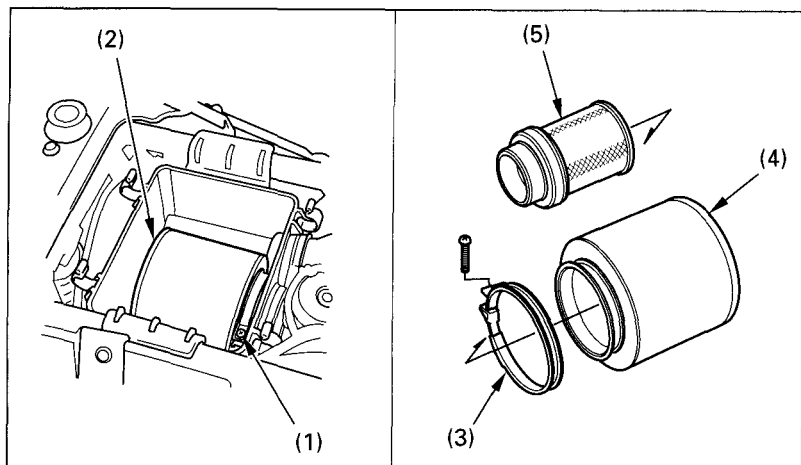


Fig. 4-5 (1) Screw (2) Air cleaner assembly (3) Clamp (4) Air cleaner (5) Air cleaner body

6. Gently wash the air cleaner in clean, non-flammable (high flash point) solvent such as kerosene — not gasoline. Allow the air cleaner to dry thoroughly before applying oil. A wet air cleaner will not fully absorb the oil.

## **⚠ WARNING**

### **POTENTIAL HAZARD**

**Using gasoline or low flash point solvents for cleaning ATV parts.**

### **WHAT CAN HAPPEN**

**A fire or explosion could result.**

### **HOW TO AVOID THE HAZARD**

**Use only a nonflammable or high flash point solvent to clean ATV parts.**

7. Soak the air cleaner in Pro Honda Foam Filter Oil or an equivalent [Canadian Vehicles: gear oil (SAE 80–90)] until saturated, then squeeze out the excess oil.

**CAUTION:**

**Twisting the air cleaner when squeezing out excess oil could damage the air cleaner.**

8. Reassemble by reversing the disassembly sequence.

**Dust cover**

If the dust cover (1) (Fig. 4-6) is dirty, clean it.

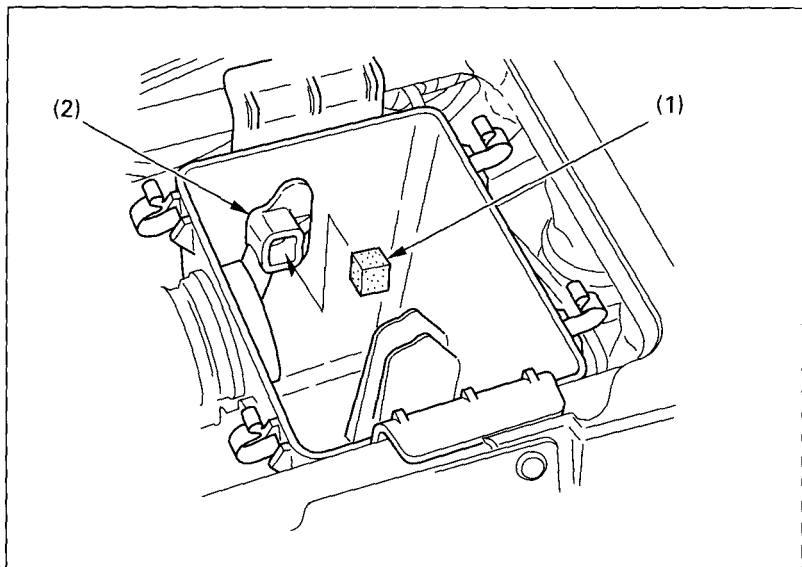


Fig. 4-6 (1) Dust cover  
(2) Breather joint



### Air Cleaner Housing Drain Tube

The air cleaner housing drain tube (Fig. 4-7) should be serviced in accordance with the Maintenance Schedule. (Riding through water may require more frequent inspection.) If deposits can be seen in the drain tube, the tube must be cleaned before starting the vehicle.

#### To clean the drain tube:

1. Remove the drain tube (1) by removing the clip (2).
2. Drain the deposits.
3. Reinstall the drain tube, securing it with the clip.

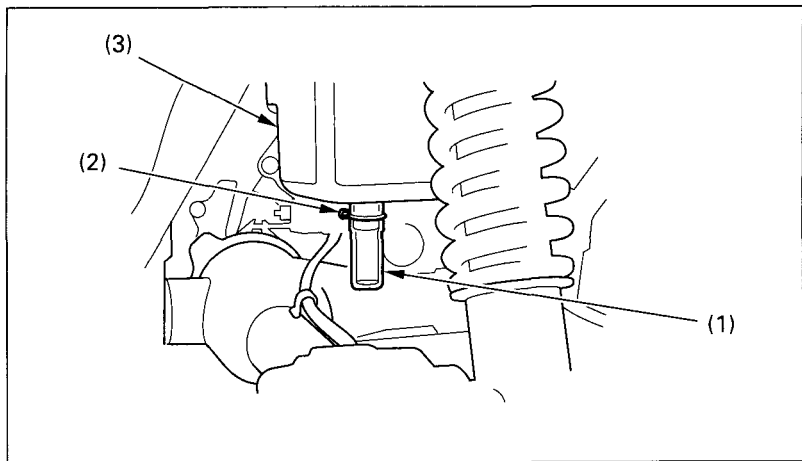


Fig. 4-7

(1) Drain tube  
(2) Clip

(3) Air cleaner housing

## CARBURETOR

### Choke Cable and Knob

Check the condition of the choke cable (Fig. 4-8) and the operation of the choke knob (2). If the cable is damaged or kinked, have it replaced by your Honda dealer.

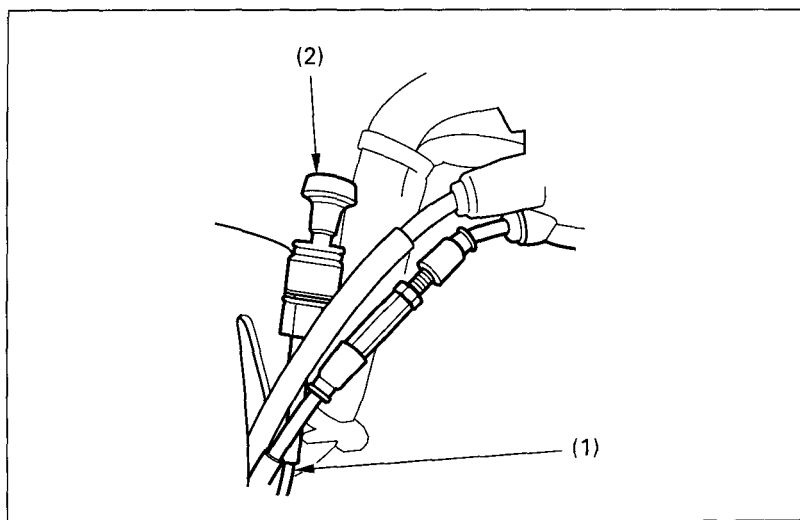


Fig. 4-8

(1) Choke cable

(2) Choke knob

## Adjusting Idle Speed

### NOTE:

Do not try to compensate for faults in other systems by adjusting the carburetor.

### To adjust the idle speed:

1. Warm up the engine. The engine must be warm for accurate idle adjustment. Ten minutes of stop-and-go riding is sufficient.
2. Adjust idle speed by turning the throttle stop screw (Fig. 4-9).

Idle Speed:

$1,400 \pm 100$  rpm

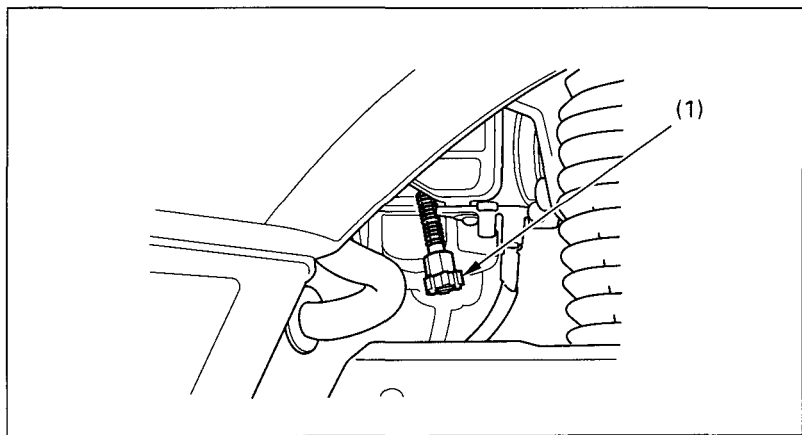


Fig. 4-9 (1) Throttle stop screw

### **High Altitude Adjustment**

When operating this FOURTRAX at altitudes ranging above 3,000 feet (1,000 m), the air-fuel mixture becomes overly rich. This may result in poor engine performance and increased fuel consumption.

A high altitude jet is available to compensate for high altitude richness. For those who are mechanically proficient and have the necessary tools, installation and adjustment procedures are given in the official Honda Service Manual available from your Honda dealer. All others should have this carburetor modification performed by an authorized Honda dealer.

#### **CAUTION:**

**Sustained operation with the high altitude jet at altitudes below 5,000 feet (1,500 m) may cause engine overheating and damage.**

## LUBRICATION

### ENGINE OIL

#### Checking Engine Oil Level and Adding Oil

Check the engine oil level each day before operating your FOURTRAX and add oil if needed.

To check the oil level:

1. Make sure the vehicle is on level ground.
2. Start the engine in a well-ventilated area and let it idle for 5 minutes. If the air temperature is below 10 °C (50 °F), let the engine idle for an additional 5 minutes (a total of 10 minutes).  
An engine that is not warmed sufficiently may give an inaccurate (low) oil level reading.
3. Stop the engine.
4. After a few minutes, remove the dipstick (1) (Fig. 4-10) from the front crankcase cover and wipe it clean.
5. Insert the dipstick without screwing it in, then remove the dipstick and check the oil level. The oil level should be between the upper level mark (2) and the lower level mark (3) on the dipstick.
6. If required, remove the oil filler cap (4) from left side of the crankcase and add the specified oil into the filler cap hole, up to the upper level mark on the dipstick. Do not overfill.
7. Reinstall the oil filler cap and dipstick.

#### CAUTION:

**Running the engine with improper oil level can cause serious engine damage.**

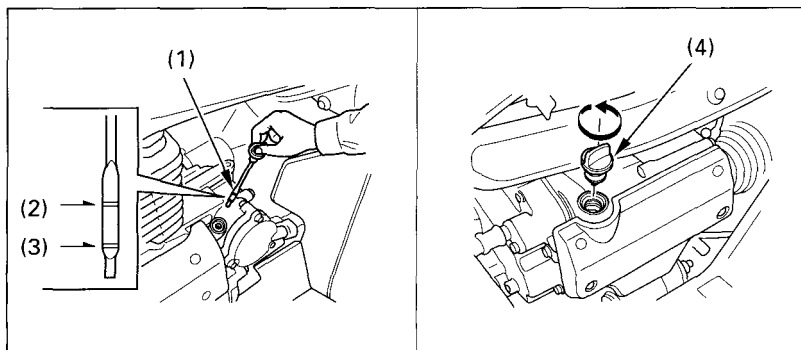


Fig. 4-10 (1) Dipstick  
(2) Upper level mark

(3) Lower level mark  
(4) Oil filler cap

## Engine Oil Recommendations

Recommended Oil Viscosity: SAE 10W-40. Other viscosities shown in Fig.4-11 may be used when the average temperature in your riding area is within the indicated range.

USE PRO HONDA GN4 4-STROKE OIL OR AN EQUIVALENT.

For Canada:

USE HONDA 4-STROKE OIL OR AN EQUIVALENT.

Do not use oils with graphite or molybdenum additives. They may adversely affect clutch operation.

Use only high detergent, premium quality motor oil certified to meet API Service Classification SF or SG. Motor oils intended for Service SF or SG will show this designation on the container. The use of special oil additives is unnecessary and will only increase operating expenses.

### NOTE:

- \* Engine oil is a major factor affecting the performance and service life of the engine. Nondetergent, vegetable, or castor based racing oils are not recommended.

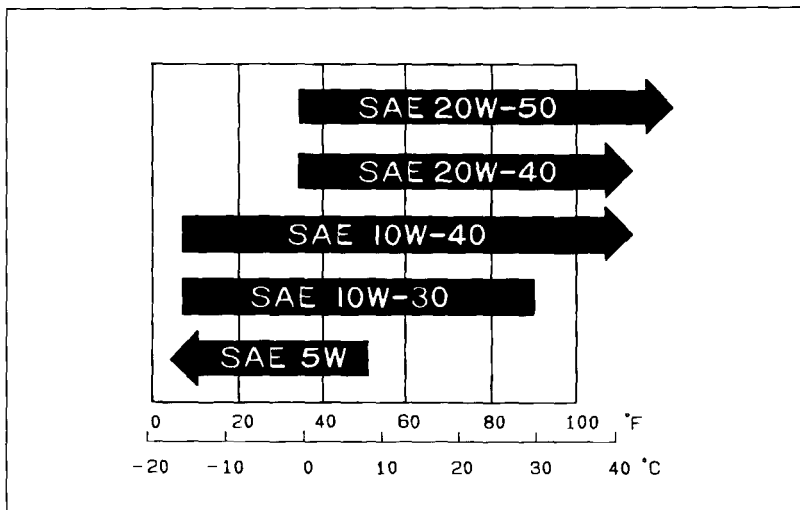


Fig. 4-11

Recommended oil viscosities

## Changing the Engine Oil and Oil Filter

Engine oil should be changed in accordance with the Maintenance Schedule. Use motor oils of the grade and viscosity recommended.

When changing oil, drain the oil from the crankcase while the engine is still warm. This will ensure complete and rapid draining.

To change the oil and oil filter:

1. With the FOURTRAX on level ground, remove the oil filler cap (1) from left side of the crankcase (Fig. 4-12).
2. Place an oil drain pan under the crankcase and remove the oil drain plug (2).

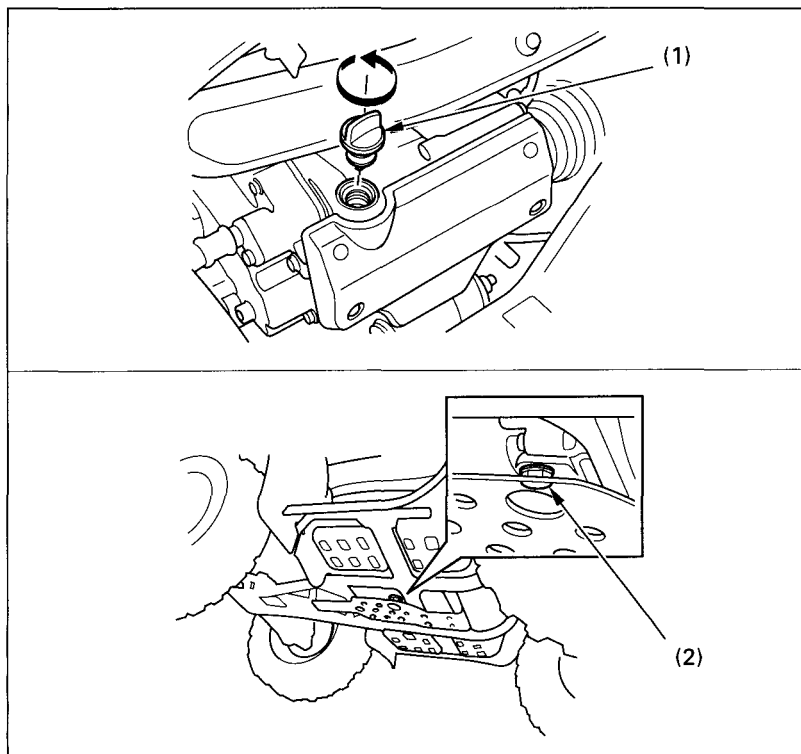


Fig. 4-12

(1) Oil filler cap  
(2) Oil drain plug

3. Remove the oil filter cover (1) (Fig. 4-13) by removing the bolts (2). Let the remaining oil drain out. Discard the oil filter (3).
4. Check that the oil filter cover O-rings (4) are in good condition and then install a new oil filter. Use only the Honda genuine oil filter or a filter of equivalent quality specified for your model. Using the wrong Honda filter or a non-Honda filter which is not of equivalent quality may cause engine damage.
5. Install the filter with the rubber seal (5) facing out, away from the engine. You will see the "OUTSIDE (TOWARDS FILTER COVER)" mark (6) on the filter body, near the seal.

**CAUTION:**

**Improper installation of the oil filter can cause serious engine damage.**

6. Reinstall the oil filter cover (1), making sure the bolts (2) are tightened securely.  
Oil filter bolts torque:  
7 lbf·ft (10 N·m , 1.0 kgf·m)

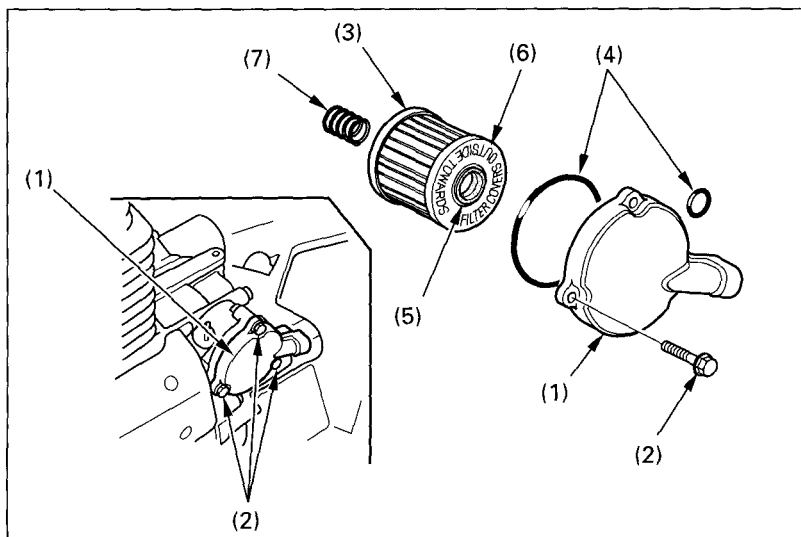


Fig. 4-13 (1) Oil filter cover  
(2) Bolts  
(3) Oil filter  
(4) O-rings

(5) Rubber seal  
(6) OUTSIDE mark  
(7) Spring



7. Check that the drain plug sealing washer is in good condition, then reinstall the oil drain plug securely. If necessary, replace the sealing washer.

Oil drain plug torque:

18 lbf·ft (25 N·m , 2.5 kgf·m)

8. Fill the crankcase with the recommended oil approximately:  
2.6 US qt (2.5 ℓ , 2.2 Imp qt)
9. Reinstall the oil filler cap.
10. Start the engine and let it idle for 5 minutes.
11. Stop the engine and after a few minutes, check the oil level. Make sure the oil is between the upper and lower level marks on the dipstick.  
If necessary, add more oil but do not overfill.

**CAUTION:**

**Running the engine with improper oil level can cause serious engine damage.**

**NOTE:**

- \* To protect the environment, please dispose of used engine oil properly. We suggest you place used oil in a sealed container and take it to your local service station for reclamation. Do not put it in the trash or pour it on the ground.
- \* If a torque wrench was not used for installation, see your authorized Honda dealer before operating the vehicle to verify proper assembly.

While reading this manual, remember:



**WARNING** Indicates a strong possibility that serious injury or death may result if instructions are not followed.

## REAR FINAL GEAR CASE OIL

Change the oil in the rear final gear case when specified by the Maintenance Schedule. Change the oil with the final gear case warm, and the FOURTRAX on level ground to assure complete and rapid draining.

To change the rear final gear case oil:

1. To drain the oil, first place an oil drain pan under the oil drain plug (Fig. 4-14).
2. Remove the oil filler cap (1) and the drain plug (2).
3. After the oil has completely drained, reinstall the drain plug.  
Drain Plug Torque:  
9 lbf-ft (12 N·m, 1.2 kgf-m)
4. Fill the gear case with the recommended oil.

Rear final gear case oil:

2.9 US oz (85 cm<sup>3</sup>, 3.0 imp oz)

Recommended oil:

Honda shaft drive oil or equivalent HYPOID GEAR OIL SAE 80

Remove the oil level check bolt (3).

Make sure the oil level reaches the oil level check hole (4).

5. Install the oil filler cap and oil level check bolt.

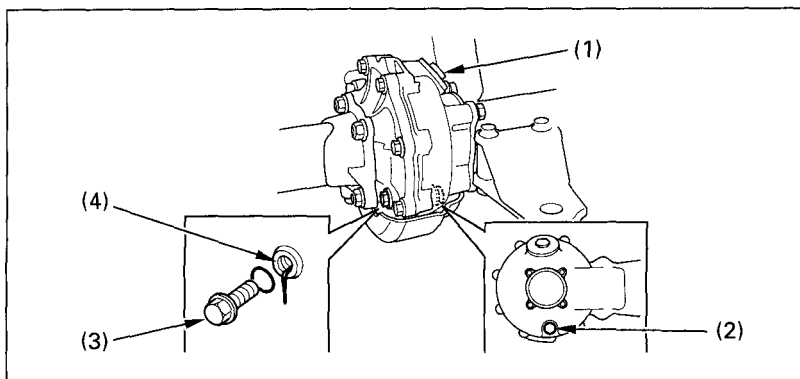


Fig. 4-14

- (1) Oil filler cap
- (2) Drain plug
- (3) Oil level check bolt
- (4) Lower edge of oil level check hole

## ENGINE

### SPARK PLUG

The standard spark plug is: DPR7EA-9 (NGK)  
or X22EPR-U9 (DENSO)

For cold climate (Below 5 °C, 41 °F): DPR6EA-9 (NGK)  
or X20EPR-U9 (DENSO)

#### CAUTION:

**Using a spark plug of incorrect size or heat range can cause serious engine damage.**

To check and change the spark plug:

1. Disconnect the spark plug cap.
2. Clean any dirt from around the spark plug base.
3. Remove the plug with the wrench provided in the tool kit.
4. Visually inspect the spark plug electrodes for wear. The center electrode (Fig. 4-15) should have a flat tip and sharp edges, and the side electrode (3) should not be eroded. If the electrodes and insulator tip appear unusually fouled or burned, we suggest that you contact your authorized Honda dealer.
5. Discard the spark plug if there is apparent wear or if the insulator is cracked or chipped.
6. Using a wire-type feeler gauge, make sure that the spark plug gap is correct. If adjustment is necessary, bend the side electrode carefully.

The gap should be:

0.03—0.04 in (0.8—0.9 mm)

7. With the plug washer attached, thread the spark plug in by hand to prevent cross-threading.
8. After threading by hand, tighten a new spark plug 1/2 turn with the spark plug wrench to compress the washer. If you are reusing a plug, it should only take 1/8—1/4 turn after the plug seats.

### CAUTION:

**The spark plug must be securely tightened. An improperly tightened plug can become very hot and possibly damage the engine.**

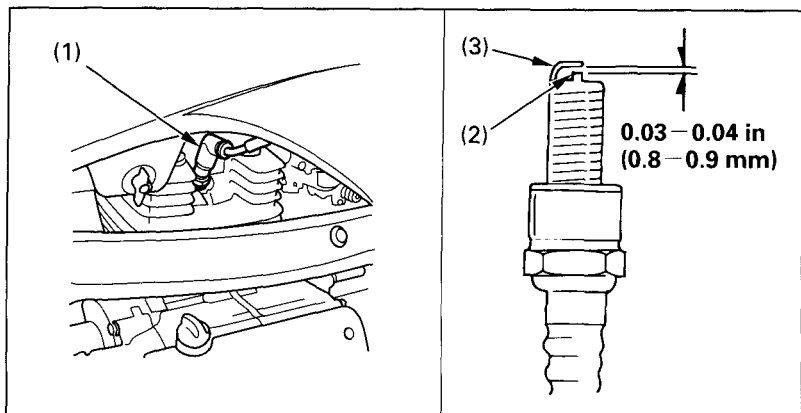


Fig. 4-15 (1) Spark plug cap

(2) Center electrode  
(3) Side electrode

## VALVES

Valve clearance should be:

0.006 in (0.15 mm)

Excessive clearance will cause noise. Insufficient clearance will cause loss of power and possibly damage the valves.

For those who are mechanically proficient and have the proper tools, instructions on adjusting valve clearances are given in the official Honda Service Manual. All others should have valves adjusted by an authorized Honda dealer.

## CLUTCH

### Clutch Adjustment

To adjust the clutch:

1. Make sure the ignition switch is OFF (  $\bigcirc$  ).
2. Loosen the lock nut (Fig. 4-16), and turn the clutch adjuster (2) counterclockwise until you feel slight resistance.
3. Then turn the adjuster 1/4 turn clockwise, and tighten the lock nut to hold the adjuster in this position.
4. After adjustment, start the engine and test ride the FOURTRAX to be sure the clutch is operating properly.

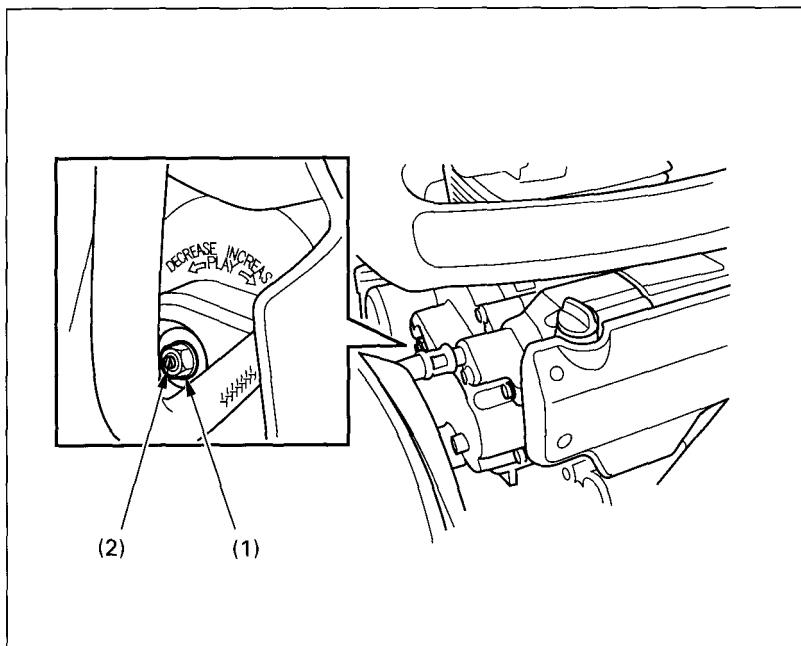


Fig. 4-16 (1) Lock nut

(2) Clutch adjuster

## Reverse Lock System

Measure the reverse assist lever (2) free play. Free play, measured at the lever (2) end near the cable (Fig. 4-17), should be approximately:

1/16–3/16 in (2–4 mm)

### To adjust the free play:

Slide the rubber sleeve (3) back to expose the adjusting nut (4).

Loosen the lock nut (5) and turn the adjusting nut to obtain the correct free play.

Tighten the lock nut and reinstall the sleeve.

### Other Checks:

Check the reverse assist lever and cable for loose connections or other damage. If the cable is worn or kinked, have it replaced by your Honda dealer.

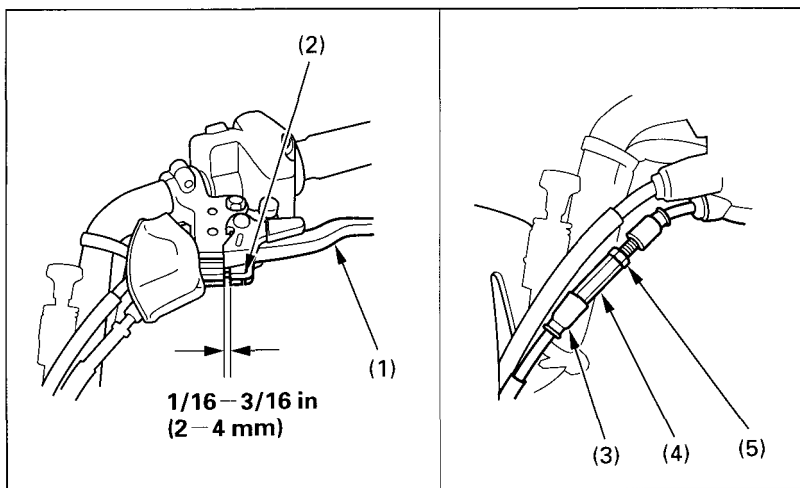


Fig. 4-17 (1) Rear brake lever  
(2) Reverse assist lever

(3) Rubber sleeve  
(4) Adjusting nut  
(5) Lock nut

While reading this manual, remember:

**⚠ WARNING** Indicates a strong possibility that serious injury or death may result if instructions are not followed.

## ELECTRICAL SYSTEM

### BATTERY

Your FOURTRAX battery is located in a compartment under the seat. The battery is sealed, so it is not necessary to check the electrolyte level or add distilled water. If the battery seems weak, see your authorized Honda dealer for information on recharging or replacement. If you replace the battery, choose one that is sealed and equivalent to the original. Be sure to read and follow all safety precautions indicated on the battery.

#### CAUTION:

**Do not attempt to remove the caps from the battery cells as this may damage the battery.**

Although the battery is sealed, it vents explosive gases and should be handled with appropriate care.

### WARNING

#### POTENTIAL HAZARD

**Allowing open flames or sparks near the battery.**

#### WHAT CAN HAPPEN

**Gases may explode and possibly cause injury.**

#### HOW TO AVOID THE HAZARD

**Do not allow open flames or sparks near the battery.**

When the FOURTRAX is to be stored for an extended period, remove the battery from the vehicle and charge it fully. Then store it in a cool, dry place. If the battery is to be left on the vehicle, disconnect the negative cable from the battery terminal.

**WARNING:** Battery posts, terminals and related accessories contain lead and lead compounds. **Wash hands after handling.**

## Battery Removal

1. Make sure the ignition switch is OFF ( ○ ).
2. Remove the seat ( page 144 ).
3. To remove the rear fender lid ( 1 ), remove the clips ( 2 ) ( Fig. 4-18 ).
4. Release the rings and remove the rubber band ( 4 ). ( Fig.4-19 )
5. Disconnect the negative ( - ) terminal lead ( 5 ) from the battery ( 3 ) first, then disconnect the positive ( + ) terminal lead ( 6 ).
6. Remove the battery.
  - \* Install in the reverse order of removal.
  - \* Check all bolts and other fasteners are secure.
  - \* After installing the battery, check to see if the battery cables are routed correctly.

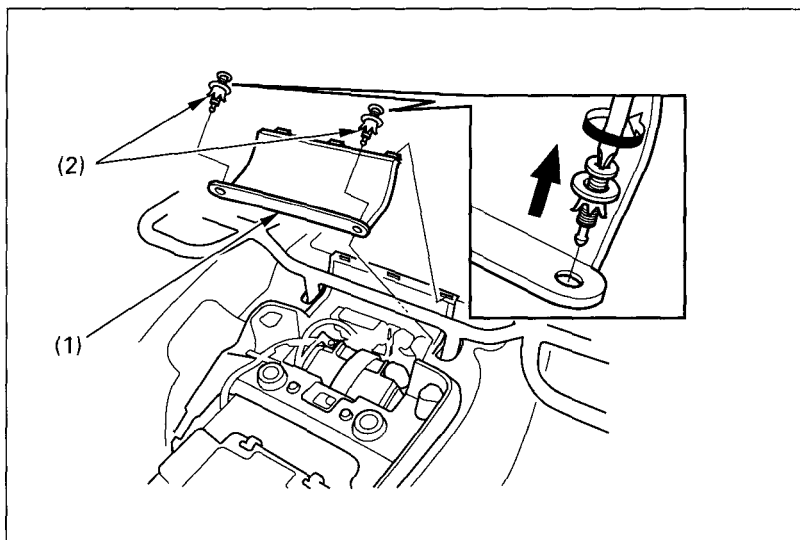


Fig.4-18

(1) Rear fender lid  
(2) Clips



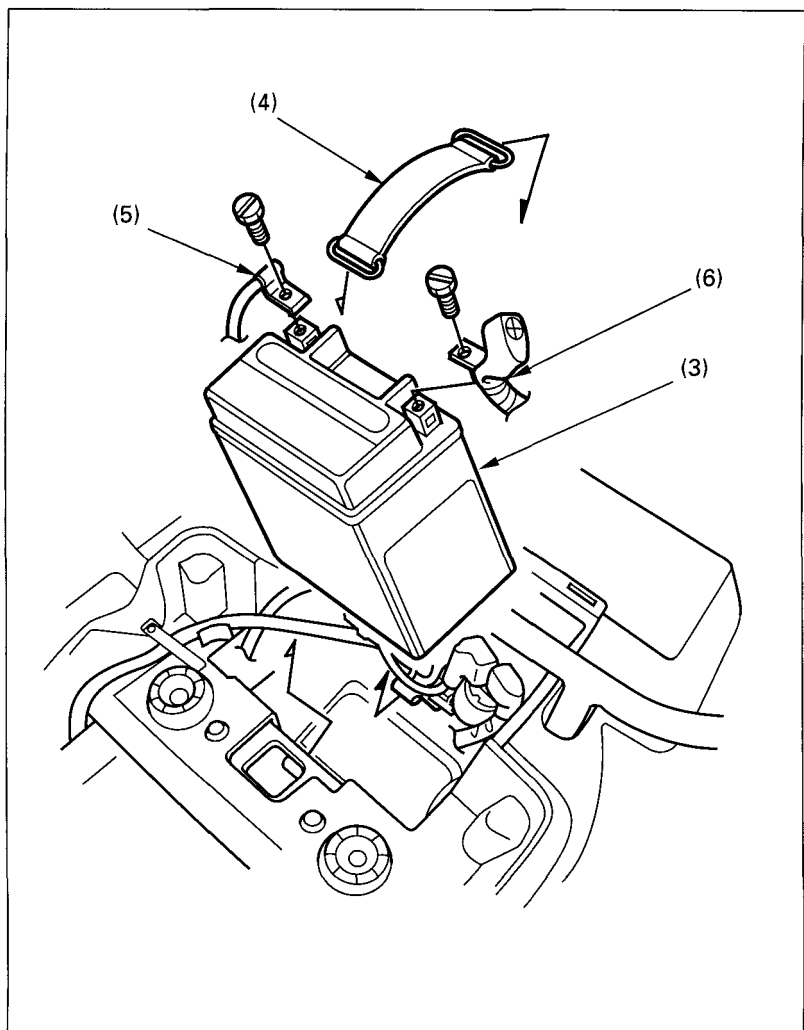


Fig. 4-19

(3) Battery  
(4) Rubber band

(5) Negative (-)  
terminal lead  
(6) Positive (+)  
terminal lead

## FUSE

As illustrated in Fig.4-20 , the fuse box (1) is located in the battery compartment. The main fuse, main fuse (electric shift motor), sub fuses and spare fuses are located in the fuse box.

The specified main fuse is:

30 A , 30 A (Electric shift motor)

The specified sub fuses are:

15 A  $\times$  2, 10 A  $\times$  2

If a fuse fails frequently, it usually indicates a short circuit or an over-load in the electrical system. See your authorized Honda dealer for repair.

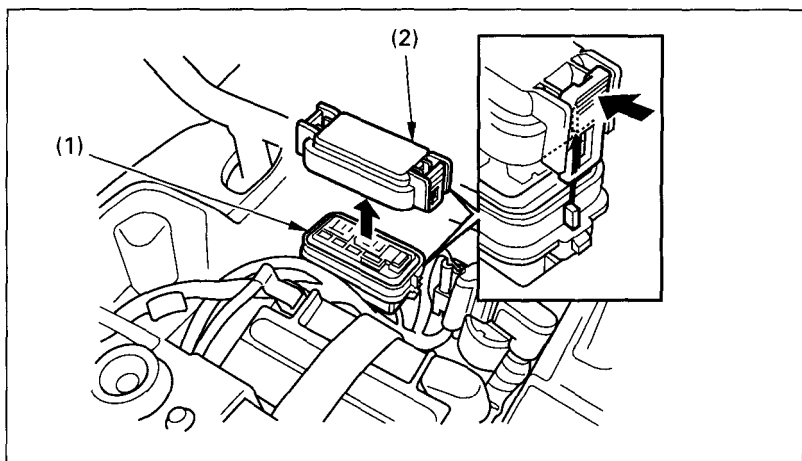


Fig. 4-20

(1) Fuse box  
(2) Fuse box cover

To replace the main fuse:

1. Make sure the ignition switch is OFF (  $\bigcirc$  ).

### CAUTION:

**Turn the ignition switch OFF (  $\bigcirc$  ) before checking or replacing the fuse to prevent accidental short-circuiting which could damage the electrical system.**

2. Remove the seat (page 144).
3. Remove the rear fender lid (page 123 ).
4. Remove the fuse box cover (page 125 ).
5. Pull the old fuse out of the clips.
6. Push a new fuse into the clips and install the fuse box cover.
7. Install the rear fender lid.
8. Install the seat.

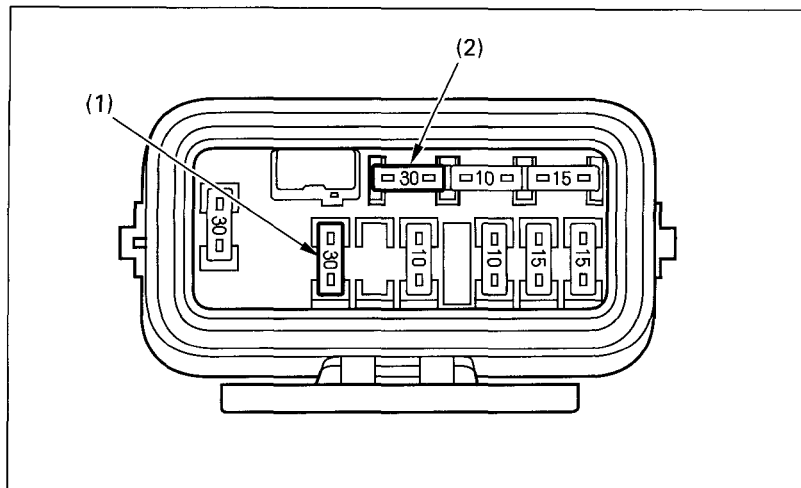


Fig. 4-21

(1) Main fuse  
(2) Spare fuse

To replace the main fuse (Electric shift motor):

1. Make sure the ignition switch is OFF ( ○ ).

**CAUTION:**

**Turn the ignition switch OFF ( ○ ) before checking or replacing the fuse to prevent accidental short-circuiting which could damage the electrical system.**

2. Remove the seat (page 144).
3. Remove the rear fender lid (page 123).
4. Remove the fuse box cover (page 125).
5. Pull the old fuse out of the clips.
6. Push a new fuse into the clips and install the fuse box cover.
7. Install the rear fender lid.
8. Install the seat.

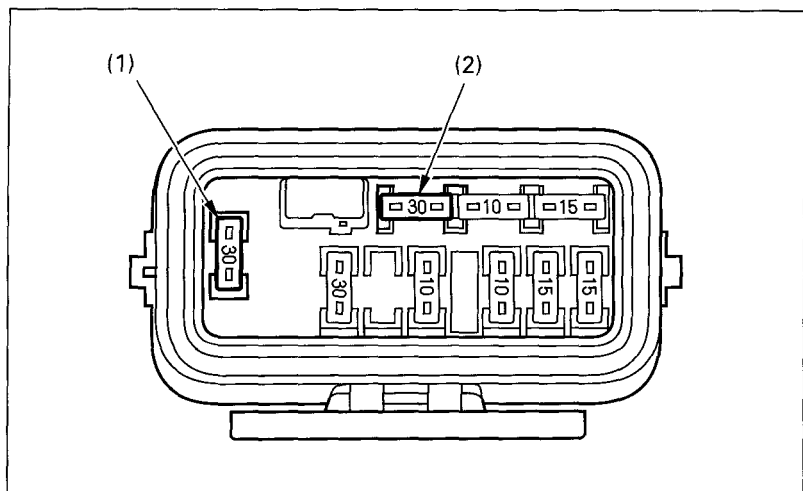


Fig. 4-22

(1) Main fuse (Electric shift motor)  
(2) Spare fuse

To replace the sub fuses:

1. Make sure the ignition switch is OFF ( ○ ).

**CAUTION:**

**Turn the ignition switch OFF ( ○ ) before checking or replacing the fuse to prevent accidental short-circuiting which could damage the electrical system.**

2. Remove the seat (page 144).
3. Remove the rear fender lid (page 123 ).
4. Remove the fuse box cover (page 125 ).
5. Pull the old fuse out of the clips.
6. Push a new fuse into the clips and install the fuse box cover.
7. Install the rear fender lid.
8. Install the seat.

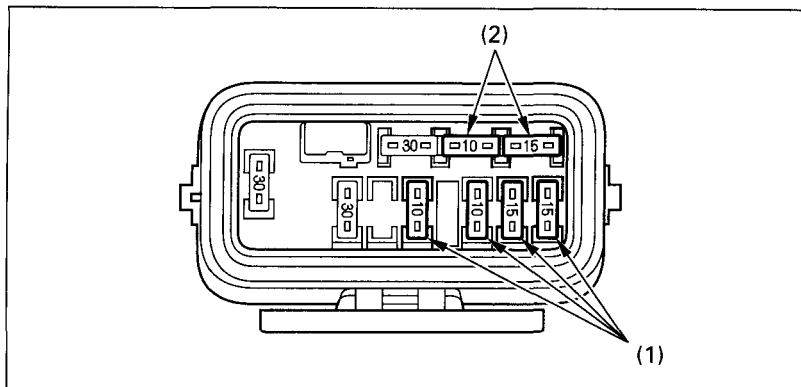


Fig. 4-23 (1) Sub fuses

(2) Spare fuses

## **⚠ WARNING**

### **POTENTIAL HAZARD**

**Improperly replacing a fuse.**

### **WHAT CAN HAPPEN**

**Serious damage to the electrical system, which could cause a fire or a loss of lights or engine power, which could lead to an accident.**

### **HOW TO AVOID THE HAZARD**

**Never use a fuse with a different rating from that specified in this Owner's Manual.**

**Do not pry the clips open to get a fuse out, as a loose fuse could cause damage to the electrical system or start a fire.**

## BRAKES

### FRONT BRAKES

This FOURTRAX has hydraulic front drum brakes on both front wheels. Each day before riding you should check the brake lever free play and inspect the system for fluid leaks. The brake fluid level should be checked frequently, and the brake shoe linings should be inspected periodically.

To check lever free play and shoe lining clearance:

1. Measure the distance the brake lever (Fig. 4-24) moves before the brakes start to take hold. Free play, measured at the tip of the front brake lever (1) should be:  
1 – 1 3/16 in (25 – 30 mm)

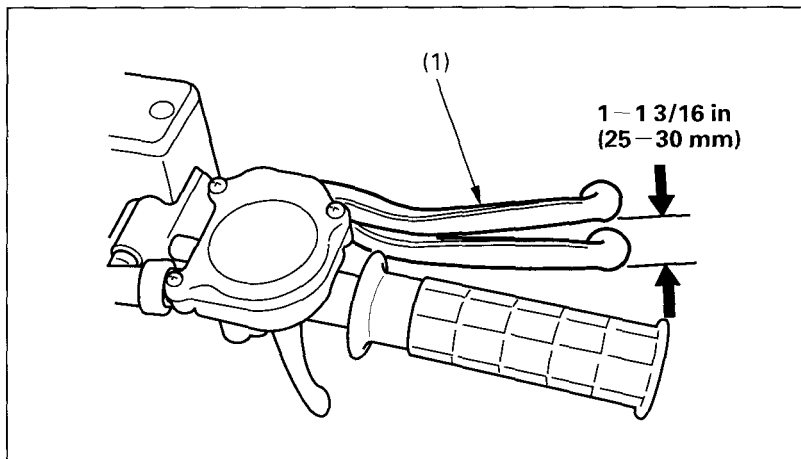


Fig. 4-24

(1) Front brake lever

2. Remove the inspection hole plug (Fig. 4-25) and measure the lining thickness (2) on both front wheels.

Lining Thickness:

Standard: 0.16 in (4.0 mm)

Service Limit: 0.04 in (1.0 mm)

If either lining is worn beyond the limit, both brake shoes must be replaced by an authorized Honda dealer.

3. If the brake lever free play and the brake shoe lining thicknesses are within the recommended limits, reinstall the inspection hole plugs, seating them into the inspection holes as shown in Fig. 4-25.
4. If the brake lever free play is excessive but the linings are not worn beyond the service limit, adjust the brake lining clearance.

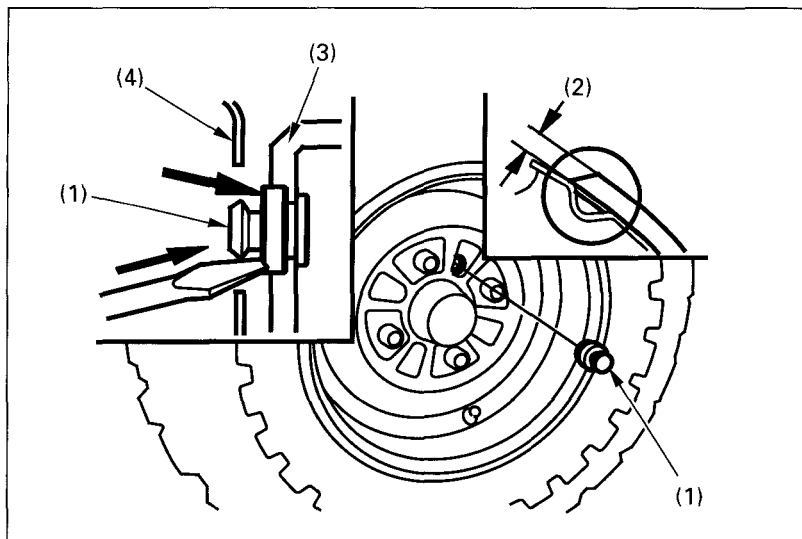


Fig. 4-25 (1) Inspection hole plug (2) Lining thickness (3) Front brake drum (4) Front wheel rim

While reading this manual, remember:

**▲WARNING**

Indicates a strong possibility that serious injury or death may result if instructions are not followed.

To adjust the brake lining clearance:

1. Squeeze the brake lever firmly two or three times then release it.
2. Raise the front and rear wheels off the ground by placing a support block under the vehicle.
3. Beginning with either the left or right front wheel, remove the inspection hole plug (Fig. 4-25) and line up the hole with one of the brake adjusters (Fig. 4-26).
4. Using a screwdriver, turn the brake shoe adjuster (1) in the direction of the arrow until the front brake locks.

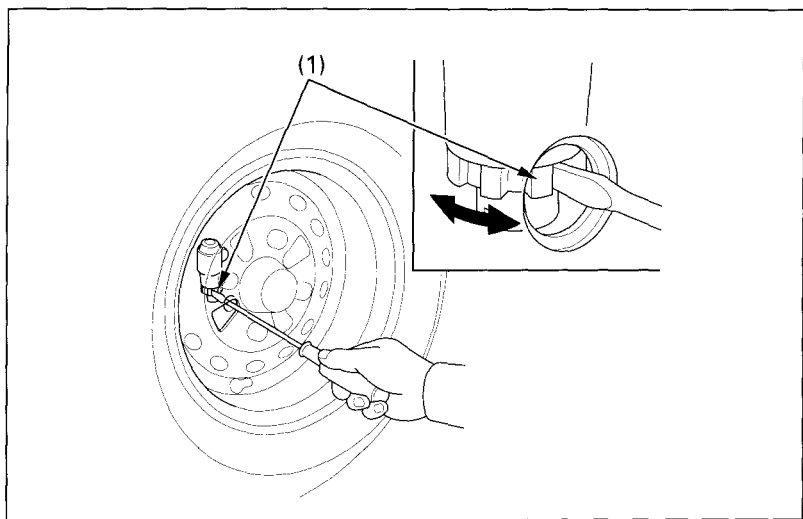


Fig. 4-26

(1) Brake adjusters

5. Back the adjuster off three clicks, then squeeze the brake lever several times. Spin the wheel manually to make sure the brake does not drag.
6. Line up the inspection hole with the second adjuster and repeat steps 3 through 5.
7. Reinstall the inspection hole plug, seating it into the inspection hole as shown in Fig. 4-25.
8. Follow steps 3 through 7 to adjust the other front brake.
9. Recheck the brake lever free play. If free play is still excessive after adjusting the brake lining clearance, there is probably air in the brake system and it must be bled out. See your authorized Honda dealer for this service.



To check the brake fluid level:

Brake fluid must be added to the reservoir (Fig. 4-27) whenever the fluid level approaches the lower level mark (1). Use only DOT 3 or 4 brake fluid and have it added by an authorized Honda dealer.

**NOTE:**

If the fluid level approaches the lower level mark (1), the brake system should be inspected by your authorized Honda dealer. A low fluid level may indicate fluid leakage. Brake failure may occur if this condition exists and is not corrected.

**CAUTION:**

- \* To prevent damage to the brake system, use only fluid from a sealed container. Never allow contaminants (dirt, water, etc.) to enter the brake fluid reservoir.**
- \* Brake fluid can damage paint and plastic, so handle the fluid with care. When adding brake fluid, be sure the reservoir is horizontal before removing the cover to prevent accidental spilling.**

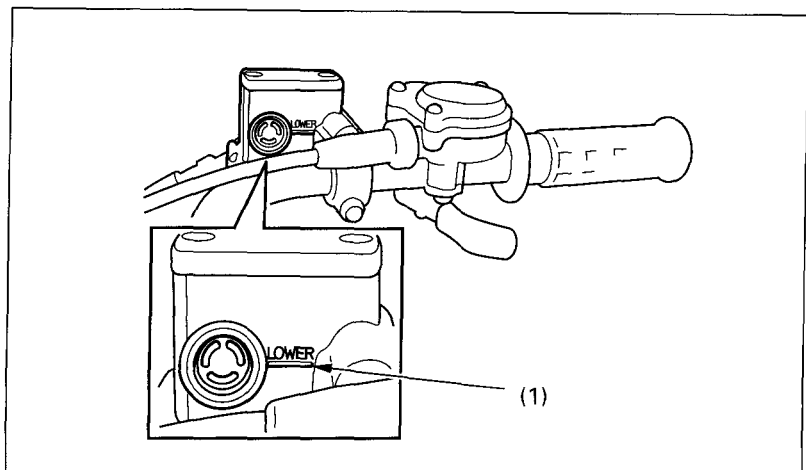


Fig. 4-27

(1) Lower level mark

## **⚠ WARNING**

### **POTENTIAL HAZARD**

**Brake fluid contacting the skin or eyes.**

### **WHAT CAN HAPPEN**

**May cause irritation.**

### **HOW TO AVOID THE HAZARD**

**Avoid contacting brake fluid with the skin or eyes. In case of contact, flush thoroughly with water and call a doctor if your eyes were exposed.**

#### **Other Checks:**

1. Make sure there are no fluid leaks.
2. Check the condition of brake hoses and fittings. If the hoses are worn or cracked, have them replaced by an authorized Honda dealer.

## REAR BRAKE

This FOURTRAX has a single mechanical drum brake on the rear axle housing. Each day before riding you should check the operation of both the rear brake pedal and the rear brake lever. You should also periodically check the brake shoes for wear.

### To check and adjust brake pedal free play:

Measure the distance the rear brake pedal moves before the brake starts to take hold. Free play, measured at the end of the pedal (Fig. 4-28), should be:

9/16 – 13/16 in (15 – 20 mm)

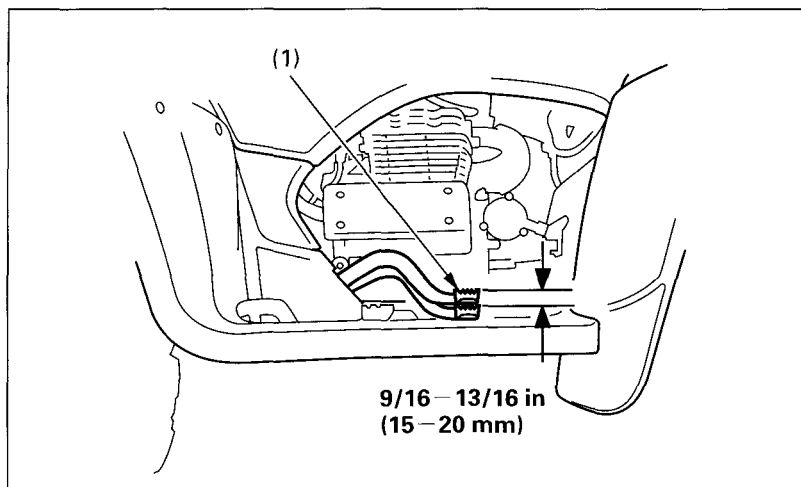


Fig. 4-28

(1) Rear brake pedal

To adjust the free play, turn the brake pedal adjusting nut ( 1 ), (Fig. 4-29 ), located on the brake operating rod at the rear of the frame. Make sure the cut-out on the adjusting nut is properly seated on the brake arm pin (3).

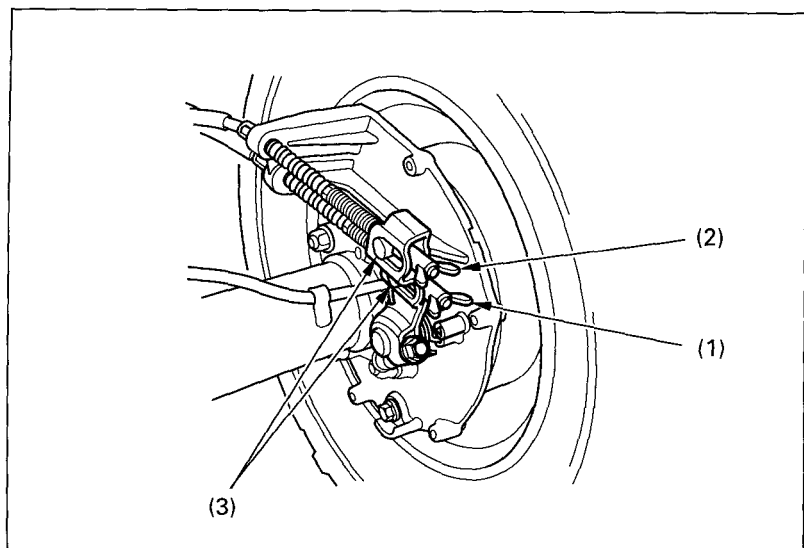


Fig. 4-29      (1) Brake pedal adjusting nut  
                    (2) Brake lever adjusting nut  
                    (3) Brake arm pin

To check and adjust brake lever free play:

Measure the distance the rear brake lever moves before the brake starts to take hold. Free play, measured at the tip of the brake lever (Fig. 4-30 ), should be:

9/16 – 13/16 in (15 – 20 mm)

To adjust the free play, turn the brake lever adjusting nut (2 ), (Fig. 4-29 ), located on the brake operating rod at the rear of the frame. Make sure the cut-out on the adjusting nut is properly seated on the brake arm pin (3).

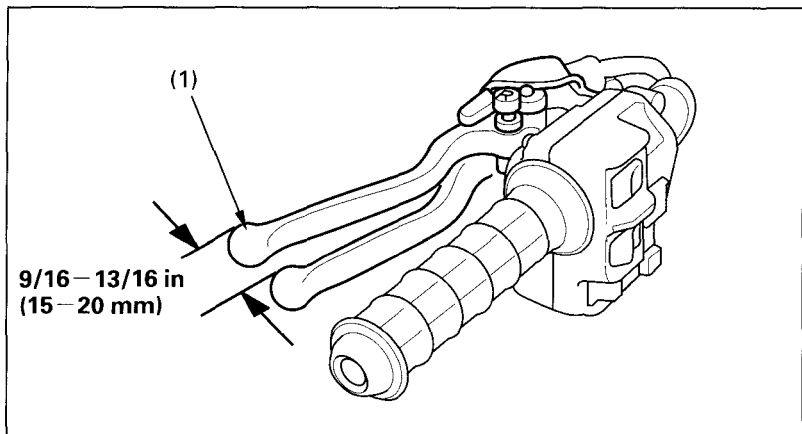


Fig. 4-30

(1) Brake lever

To check rear brake shoe wear:

When the brake is applied, an arrow (1) attached to the brake arm (2) moves toward a reference mark (3) on the brake panel (see Fig. 4-31).

If the arrow aligns with the reference mark on full application of the brake, the brake shoes must be replaced. See your authorized Honda dealer for this service.

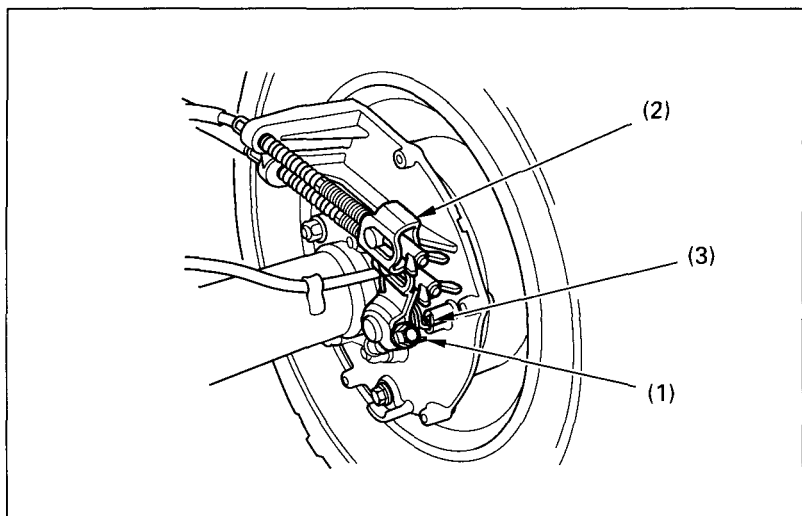


Fig. 4-31

- (1) Arrow
- (2) Brake arm
- (3) Reference mark

Other Checks:

Check the condition of the brake cables. If there are kinks or signs of wear that could cause sticking or failure, have the cables replaced by an authorized Honda dealer. Make sure the brake arm, spring, and fasteners are in good condition.

## DRAINING WATER FROM BRAKES

Make sure the engine is off and the parking brake is set. Then remove the inspection hole plug (Fig. 4-32) from the front brakes, and the drain bolt (Fig. 4-33) from the bottom of the rear brake cover. If any water drains, the brake seals must be replaced by your Honda dealer as soon as possible.

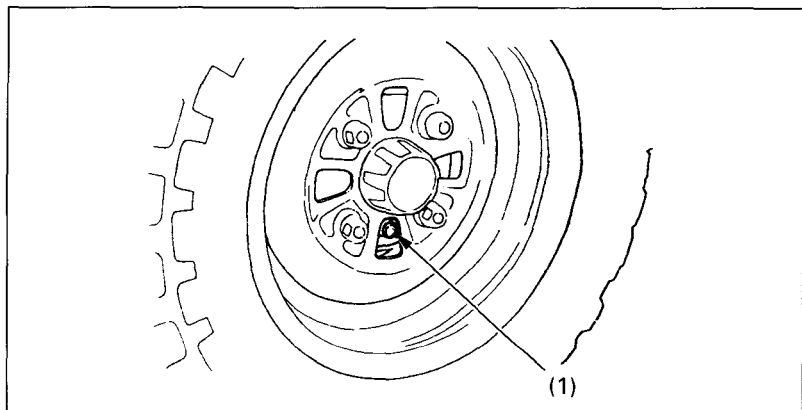


Fig. 4-32

(1) Front brake inspection hole plug

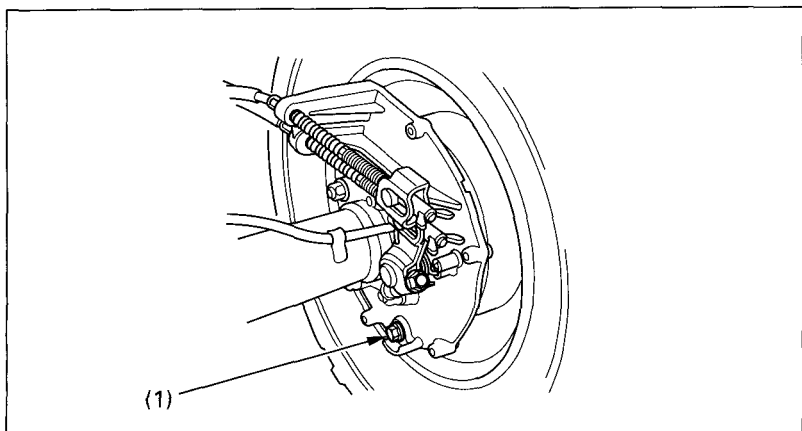


Fig. 4-33

(1) Rear brake drain bolt

## **WHEELS AND TIRES**

### **WHEEL REMOVAL**

If you need to remove a wheel from your FOURTRAX, follow these procedures:

1. Raise the front (or rear) wheels off the ground and place a support securely under the vehicle.
2. Loosen the wheel nuts (Fig. 4-34) with a 17 mm socket wrench.
3. Remove the wheel.

When reinstalling a wheel, tighten the wheel nuts in a crisscross (rather than a circular) pattern.

Wheel nuts torque:

47 lbf·ft (64 N·m , 6.5 kgf·m)

Be sure the tapered side of the wheel nuts face the wheel rim (2).

### **⚠ WARNING**

#### **POTENTIAL HAZARD**

**Installing wheels improperly.**

#### **WHAT CAN HAPPEN**

**A wheel may come loose, possibly leading to an accident.**

#### **HOW TO AVOID THE HAZARD**

**Carefully follow the instructions in this Owner's Manual when installing wheels.**



**NOTE:**

If a torque wrench was not used for installation, see your authorized Honda dealer before operating the vehicle to verify proper assembly.

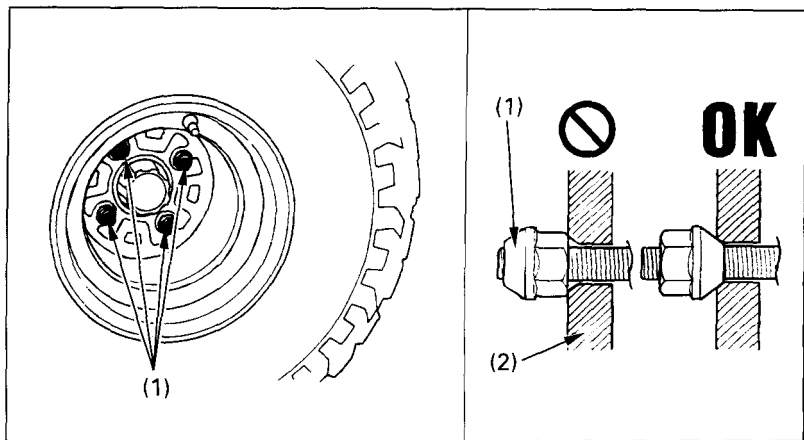


Fig. 4-34 (1) Wheel nuts

(2) Wheel rim

**TIRES**

This FOURTRAX is equipped with low pressure tubeless tires. Although the tires are designed specifically for off-road use, they are not immune to punctures. Always select your riding area with care.

**Tire Pressure**

Check the tire pressure frequently with the tire pressure gauge supplied with the vehicle. For normal use, the tires should be inflated to the pressure recommended in Fig. 4-35.

**NOTE:**

- \* Tire pressure should be checked before you ride, when the tires are "cold." Be sure to check tire pressure at the riding site, since changes in altitude can affect air pressure.
- \* A manually operated tire pump should be used rather than the high pressure systems found in service stations. This will minimize the possibility of tire damage from overinflation. If you use a high pressure system at a service station, add air in small amounts and check the pressure increase frequently to prevent possible tire damage from overinflation.

		FRONT	REAR
TIRE SIZE		AT24 × 8-12 ★★	AT25 × 11-10 ★★
TIRE BRAND		DUNLOP TRACKER CL	DUNLOP TRACKER CL
NO CARGO	RECOMMENDED PRESSURE	2.8 psi (20 kPa , 0.20 kgf/cm <sup>2</sup> )	2.8 psi (20 kPa , 0.20 kgf/cm <sup>2</sup> )
	MAXIMUM PRESSURE	3.2 psi (23 kPa , 0.23 kgf/cm <sup>2</sup> )	3.2 psi (23 kPa , 0.23 kgf/cm <sup>2</sup> )
	MINIMUM PRESSURE	2.4 psi (17 kPa , 0.17 kgf/cm <sup>2</sup> )	2.4 psi (17 kPa , 0.17 kgf/cm <sup>2</sup> )
WITH CARGO	RECOMMENDED PRESSURE	2.8 psi (20 kPa , 0.20 kgf/cm <sup>2</sup> )	2.8 psi (20 kPa , 0.20 kgf/cm <sup>2</sup> )

Fig. 4-35

Tire specifications

## **⚠ WARNING**

### **POTENTIAL HAZARD**

**Operating this ATV with improper tires, or with uneven tire pressure.**

### **WHAT CAN HAPPEN**

**Use of improper tires on this ATV, or operation of this ATV with improper or uneven tire pressure, may cause loss of control, increasing your risk of an accident.**

### **HOW TO AVOID THE HAZARD**

**Always use the size and type tires specified in this Owner's Manual for this vehicle.**

**Always maintain proper tire pressure as described in this Owner's Manual.**

### Tire Tread Condition

To check the condition of a tire tread, measure the groove depth (1) (Fig. 4-36) in the center of the tire, or check the wear indicator (2). The minimum tread depth is 3/16 in (4 mm). When the tread depth is less than recommended, the tire should be replaced.

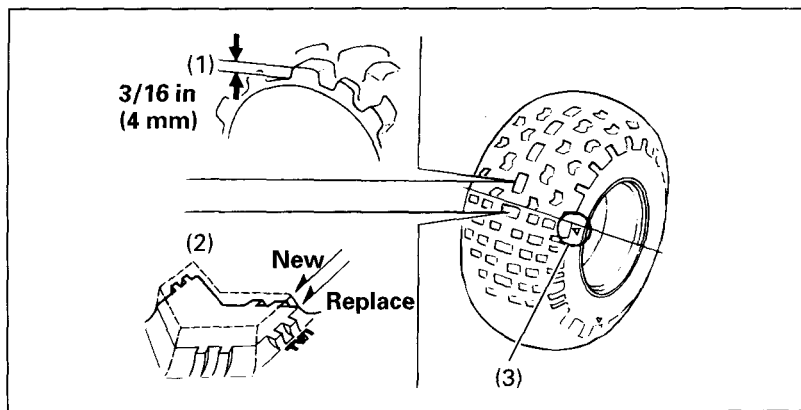


Fig. 4-36

(1) Groove depth  
(2) Wear indicator

(3) Wear indicator  
location mark

### **Repairing a Flat Tire**

If you have a flat tire, use the plug method to make a temporary repair. (The plug method is applied from the outside of the tire and is the same as that for conventional tubeless tires.)

A plug-type repair kit, available at most auto parts stores or service stations, provides a plug, an installation tool, tire cement, and an instruction sheet. Follow the instructions provided with the repair kit to make a temporary repair.

As soon as possible, have the tire permanently repaired by an authorized Honda dealer. Any tire that cannot be repaired should be replaced.

Whenever the FOURTRAX is to be operated far from service facilities or available transportation, we recommend that you carry a tire pump and a repair kit with the vehicle.

## SEAT REMOVAL

To remove the seat (Fig. 4-37), pull up the seat lock lever (2) at the right side of the seat and lift it up.

To reinstall the seat, insert the prongs (3) into the hooks (4) on the frame, and press the studs (5) into the grommets on the battery holder. Press the seat down until it locks. Check that the seat is locked securely by lifting up on the rear of the seat after reinstalling it.

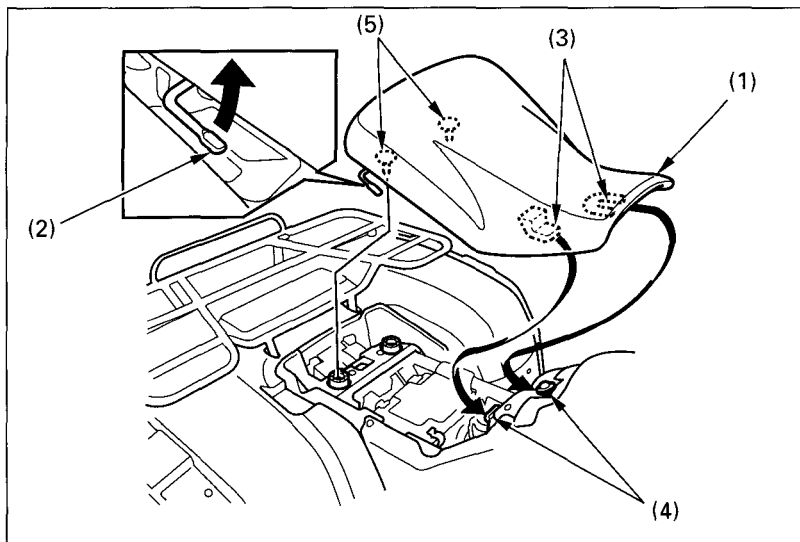


Fig. 4-37

(1) Seat  
(2) Seat lock lever

(3) Prongs  
(4) Hooks  
(5) Studs

## ENGINE GUARD AND SKID PLATES

The engine guard (Fig. 4-38) protects the engine crankcase.

The skid plates (2) protect the frame and rear final gear case. Check the guard and plates for cracks, damage or looseness at intervals shown in the Maintenance Schedule (page 96–97).

Replace the guard and plates with new ones if they are cracked or damaged. If the guard and plate bolts are loose, tighten them securely.

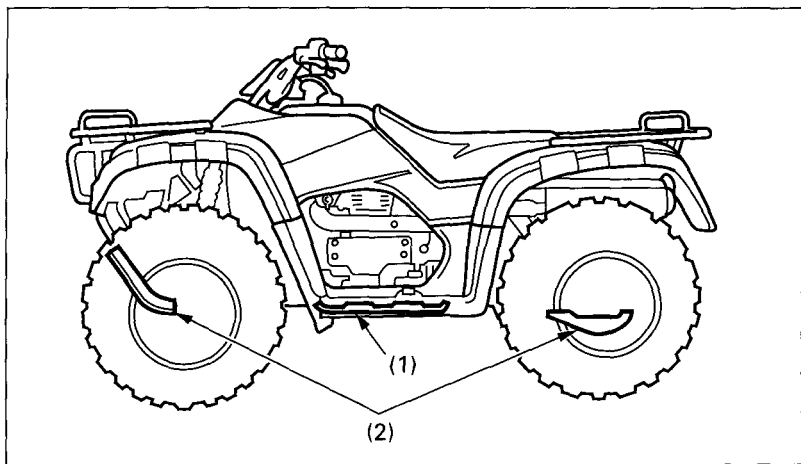


Fig. 4-38 (1) Engine guard

(2) Skid plates

## SPARK ARRESTER

The exhaust system must be periodically purged of accumulated carbon.

Regular servicing prevents carbon buildup (which can diminish engine performance) and also complies with USDA regulations for regular maintenance to assure proper function. The spark arrester prevents random sparks from the combustion process in your engine from reaching the environment.

The use of safety glasses is recommended for this procedure.

Because of the possible fire hazard, check that there are no combustible materials in the area before purging the spark arrester.

To purge the system:

1. Select a well-ventilated area free of combustible materials and make sure the exhaust pipe is cool.
2. Remove the bolt. (Fig. 4-39)
3. Start the engine and rev it up approximately twenty times while momentarily creating exhaust system back pressure by blocking the end of the muffler with a shop towel.
4. Stop the engine and allow the exhaust pipe to cool.
5. Reinstall the bolt securely.

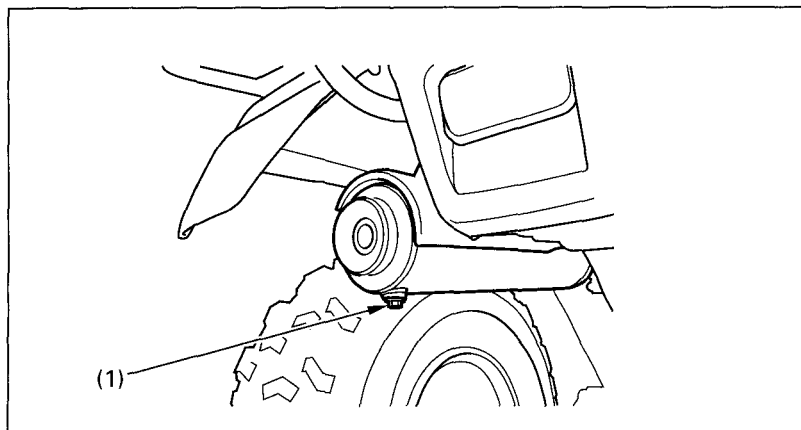


Fig. 4-39

(1) Bolt

## **⚠ WARNING**

### **POTENTIAL HAZARD**

**Improperly purging the exhaust system.**

### **WHAT CAN HAPPEN**

**Could injure the eyes.**

**Could cause burns.**

**Could cause carbon monoxide poisoning, possibly leading to death.**

**Could start a fire.**

### **HOW TO AVOID THE HAZARD**

**When purging the exhaust system:**

**Always wear eye protection, and make sure no one stands behind the vehicle.**

**Always let the exhaust system cool before performing this operation.**

**Never run the engine in an enclosed area.**

**Make sure there are no combustible materials in the area.**



## TRANSPORTING YOUR FOURTRAX

When you transport your FOURTRAX, we recommend that you carry the vehicle in its normal operating position (on all four wheels) and follow these procedures:

1. Set the parking brake and place the transmission in gear.
2. Turn the fuel valve OFF.
3. Secure the vehicle with "tie downs" in the areas shown (Fig. 4-40). Suitable "tie downs" are available from your Honda dealer. Ordinary rope is not recommended because it can stretch under load.

### CAUTION:

Using tie downs in any other areas can damage your FOURTRAX.

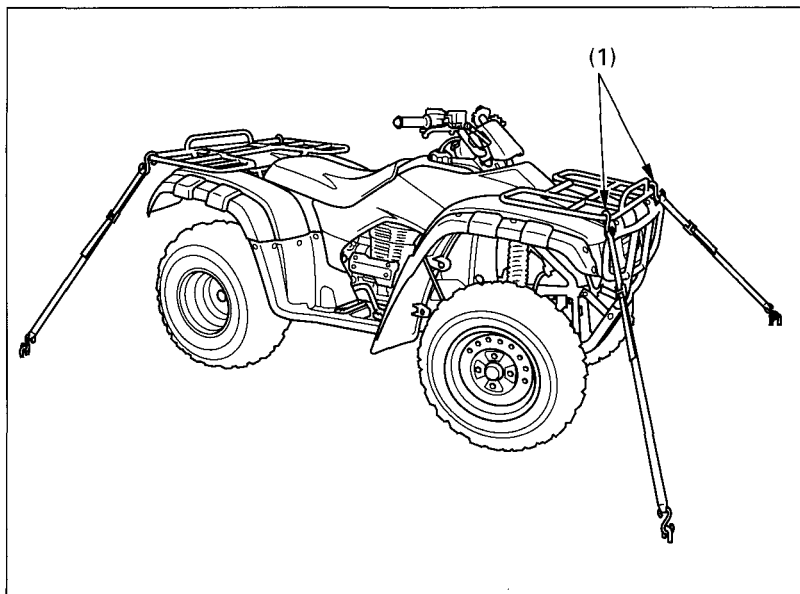


Fig. 4-40 Points to secure FOURTRAX with tie downs

(1) Front cargo rack

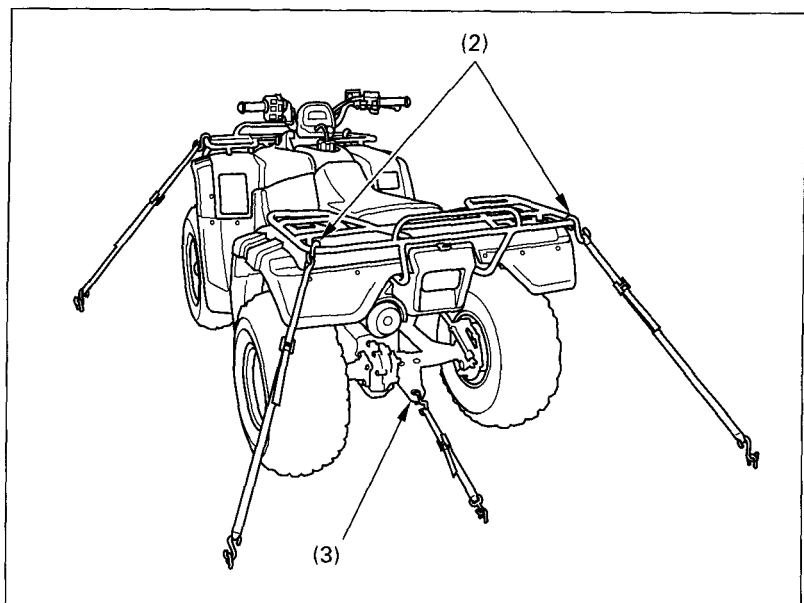


Fig. 4-41      Points to secure  
FOURTRAX with  
tie downs

(2) Rear cargo rack  
(3) Trailer hitch

If it is necessary to incline your FOURTRAX upright on the rear end:

1. Follow steps 1 and 2 on the previous page.
2. Place a suitable container under the carburetor drain tube.
3. Turn the drain screw counterclockwise and drain the fuel from the carburetor.
4. After draining the carburetor, turn the drain screw clockwise until it is tight.
5. Pour the drained fuel into the fuel tank.
6. Tilt the vehicle and secure properly.

Do not tow your FOURTRAX behind a car or other vehicle.

## **⚠ WARNING**

### **POTENTIAL HAZARD**

Inclining this ATV without first draining fuel from the carburetor.

### **WHAT CAN HAPPEN**

The fuel could explode or ignite.

### **HOW TO AVOID THE HAZARD**

*Always drain fuel from the carburetor before inclining this ATV.*

Always handle fuel in a well-ventilated area with the engine off. Do not smoke or allow flames or sparks in the area where fuel is handled.

If any fuel is spilled, make sure the area is dry before starting the engine.

## **⚠ WARNING**

### **POTENTIAL HAZARD**

Prolonged contact of fuel with the skin.  
Breathing fuel vapor.

### **WHAT CAN HAPPEN**

The fuel can cause skin irritation.  
Fuel vapor could cause lung damage.

### **HOW TO AVOID THE HAZARD**

Avoid repeated or prolonged contact of fuel with the skin or breathing of fuel vapor.

**KEEP OUT OF REACH OF CHILDREN.**

## **CLEANING YOUR FOURTRAX**

### **CLEANING**

Clean your FOURTRAX regularly to protect the surface finishes and inspect for damage, wear, and oil or brake fluid leakage.

Avoid cleaning products that are not specifically designed for ATV or automobile surfaces.

They may contain harsh detergents or chemical solvents that could damage the metal, paint, and plastic on your FOURTRAX.

If your FOURTRAX is still warm from recent operation, give the engine and exhaust system time to cool off.

Park in a shady area. Washing your FOURTRAX in bright sunlight may cause the finish to fade because water droplets intensify the sun's brightness. Spotting is also more likely because surface water can dry before you have time to wipe it off.

We recommend avoiding the use of high pressure water spray (typical in coin-operated car washes.)

### **CAUTION:**

**High pressure water (or air) can damage certain parts of the FOURTRAX.**

1. Rinse the FOURTRAX thoroughly with cool water to remove loose dirt.
2. Clean the FOURTRAX with a sponge or soft cloth using cool water. Avoid directing water to muffler outlets and electrical parts.
3. After cleaning, rinse the FOURTRAX thoroughly with plenty of clean water. Detergent residue can corrode alloy parts.

**NOTE:**

The inside of the headlight lens may be clouded immediately after washing the ATV. Moisture condensation inside the headlight lens will disappear gradually by lighting the headlight in high beam. Run the engine while keeping the headlight on.

4. Dry the FOURTRAX.
5. Start the engine and let it run for several minutes.
6. Test the brakes before riding the FOURTRAX. Several applications may be necessary to restore normal braking performance.

Braking efficiency may be temporarily impaired immediately after washing the FOURTRAX.

Anticipate longer stopping distances to avoid a possible accident.

## **STORING YOUR FOURTRAX**

### **STORAGE**

Before storing your FOURTRAX for an extended time, be sure you thoroughly check the vehicle for needed repairs and have them corrected. Otherwise, the repairs may be forgotten by the time you remove the vehicle from storage.

In addition, extended storage requires that you take the following steps to reduce the effects of deterioration from non-use of the vehicle:

1. Change the engine oil and oil filter.
2. Drain the fuel tank and carburetor. Be sure to drain the fuel in a well-ventilated area, not in a garage.

## **⚠ WARNING**

### **POTENTIAL HAZARD**

Refueling this ATV or handling fuel improperly.

### **WHAT CAN HAPPEN**

The fuel could explode or ignite.

### **HOW TO AVOID THE HAZARD**

Always refuel this ATV and handle fuel in a well-ventilated area with the engine off. Do not smoke or allow flames or sparks in the area where fuel is handled.

Do not overfill the tank. Be careful not to spill fuel when refueling. After refueling, make sure the fuel fill cap is closed properly and securely.

If any fuel is spilled, make sure the area is dry before starting the engine.

## **⚠ WARNING**

### **POTENTIAL HAZARD**

Prolonged contact of fuel with the skin.  
Breathing fuel vapor.

 
### **WHAT CAN HAPPEN**

The fuel can cause skin irritation.  
Fuel vapor could cause lung damage.

### **HOW TO AVOID THE HAZARD**

Avoid repeated or prolonged contact of fuel with the skin or breathing of fuel vapor.

**KEEP OUT OF REACH OF CHILDREN.**

3. Remove the spark plug and pour one tablespoon (10 cc) of clean engine oil into the cylinder.  
Operate the starter for a few seconds to distribute the oil, then reinstall the spark plug. (Make sure the engine stop switch is OFF (  ) before pressing the starter button.)
4. Remove the battery (page 123) and store it in an area protected from freezing temperatures and direct sunlight and out of the reach of children, slow charge the battery once a month.

## **WARNING**

### **POTENTIAL HAZARD**

**Allowing open flames or sparks near the battery.**

### **WHAT CAN HAPPEN**

**Gases may explode and possibly cause injury.**

### **HOW TO AVOID THE HAZARD**

**Do not allow open flames or sparks near the battery.**

5. Wash and dry the FOURTRAX, and wax all painted surfaces.
6. Inflate the tires to their recommended pressures.
7. Place the FOURTRAX on blocks to raise all four tires off the ground.



## SPECIFICATIONS

<b>DIMENSIONS</b>	
Overall length	78.1 in (1,983 mm)
Overall width	45.0 in (1,143 mm)
Overall height	44.1 in (1,119 mm)
Wheelbase	49.3 in (1,253 mm)
<b>WEIGHT</b>	
Dry Weight	511 lbs (232 kg)
<b>CAPACITIES</b>	
Engine oil	2.7 US qt (2.6 ℓ , 2.3 Imp qt)
Fuel tank	3.43 US gal (13.0 ℓ , 2.86 Imp gal)
Fuel reserve	0.85 US gal (3.2 ℓ , 0.70 Imp gal)
<b>ENGINE</b>	
Bore and stroke	3.09 × 2.68 in (78.5 × 68.0 mm)
Compression ratio	8.8 : 1
Displacement	20.08 cu-in (329.1 cm <sup>3</sup> )
Engine idle speed	1,400 ± 100 rpm
Spark plug, standard	DPR7EA-9 (NGK) X22EPR-U9 (DENSO)
Spark plug gap	0.03—0.04 in (0.8—0.9 mm)
Valve clearance	0.006 in (0.15 mm)
<b>CHASSIS AND SUSPENSION</b>	
Caster angle	7.0°
Trail length	1.2 in (31 mm)
Tire size, Front	AT24 × 8-12 ★★
Rear	AT25 × 11-10 ★★

**POWER TRANSMISSION**

Primary reduction	2.188
Final reduction	3.692
Gear ratio 1st	3.455
2nd	1.933
3rd	1.333
4th	0.966
5th	0.720
Reverse gear ratio	4.600

**ELECTRICAL**

Battery	12 V—12 Ah
Generator	0.245 kW/5,000 rpm


**LIGHTS**

Head light (Low/High)	12 V 30/30 W × 2
Taillight	12 V 5 W
Neutral indicator	LED
Reverse indicator	LED
Oil high temperature indicator	LED

**FUSE**

Sub fuse	15 A × 2, 10 A × 2
Main fuse	30 A
Main fuse (Electric shift motor)	30 A

## WIRING DIAGRAM

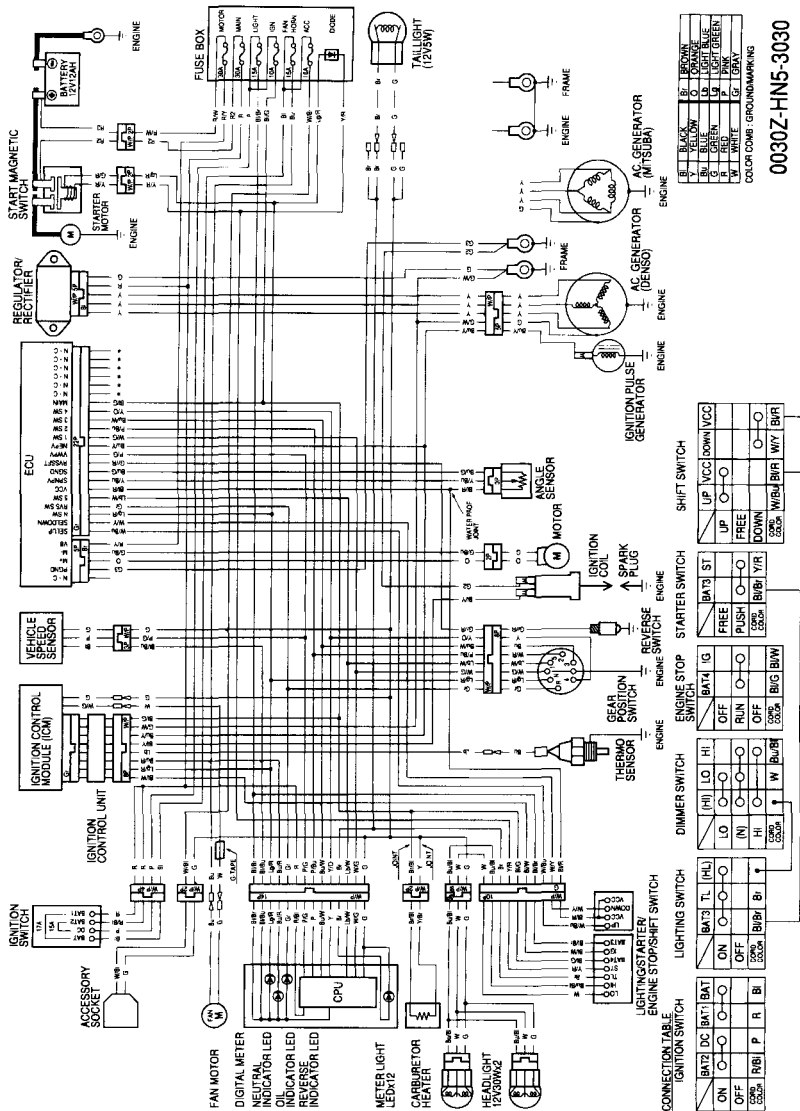

0030Z-HN5-3030

## CONSUMER INFORMATION

### EMISSION CONTROL SYSTEMS

#### Source of Emissions

The combustion process produces carbon monoxide and hydrocarbons. Control of hydrocarbons is very important because under certain conditions, they react to form photochemical smog when subjected to sunlight. Carbon monoxide does not react in the same way, but it is toxic.

Honda Motor Co., Ltd. utilizes lean carburetor settings and other systems to reduce carbon monoxide and hydrocarbons.

#### Exhaust Emission Control System

The exhaust emission control system is composed of lean carburetor settings, and no adjustment should be made except idle speed adjustment with the throttle stop screw.

The exhaust emission control system is separate from the crankcase emission control system.

#### Crankcase Emission Control System

The engine is equipped with a closed crankcase system to prevent discharging crankcase emissions into the atmosphere.

Blow-by gas is returned to the combustion chamber through the air cleaner and the carburetor.

## **NOISE EMISSION CONTROL SYSTEM**

**TAMPERING WITH THE NOISE CONTROL SYSTEM IS PROHIBITED:**

U.S. federal law prohibits, or Canadian provincial laws may prohibit the following acts or the causing thereof: (1) The removal or rendering inoperative by any person, other than for purposes of maintenance, repair, or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use; or (2) the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

**AMONG THOSE ACTS PRESUMED TO CONSTITUTE TAMPERING ARE THE ACTS LISTED BELOW:**

1. Removal of, or puncturing the muffler, baffles, header pipes or any other component which conducts exhaust gases.
2. Removal of, or puncturing any part of the intake system.
3. Lack of proper maintenance.
4. Replacing any moving parts of the vehicle, or parts of the exhaust or intake system, with parts other than those specified by the manufacturer.

### **Problems that May Affect ATV Emissions**

If you are aware of any of the following symptoms, have the vehicle inspected and repaired by your authorized Honda Motorcycle Dealer:

1. Hard starting or stalling after starting
2. Rough idle
3. Misfiring or backfiring during acceleration
4. After-burning (backfiring)
5. Poor performance (driveability) and poor fuel economy

## WARRANTY SERVICE

Your satisfaction and goodwill are important to your Honda dealer. All Honda warranty details are explained in the Distributor's Limited Warranty.

Normally, any problems with the product will be handled by your dealer's service department. Sometimes, however, despite the best intentions of all concerned, misunderstandings can occur. If your problem has not been handled to your satisfaction, we suggest you take the following action:

- \* Discuss your problem with a member of the dealership management. Often, complaints can be quickly resolved at that level. If the problem has already been reviewed with the Service Manager, contact the owner of the dealership or the General Manager.
- \* If your problem still has not been resolved to your satisfaction, contact the Motorcycle Customer Service Department of American Honda Motor Co., Inc. The address is P. O. Box 2220, Torrance, CA 90509—2220. Telephone: (310) 532—9811. [Canadian Vehicles: Refer to the warranty booklet that was supplied with your vehicle.] We will need the following information in order to assist you:
  1. Your name, address, and telephone number.
  2. The product model, year, and frame/VIN serial number.
  3. Date of purchase.
  4. Dealer's name and address.
  5. The nature of your problem.

After reviewing all the facts, we will advise you of what action can be taken. Please bear in mind that your problem will likely be resolved at the dealership level, using the dealer's facilities, equipment and personnel. So it is very important that your initial contact be with the dealer.

We appreciate your purchase of a Honda FOURTRAX. We want to assist you in every way possible to assure your complete satisfaction.

## SERIAL NUMBERS AND COLOR LABEL

The frame, engine and key numbers (Fig. 5-1) will be needed when you order replacement parts. The color is also helpful. Record the numbers and color here for your reference.

The frame serial number (2) is stamped on the front of the frame. The engine serial number (3) is stamped on the upper side of the rear crankcase.

The color label (4) is attached to the frame below the seat (page 144 ).

KEY NO. \_\_\_\_\_

FRAME NO. \_\_\_\_\_

ENGINE NO. \_\_\_\_\_

COLOR \_\_\_\_\_

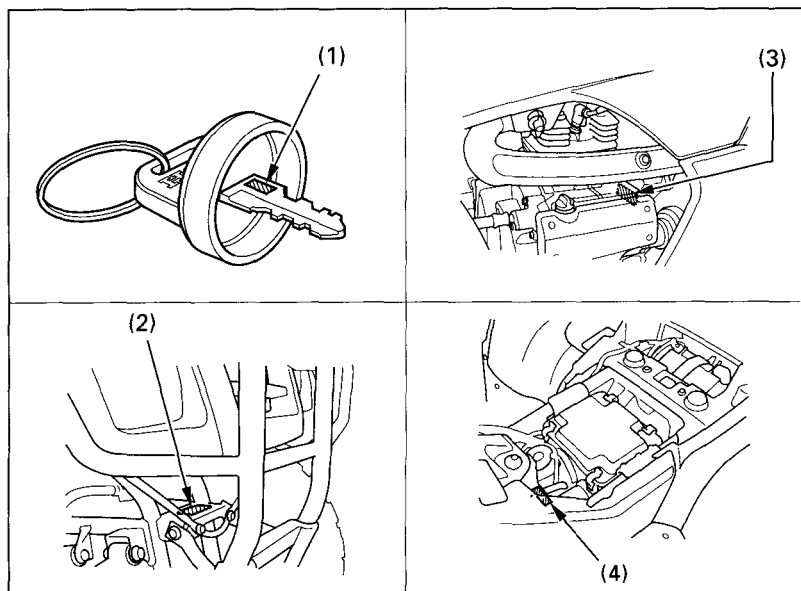


Fig. 5-1

(1) Key number  
(2) Frame number

(3) Engine number  
(4) Color label

# INDEX

## A

Accessories .....	52
Accessory socket.....	42
Age recommendation .....	44
Air cleaner	
Filter .....	105
Housing drain tube.....	108
Air pressure gauge.....	41
Apparel, recommended.....	54
Authorized manuals.....	169

## B

Battery .....	122
Brakes	
Brake cables.....	137
Brake fluid.....	132
Front brakes	
Adjustment.....	129
Brake lever .....	33
Brake lever <i>free play</i> .....	129
Brake shoes.....	129
Parking brake .....	33
Rear brake	
Brake lever .....	33
Brake lever <i>free play</i> .....	136
Brake pedal .....	33
Brake pedal <i>free play</i> .....	134
Brake shoes.....	137
Break-in procedures.....	ii

## C

Carburetor	
High altitude adjustment.....	111
Idle speed adjustment.....	110
Cargo carrying	
Loading and operational guidelines.....	50
Weight limit .....	49
Choke	
Cable .....	109
Knob .....	16, 109



Cleaning.....	151
Climbing hills .....	81
Clutch adjustment.....	120
Consumer information .....	159
Crossing slopes.....	90
Customer service .....	161

## D

Differential oil.....	118
Digital clock .....	30
Dimmer switch .....	21
Dipstick .....	37, 112
Display (see Multi-function display) .....	24

## E

Emergency gear selection & operation .....	73
Emission control system .....	159
Engine	
Idle speed adjustment.....	110
Break-in procedures .....	ii
Flooded engine.....	70
Starting the engine.....	67
Engine guard and skid plates .....	145
Engine oil	
Changing oil.....	114
Checking oil level and adding oil.....	112
Dipstick.....	37, 112
Oil filler cap.....	114
Oil filter .....	114
Oil high temperature indicator .....	22
Recommendations .....	113
Engine stop switch .....	15
Exhaust system	
Cleaning .....	47
Purging.....	146

## F

Final gear case oil .....	117
Flag pole bracket .....	39
Flooded engine .....	70
Fuel	
Fuel fill cap .....	35, 100
Fuel gauge .....	34
Fuel recommendations .....	102
Fuel tank capacity .....	100
Fuel valve .....	36
High altitude fuel mixture adjustment .....	111
Refueling .....	100
Reserve fuel supply .....	36
Fuses	
Location .....	125
Replacement, main fuse .....	125
Replacement, main fuse (Electric shift motor) .....	126
Replacement, sub fuses .....	127

## G

Gear change tool .....	74, 99
Gasoline (see Fuel)	
Gearshift switch	
Downshift switch .....	31, 71
Upshift switch .....	31, 71
Gearshifting .....	31, 71
Gearcase oil	
Rear final gear case oil .....	117
Gear position indicator .....	27

## H

Headlight switches .....	21
Helmet holder .....	38
High altitude fuel mixture adjustment .....	111
Hills	
Riding across slopes .....	90
Riding down hills .....	88
Riding up hills .....	81
Stopping on hills .....	83
Turning on slopes .....	91
Hourmeter .....	29

<b>I</b>	
Idle speed adjustment .....	110
Ignition switch .....	14
Indicator	
Gear position indicator .....	27
Neutral indicator.....	22
Oil high temperature indicator .....	22
Reverse indicator.....	22
Inspection, pre-ride .....	46
<b>L</b>	
Loading	
Loading guidelines and procedures.....	50
Weight limits.....	49
Lubrication	
(see Engine oil, Gear case oil and differential oil)	
<b>M</b>	
Maintenance	
Precautions .....	98
Schedule .....	96
Modifications .....	54
Multi-function display .....	24
<b>N</b>	
Neutral indicator .....	22
Noise emission control system.....	160
<b>O</b>	
Obstacles, riding over.....	92
Odometer .....	28
Oil (see Engine oil, Gear case oil and differential oil)	
Oil filler cap .....	114
Oil filter, changing.....	114
Oil high temperature indicator .....	22
Owner's manual compartment.....	41

## P

Parking.....	94
Parts location.....	10
Parking brake.....	33
Passenger carrying .....	56
Pavement, no riding on .....	58
Pinging.....	102
Pre-ride inspection.....	46

## R

Rear final gear case oil .....	117
Recoil starter .....	19
Reverse	
Assist cable .....	121
Assist lever .....	121
Gear, shifting into .....	31, 71
Indicator .....	22
Riding in reverse .....	76
Selector knob.....	32
Rider training course .....	1, 46

## S

Safety messages, special .....	1
Seat removal and installation .....	144
Serial numbers and color label .....	162
Shifting gears .....	31, 71
Switch	
Downshift switch .....	31, 71
Upshift switch .....	31, 71
Skid plates .....	145
Skidding.....	80
Socket, accessory .....	42
Spark arrester.....	146
Spark knock .....	102
Spark plug .....	120
Specifications.....	156
Stalling on a hill .....	83
Starter button .....	17
Starting primer knob.....	18
Storage compartment.....	41
Storing procedures .....	153

## **T**

Throttle	
Cable .....	104
Lever.....	20, 104
Tires	
Inflation and air pressure .....	140
Repairing.....	143
Specifications .....	141
Tread condition .....	142
Tool kit .....	99
Trailer hitch .....	40
Trailer towing	
Operational guidelines.....	50
Weight limits.....	49
Transporting procedures.....	148
Tripmeter .....	28
Turning	
On level ground.....	78
On slopes .....	91

## **V**

Valve clearance .....	121
-----------------------	-----

## **W**

Warning labels .....	7
Warranty service.....	161
Water	
Draining from brakes .....	138
Riding through.....	93
Weight limits .....	49
Wheel removal.....	139
Wiring diagram .....	158

## AUTHORIZED MANUALS

The Service Manual (Publication Item No. 61HN401 ) used by your authorized Honda dealer is available from Helm, Inc. (USA only, Canada: See your Honda dealer to order authorized manuals.)

Also available, but not necessary, to service your model is the Honda Common Service Manual (Publication No. 61CM001), which explains theory of operation and basic service information for various systems common to all Honda motorcycles, motor scooters and ATVs.

These Honda manuals are written for the professional technician, but most mechanically-capable owners should find them easy to use if they have the proper tools and observe proper safety standards. Special Honda tools are necessary for some procedures.

Publication Item No.	Description	Price Each*
61HN401	2001 TRX350TM/TE/FM/FE Service Manual	\$48.00
61CM001	Common Service Manual	\$48.00
31HN4810	2001 TRX350TE Owner's Manual	\$16.00
* Prices are subject to change without notice and without incurring obligation.		

**Order On-line: [www.helminc.com](http://www.helminc.com)**

**Order Toll Free: 1-888-CYCLE93 (1-888-292-5393)**

(NOTE: For Credit Card Orders Only)

Monday – Friday 8:00 AM – 6:00 PM EST

**OR**

By completing this form you can order the materials desired. You can pay by check or money order, or charge to your credit card. Mail to Helm, Inc. at the address shown on the back of this order form (USA only).

Canada: See your Honda dealer to order authorized manuals.

Publication Item No.	Item Description	Qty.	Price Each*	Total Price
*Prices are subject to change without notice and without incurring obligation. Orders are mailed within 10 days. Please allow adequate time for delivery.		<b>Sub Total</b>		
		<b>Mich. Purchasers Add 6 % Sales Tax</b>		
		<b>Handling Charge</b>		<b>\$4.00</b>
		<b>Grand Total</b>		

## SHIP TO

NOTE: Dealers and Companies please provide dealer or company name, and also the name of the person to whose attention the shipment should be sent.

Customer Name \_\_\_\_\_

Attention \_\_\_\_\_

Street Address \_\_\_\_\_ Apartment Number \_\_\_\_\_

City \_\_\_\_\_ State \_\_\_\_\_ Zip Code \_\_\_\_\_

Daytime Telephone Number (       ) \_\_\_\_\_

## PAYMENT

☐ Check or money order enclosed payable to Helm Inc. U. S. funds only. Do not send cash.

☐ Check here if your billing address is different from the shipping address shown above.

☐ VISA    ☐ MasterCard

Account Number

--	--	--	--	--

--	--	--	--	--

--	--	--	--	--

--	--	--	--	--

Expiration: Mo. Yr.

—	—
---	---

Customer Signature \_\_\_\_\_ Date \_\_\_\_\_

These Publications cannot be returned for credit without receiving advance authorization within 14 days of delivery. On returns, a restocking fee may be applied against the original order.

**HELM** P. O. BOX 07280, DETROIT, MICHIGAN 48207

# HONDA MOTOR CO., LTD.

## WARNING

Improper use of ATVs can result in SEVERE INJURY or DEATH



ALWAYS USE AN APPROVED HELMET AND PROTECTIVE GEAR   NEVER USE ON PUBLIC ROADS   NEVER CARRY PASSENGERS   NEVER USE WITH DRUGS OR ALCOHOL

NEVER operate :

- without proper training or instruction.
- at speeds too fast for your skills or the conditions.
- on public roads - a collision can occur with another vehicle.
- with a passenger - passengers affect balance and steering and increase risk of losing control.

ALWAYS :

- use proper riding techniques to avoid vehicle overturns on hills and rough terrain and in turns.
- avoid paved surfaces - pavement may seriously affect handling and control.

READ THE OWNER'S MANUAL.

FOLLOW ALL INSTRUCTIONS AND WARNINGS.